

PR3175WX

GENERIC Home Wall AC Adapter/Charger Instruction Manual for Cobra MicroTalk PR3175WX

INTRODUCTION

This manual provides instructions for the safe and effective use of your GENERIC Home Wall AC Adapter/Charger, designed as a compatible replacement for Cobra MicroTalk PR3175WX two-way radios. This adapter allows for direct charging of your radio without the need for a separate desktop charger. It is compatible with Ni-Mh, Ni-Cd, and Li-Ion batteries.

SETUP

Before first use, ensure the adapter is compatible with your device. This adapter is specifically designed for Cobra MicroTalk PR3175WX radios.

1. Locate the charging port on your Cobra MicroTalk PR3175WX radio.
2. Plug the small end of the AC adapter's cable into the charging port on the side of your radio.
3. Insert the AC adapter's prongs into a standard wall electrical outlet (100-240V AC, 50-60Hz).
4. Verify that the radio indicates it is charging (e.g., a charging indicator light or display icon).



Image showing the GENERIC Home Wall AC Adapter with its cable and plug. The adapter connects directly to the radio for charging.

OPERATING INSTRUCTIONS

Once connected, the adapter will begin charging your Cobra MicroTalk PR3175WX radio. The adapter is auto-switching, allowing it to be used with various international voltage standards (100-240V AC).


Charging time will vary depending on the battery level and capacity of your radio's battery. Refer to your Cobra MicroTalk PR3175WX radio's manual for specific charging indicators and expected charging durations.

CARE AND MAINTENANCE

- Keep the adapter clean and dry. Avoid exposure to moisture or extreme temperatures.
- Do not attempt to open or repair the adapter. Refer to qualified service personnel if damaged.
- Always unplug the adapter from the wall outlet when not in use or before cleaning.
- Store the adapter in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio not charging	Adapter not properly connected to radio or wall outlet.	Ensure both ends of the adapter are securely plugged in.
Radio not charging	Wall outlet is not active.	Test the wall outlet with another device or try a different outlet.
Radio not charging	Radio battery issue or radio malfunction.	Consult your Cobra MicroTalk PR3175WX radio's manual or contact Cobra support.
Adapter feels warm during charging	Normal operation.	A slight warmth is normal. If it becomes excessively hot, discontinue use and unplug.

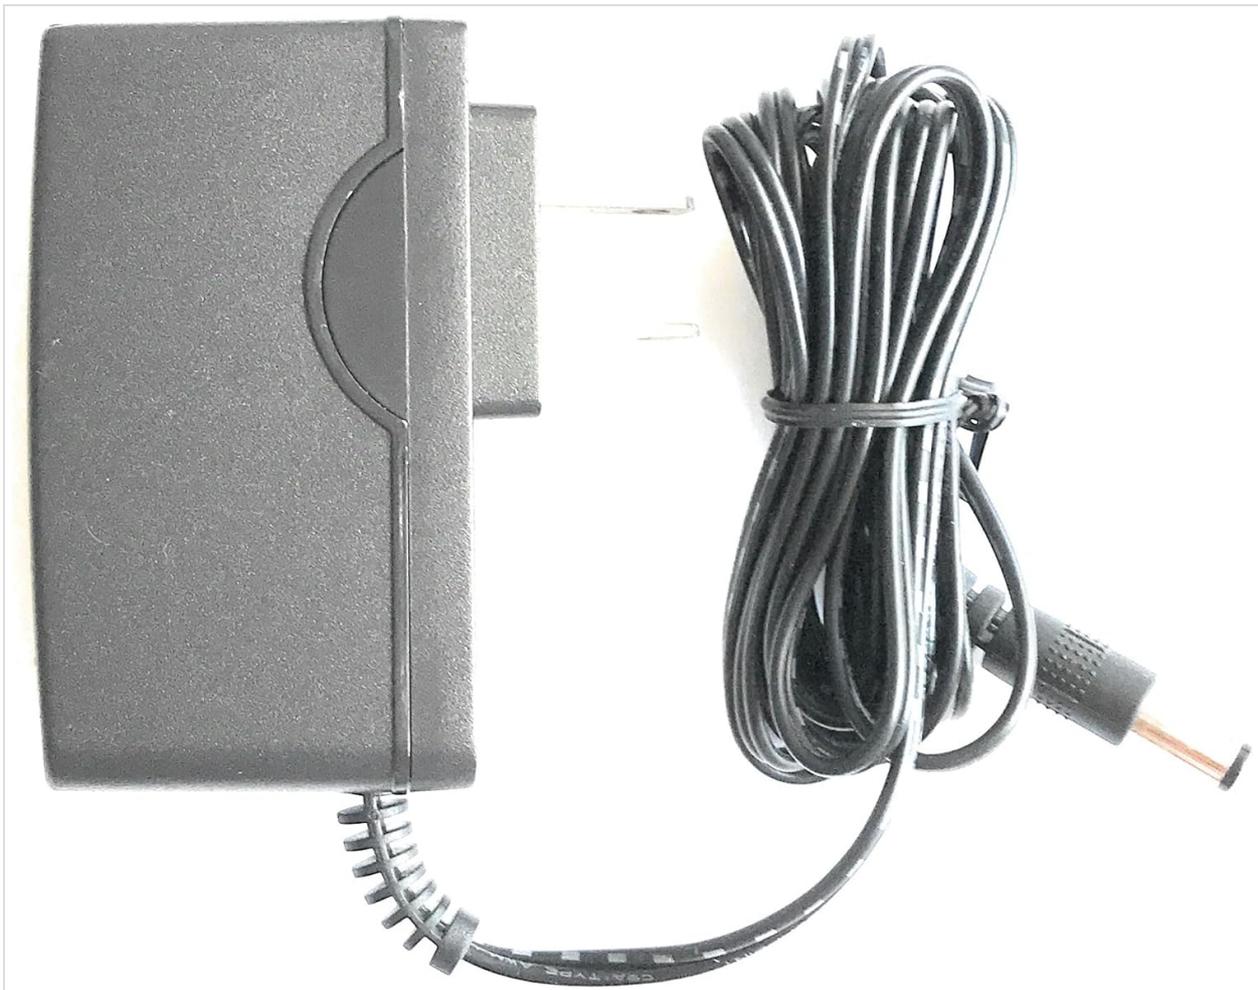

Side view of the GENERIC Home Wall AC Adapter, showing the plug and the coiled cable. Ensure the adapter is free from damage before use.

PRODUCT SPECIFICATIONS

- **Input Voltage:** 100-240V AC, 50-60Hz
- **Output Voltage:** 12V DC
- **Compatibility:** Cobra MicroTalk PR3175WX (and compatible with Ni-Mh, Ni-Cd, Li-Ion Batteries)
- **Power Source:** AC
- **Main Power Connector Type:** 2 Pin
- **Manufacturer:** DCPOWER
- **Model (for compatible device):** PR3175WX
- **UPC:** 633585720997

WARRANTY AND SUPPORT

This product is an aftermarket, custom-made item. Returns are accepted within 30 days of receipt. If you encounter any issues with the item, please contact the seller directly for assistance before leaving feedback.

For specific support regarding your Cobra MicroTalk PR3175WX radio, please refer to the radio's original manufacturer documentation or support channels.