

[Manuals.plus](#) /

› [Craig Frames](#) /

› [Craig Frames 26690 20x30 Inch Picture Frame Instruction Manual](#)

## Craig Frames 266902030L-4

# Craig Frames 26690 20x30 Inch Picture Frame Instruction Manual

Model: 266902030L-4

## INTRODUCTION

This manual provides detailed instructions for the assembly, use, and care of your Craig Frames 26690 20x30 inch picture frames. Please read all instructions carefully before beginning to ensure proper installation and longevity of your frames.

## PACKAGE CONTENTS

Verify that all components are present in your package:

- 4 x Craig Frames 26690 20x30 Inch Picture Frames
- 4 x Acrylic Facings (with protective film on both sides)
- 4 x Cardboard Backings
- 4 x Hanging Kits (assembly required)



Image: A set of four Craig Frames 26690 20x30 inch picture frames, showcasing their restoration white finish and rectangular shape.

## SETUP AND ASSEMBLY

1. **Prepare the Frame:** Carefully remove the frame from its packaging. Place it face down on a clean, soft surface to prevent scratches.
2. **Remove Backing:** Bend the metal tabs on the back of the frame upwards to release the cardboard backing.
3. **Remove Protective Film:** The acrylic facing has a protective film on both sides. Gently peel off this film from both surfaces of the acrylic. This ensures maximum clarity for your displayed item.
4. **Insert Artwork:** Place your 20x30 inch photo, print, or poster into the frame. Ensure it is centered and lies flat against the acrylic. Note that the frame lip will reduce the viewable area by approximately 0.25 inches on each side.
5. **Replace Backing:** Place the cardboard backing over your artwork. Press it firmly into place and bend the metal tabs back down to secure it.
6. **Attach Hanging Hardware:** The included hanging kit requires assembly. Attach the D-rings or sawtooth hanger (depending on kit contents) to the back of the frame using the provided screws. Ensure they are securely fastened.

for safe wall hanging. The frame is designed for wall hanging only and does not include a stand.



Image: The reverse side of the frame, illustrating the metal tabs that secure the backing and artwork.



Image: The back of the frame with the hanging hardware attached, ready for wall mounting.

## OPERATING INSTRUCTIONS

---

Once your artwork is securely framed and the hanging hardware is attached, your Craig Frames picture frame is ready for display. These frames are designed for wall mounting only.

- **Orientation:** The hanging hardware allows for both portrait (vertical) and landscape (horizontal) orientation. Choose the orientation that best suits your artwork and display space.
- **Placement:** Select a suitable location on your wall for hanging. Ensure the wall surface can support the weight of the frame and its contents.



**\*PICTURE NOT INCLUDED**

Image: A framed image, demonstrating the visual appeal of the frame when displaying artwork.

## **MAINTENANCE**

Proper care will help maintain the appearance and longevity of your picture frames.

- **Cleaning the Frame:** Wipe the frame moulding with a soft, dry cloth. Avoid abrasive cleaners or harsh chemicals, as these may damage the textured wrap finish.
- **Cleaning the Acrylic:** For the acrylic facing, use a soft, lint-free cloth and a mild acrylic cleaner or a solution of mild soap and water. Gently wipe the surface. Avoid using glass cleaners containing ammonia, as they can damage acrylic.
- **Dusting:** Regularly dust the frames with a soft cloth to prevent buildup.

## TROUBLESHOOTING

Problem	Solution
Acrylic appears cloudy or scratched.	Ensure the protective film has been completely removed from both sides of the acrylic facing. If scratches persist after film removal, contact customer support.
Frame does not stand on its own.	These frames are designed exclusively for wall hanging and do not include a built-in easel or stand. Use the provided hanging hardware for wall display.
Artwork does not fit perfectly.	The frame is designed for 20x30 inch prints. The frame lip will cover approximately 0.25 inches of your artwork on each side. Verify your artwork dimensions.

## SPECIFICATIONS

Feature	Detail
Brand	Craig Frames
Model Number	266902030L-4
Color	Restoration White (26690 4-Pack)
Shape	Rectangular
Mounting Type	Wall Mount Only
Frame Material	Wood Composite
Finish Type	Textured Wrap (wood_grain appearance)
Style	Cottage
Theme	Wood
Number of Items	4 frames per pack
Orientation	Horizontal or Vertical
Cover Material	Acrylic
Artwork Size	20 x 30 inches
Frame Moulding Width	1.25 inches
Item Weight (per set)	23 pounds
UPC	765293563815

## WARRANTY AND SUPPORT

---

For any questions, concerns, or support regarding your Craig Frames product, please contact Craig Frames LLC directly. Refer to your purchase documentation or the seller's information for specific warranty details and contact methods.

**Manufacturer:** Craig Frames Inc.

**Seller:** Craig Frames LLC

