Microsoft QC7-00001

Microsoft Type Cover for Surface Pro - Black Instruction Manual

1. Introduction and Overview

The Microsoft Type Cover for Surface Pro is designed to provide a traditional laptop typing experience for your Surface Pro device. It features a redesigned mechanical keyboard with optimal key spacing for efficient typing and an enlarged glass trackpad for precise control and navigation. This accessory transforms your Surface Pro into a highly versatile laptop instantly.



Figure 1: Microsoft Type Cover for Surface Pro (Black)

- Redesigned mechanical keyboard with optimal key spacing for fast and fluid typing.
- · Enlarged glass trackpad for precision control and navigation.
- Sturdy design with enhanced magnetic stability for adjustable angles.
- Protects and shields the screen from bumps and scratches when closed.
- Compatible with Surface Pro 3, Surface Pro 4, and Surface Pro (earlier models).
- · Backlit keys for use in low-light conditions.

2. PACKAGE CONTENTS

Upon opening the package, ensure all items are present and in good condition. The standard package includes:

Microsoft Surface Pro Type Keyboard Cover Case (Black)

3. SETUP

The Type Cover connects to your Surface Pro via a magnetic connection. Follow these steps for initial setup:

- 1. Align the magnetic connector on the Type Cover with the corresponding port on the bottom edge of your Surface Pro.
- 2. Gently push the Type Cover towards the Surface Pro until the magnets engage and it clicks into place.
- 3. The Type Cover is designed to attach securely. Once connected, it will be recognized automatically by your Surface Pro.
- 4. For an elevated typing experience, fold the top edge of the Type Cover upwards to magnetically attach it to the lower bezel of your Surface Pro's screen.

4. OPERATING THE TYPE COVER

Keyboard Functionality:

- Typing: The keys are optimally spaced for comfortable and efficient typing, similar to a traditional laptop keyboard.
- Function Keys (F1-F12): These keys perform various functions. Press the Fn key to toggle between standard function keys and media/shortcut keys.
- **Backlighting:** The keyboard features backlighting for improved visibility in dim environments. The backlighting typically activates when the Surface Pro is turned on or when keys are pressed.

Trackpad Functionality:

- Navigation: Use the enlarged glass trackpad to move the cursor on the screen.
- Clicking: The trackpad supports left and right clicks.
- Gestures: The trackpad supports multi-touch gestures for Windows 10, such as two-finger scrolling, pinch-to-zoom, and three/four-finger gestures for task switching or desktop navigation. Refer to your Surface Pro's operating system settings for detailed gesture configurations.

Protective Cover:

When not in use, fold the Type Cover over the screen of your Surface Pro to protect it from scratches and minor impacts. This action will typically put your Surface Pro into sleep mode.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Type Cover, follow these maintenance guidelines:

- Cleaning: Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the surface of the Type Cover. Avoid harsh chemicals or abrasive materials.
- **Dust and Debris:** Regularly remove dust and debris from between the keys and around the trackpad using compressed air or a soft brush.
- **Storage:** When not attached to your Surface Pro, store the Type Cover in a clean, dry place away from extreme temperatures and direct sunlight.
- **Liquid Exposure:** Avoid exposing the Type Cover to liquids. In case of spills, immediately disconnect it from your Surface Pro and allow it to dry completely before reattaching.

6. TROUBLESHOOTING

If you encounter issues with your Microsoft Type Cover, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Type Cover not responding	Loose connection, software glitch, or dirty connector pins.	 Ensure the Type Cover is securely attached to the Surface Pro. Disconnect and reattach the Type Cover. Clean the magnetic connector pins on both the Type Cover and Surface Pro with a soft, dry cloth. Restart your Surface Pro. Check for Windows updates.
Keys or trackpad not working correctly	Software issue, debris under keys, or hardware malfunction.	 Restart your Surface Pro. Ensure no debris is lodged under the keys. Update Surface drivers via Windows Update. If the issue persists, consider contacting Microsoft Support.
Backlighting not working	Backlight setting, software issue.	 Press the backlight function key (often F1 or F2 with a sun icon) to adjust brightness. Ensure the Surface Pro's battery is not critically low. Restart your Surface Pro.

7. Specifications

Feature	Detail
Brand	Microsoft
Model Number	QC7-00001
Compatibility	Surface Pro 3, Surface Pro 4, Surface Pro (earlier models)
Color	Black
Item Weight	8 ounces
Product Dimensions (LxWxH)	8.68 x 11.73 x 1.15 inches

Feature	Detail
Keyboard Description	Qwerty
Special Feature	Foldable, Trackpad, Backlit
Connectivity Technology	Magnetic (Type Cover from Surface Pro 4/5/6/7/7+)

8. WARRANTY AND SUPPORT

For warranty information and detailed support, please refer to the official Microsoft documentation or visit the Microsoft support website.

A comprehensive User Guide is available in PDF format for additional details:

Download User Guide (PDF)

Legal Disclaimer:

"Sold as is. Excellent condition. In original box."

© 2023 Microsoft Corporation. All rights reserved.

Documents - Microsoft - QC7-00001



[pdf]

skhalid 71kd9lUl2OL images na ssl amazon I |||

Brand: Microsoft Part Number: **QC7-00001** MPN: QC7-00002, QC7-00003, QC7-00005, RH7-00001 Model: 1725 Type: Keyboard Folio Case Color: Black Layout: QWERTY Keys: 78 Compatible Product Line: Surface Pro 3, Surface Pro 4 Condition:

New Product Features: 1 Colours: Black 2 4.54mm ultra-thin form factor... lang:en score:16 filesize: 173.33 K page_count: 1 document date: 2017-10-20