

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Soundbot](#) /

› [Soundbot SB210 HD Stereo Bluetooth Beanie User Manual](#)

Soundbot SB210

Soundbot SB210 HD Stereo Bluetooth Beanie User Manual

INTRODUCTION

Thank you for purchasing the Soundbot SB210 HD Stereo Bluetooth Beanie. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use to ensure optimal performance and longevity of the product.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures or humidity.
- Keep the device away from water and liquids, except when the electronic components are removed for washing.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the provided charging cable or a certified equivalent.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

PACKAGE CONTENTS

- Soundbot SB210 HD Stereo Bluetooth Beanie
- Micro USB Charging Cable
- User Manual

PRODUCT OVERVIEW

The Soundbot SB210 integrates Bluetooth audio technology into a comfortable beanie, allowing for wireless music playback and hands-free calling.



Image: The Soundbot SB210 Beanie featuring its integrated control panel on the side.

Control Panel Functions

- **Play/Pause Button:** Power on/off, play/pause music, answer/end calls.
- **Volume Up (+) Button:** Increase volume (short press), next track (long press).
- **Volume Down (-) Button:** Decrease volume (short press), previous track (long press).
- **Microphone:** For hands-free calling.
- **Micro USB Port:** For charging the internal battery.

SETUP

1. Charging the Beanie

Before initial use, fully charge the beanie. Locate the Micro USB charging port on the control panel. Connect the provided Micro USB cable to the port and the other end to a USB power source (e.g., wall adapter, computer USB port). The LED indicator will show charging status. A full charge typically takes approximately one hour and provides a full day of playback.



Image: The Micro USB charging port integrated into the beanie's control panel.

2. Pairing with a Bluetooth Device

1. Ensure the beanie is charged and turned off.
2. Press and hold the Play/Pause button on the control panel until the LED indicator flashes red and blue alternately. This indicates the beanie is in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings and enable Bluetooth.
4. Search for available devices. You should see "SB210" or "Soundbot Beanie" in the list.
5. Select "SB210" to connect. Once successfully paired, the LED indicator will typically show a solid blue light or flash blue slowly.

3. Wearing the Beanie

Place the beanie on your head, ensuring the integrated speakers are positioned comfortably over your ears. The beanie is designed to stay securely in place during various activities.

Your browser does not support the video tag.

Video: Official product video demonstrating how to wear, remove components for washing, and charge the Soundbot SB210 Bluetooth Beanie.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the Play/Pause button for approximately 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Play/Pause button for approximately 3 seconds until the LED indicator turns off.

2. Music Playback

- **Play/Pause:** Short press the Play/Pause button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

3. Volume Control

- **Increase Volume:** Short press the Volume Up (+) button.
- **Decrease Volume:** Short press the Volume Down (-) button.

4. Hands-Free Calling

The integrated microphone allows for hands-free communication when paired with your smartphone.

- **Answer/End Call:** Short press the Play/Pause button.
- **Reject Call:** Long press the Play/Pause button.
- **Redial Last Number:** Double-press the Play/Pause button.

MAINTENANCE

1. Washing Instructions

The beanie is washable, but the electronic components must be removed first.

1. Locate the zipper on the inside lining of the beanie.
2. Unzip the lining and gently pull out the internal speakers and control module, which are typically held in place by Velcro. Be careful not to pull too hard on the connecting wires.
3. Once the electronic components are removed, the beanie can be machine washed according to the fabric care instructions (100% Acrylic, Machine Wash).
4. Allow the beanie to dry completely before reinserting the electronic components.
5. Carefully reinsert the speakers and control module, ensuring they are properly positioned over the ears, and secure them with the Velcro. Zip up the lining.



Image: The internal speaker component that needs to be removed before washing.

2. Storage

Store the beanie in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

TROUBLESHOOTING

- **Device will not power on:** Ensure the beanie is fully charged. Connect it to a power source using the Micro USB cable.
- **Cannot pair with Bluetooth device:**
 - Ensure the beanie is in pairing mode (LED flashing red and blue).
 - Make sure Bluetooth is enabled on your device and it is within range (up to 33 feet).
 - Try turning off and on both the beanie and your Bluetooth device.
 - Clear previous Bluetooth connections on your device and attempt to pair again.
- **No sound or low volume:**
 - Check the volume levels on both the beanie and your connected device.
 - Ensure the beanie is properly paired and connected.
 - Verify that the speakers are correctly positioned over your ears.
- **Blue LED flashes during use:** This is normal behavior indicating the Bluetooth connection is active.

SPECIFICATIONS

Brand	Soundbot
Model	SB210
Connectivity	Bluetooth 4.1
Wireless Range	Up to 33 feet (10 meters)
Battery	Rechargeable (approx. 1 hour charge time for full day playback)
Material	100% Acrylic
Care Instructions	Machine Wash (after removing electronics)
Weight	9 Grams
Color	Black

WARRANTY AND SUPPORT

Soundbot products are designed and manufactured to the highest quality standards. For specific warranty details and support, please refer to the warranty card included with your purchase or visit the official Soundbot website.

Official Website: www.SoundBot.com