

Manuals.plus /

› OXO /

› OXO Tot Sprout High Chair Instruction Manual

OXO Sprout High Chair

OXO Tot Sprout High Chair Instruction Manual

Model: Sprout High Chair

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use of the OXO Tot Sprout High Chair. Failure to follow these instructions could result in serious injury or death. Keep this manual for future reference.

- Always secure your child in the high chair with the 5-point harness.
- Never leave your child unattended in the high chair.
- Ensure the high chair is placed on a flat, stable surface.
- Do not use the high chair if any parts are damaged or missing.
- Keep children away from the high chair during assembly and adjustment.
- The high chair is designed for children from 6 months up to 5 years, or up to 60 lbs (27 kg).

PRODUCT OVERVIEW

The OXO Tot Sprout High Chair is designed to grow with your child, offering comfort and functionality from infancy through toddlerhood. It features adjustable seat height and depth, a height-adjustable footrest, and a removable tray. The chair can convert from a high chair to a youth chair.



Image: OXO Tot Sprout High Chair in Pink/Birch with tray. This image shows the high chair assembled with the tray attached, highlighting its design and color scheme.

SETUP AND ASSEMBLY

The OXO Tot Sprout High Chair requires minimal assembly. No special tools are needed for adjustments.

1. **Unboxing and Inspection:** Carefully remove all components from the packaging. Verify that all parts are present and undamaged. Refer to the parts list (not provided in this manual, typically found in the included physical guide).
2. **Base Assembly:** Attach the wooden legs to the seat unit. Ensure all connections are secure. The design allows for intuitive assembly.
3. **Initial Adjustments:** Adjust the seat height and depth, and the footrest height to suit your child's current stage. These adjustments are tool-free.
4. **Cushion Installation:** Place the seat and back cushions onto the chair. They are designed to fit securely.
5. **Harness Setup:** Ensure the 5-point harness is correctly threaded through the seat and back cushions.

Your browser does not support the video tag.

Video: OXO Tot Sprout High Chair Overview. This video demonstrates the assembly, adjustments, and features of the OXO Tot Sprout High Chair, including how to place a child in the chair, adjust the footrest, and remove the tray.

OPERATING INSTRUCTIONS

Placing and Securing Your Child

1. Ensure the high chair is stable and on a level surface.
2. Gently place your child into the seat.
3. Fasten the 5-point harness securely around your child. Adjust straps for a snug, comfortable fit.

Tray Usage

1. **Attaching the Tray:** Slide the tray onto the chair arms until it clicks into place. Ensure it is fully engaged.
2. **Removing the Tray:** Press the release button (usually located underneath the tray or on the side) and slide the tray forward to remove.
3. **Tray Depth Adjustment:** The tray can be adjusted in depth to accommodate your child's growth. This is typically done by sliding the tray to one of the available positions.

Adjusting Seat and Footrest

The high chair offers tool-free adjustments for optimal comfort and fit as your child grows.

1. **Seat Height and Depth:** Locate the adjustment mechanisms (often levers or buttons) on the sides or underneath the seat. Press to release and slide the seat to one of the three available positions. Ensure it locks securely.
2. **Footrest Height:** The footrest can be adjusted to multiple heights. Locate the release mechanism on the side of the legs, adjust to the desired height, and ensure it locks into place.

Converting to Youth Chair

For children over 3 years old, the high chair can be converted into a youth chair, allowing them to sit comfortably at the family table.

1. Remove the tray.
2. Remove the crotch post.
3. Remove the 5-point harness straps.
4. Adjust the seat to the lowest setting for table height.



Image: OXO Tot Sprout High Chair in Pink/Birch without tray. This image displays the high chair in its youth chair configuration, demonstrating its adaptability.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the high chair's appearance and hygiene.

- **Seat and Back Cushions:** The cushions are easily wipeable. Use a damp cloth with mild soap and water to clean. Ensure they are completely dry before re-use to prevent mold growth.
- **Tray:** The tray is designed for easy cleaning. It can be wiped down with a damp cloth or washed by hand with soap and water. The recess in the tray can contain over 7 ounces of spilled liquid, making cleanup easier.
- **Harness Straps:** The canvas material of the straps can be cleaned with a damp cloth. For deeper cleaning, the straps may be unhooked and hand-washed with mild detergent. Allow to air dry completely.
- **Wooden Components:** Wipe wooden parts with a damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **General Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight and secure.

TROUBLESHOOTING

If you encounter any issues with your OXO Tot Sprout High Chair, refer to the following common solutions:

- **Difficulty Adjusting Seat/Footrest:** Ensure the release mechanisms are fully engaged when attempting to slide components. Do not force adjustments; if resistance is met, re-check the mechanism.
- **Harness Straps Seem Loose:** Adjust the harness straps to ensure a snug fit for your child. The straps are designed to be adjustable for various sizes.
- **Stains on Cushions/Straps:** For stubborn stains, a gentle scrub with a soft brush and mild soap may be necessary. For cushions, ensure immediate cleaning after spills to prevent staining. For straps, consider unhooking and hand-washing.
- **Chair Instability:** Verify that the high chair is on a flat, even surface. Check all leg connections and ensure they are securely fastened.

SPECIFICATIONS

Feature	Detail
Brand	OXO
Model	Sprout High Chair
ASIN	B01644Q4FU
UPC	719812939063
Age Range	6 months to 5 years
Weight Capacity	Up to 60 lbs (27 kg)
Item Weight	28.7 Pounds (13 kg)
Material Type	Birch, Wood
Color (as reviewed)	Pink/Birch
Assembly Required	Yes (minimal)
Adjustability	3 levels of tool-free seat height and depth, adjustable footrest, depth-adjustable tray
Safety Features	5-point harness, crotch post

WARRANTY AND SUPPORT

For warranty information and customer support, please visit the official OXO website or contact their customer service department. Details regarding product registration, warranty claims, and replacement

parts can be found there.

Online Support: www.oxo.com
