

[Manuals.plus](#) /

> [Armitron](#) /

> Armitron Sport Men's 20/5062 Analog-Digital Chronograph Watch Instruction Manual

Armitron 20/5062BLK

Armitron Sport Men's 20/5062 Analog-Digital Chronograph Watch Instruction Manual

Model: 20/5062BLK | Brand: Armitron

PRODUCT OVERVIEW AND FEATURES

The Armitron Sport Men's 20/5062 watch features a quartz movement with both analog and digital multifunction displays, offering a comprehensive set of timekeeping and utility functions.

- Multifunction sport watch featuring chronograph, lap time, pacers, five alarms, dual time, military time, 100 year calendar, countdown timer, hourly chime and backlight with three second delay.
- 50 mm resin case with acrylic dial window.
- Quartz movement with analog and digital display.
- Resin band with buckle closure.
- Water resistant to 100m (330ft): in general, suitable for swimming and snorkeling, but not diving.

PRODUCT VISUALS







Front view of the Armitron Sport Men's 20/5062 Analog-Digital Chronograph Watch, highlighting its black resin case, analog hands, and digital displays for time, date, and functions.



The Armitron Sport Men's 20/5062 watch displayed on a wrist, illustrating its substantial size and comfortable fit for daily wear.

WATER RESISTANT CHART

 <p>NOT WATER RESISTANT</p>	<p>NOT WATER RESISTANT</p>
 <p>ACCIDENTAL SPLASHES</p>	<p>WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing</p>
 <p>SWIMMING</p>	<p>WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling</p>
 <p>SNORKELING</p>	<p>WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving</p>

A water resistance chart explaining various levels of water protection for watches, from not resistant to 100m (330ft) suitable for swimming and snorkeling.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video provides a 360-degree view of the Armitron Sport Men's 20/5062BLK Analog-Digital Chronograph Black Resin Strap Watch, showcasing its design and features from all angles.

GETTING STARTED: INITIAL SETUP

Upon receiving your Armitron Sport watch, you may need to set the current time and date. This watch features both analog and digital displays, which may need to be synchronized or set independently depending on the model's specific design.

Setting the Digital Time and Date:

1. Press the **MODE** button repeatedly until the digital time display begins to flash, indicating it is in setting mode.
2. Use the **RESET** button to cycle through the different settings (hours, minutes, year, month, day).
3. Use the **ST/STP** button to adjust the selected value.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.

Setting the Analog Time:

The analog hands are typically set using the crown on the side of the watch case.

1. Pull the crown out to the first or second click position (refer to your specific model for exact crown positions).
2. Rotate the crown to move the analog hands to the correct time.
3. Push the crown back in to its original position to start the analog movement.

OPERATING INSTRUCTIONS

Chronograph Function:

The chronograph measures elapsed time. It can be used for timing sports or other activities.

1. From normal time mode, press the **MODE** button to enter Chronograph mode. The display will show "0:00:00".
2. Press **ST/STP** to start the timer.
3. Press **ST/STP** again to stop the timer.
4. Press **RESET** to reset the timer to zero.
5. To record lap times, press **RESET** while the chronograph is running. The lap time will display briefly, and the main timer will continue running in the background. Press **RESET** again to return to the running chronograph display.

Alarm Function:

Your watch is equipped with multiple alarms (up to five). Each alarm can be set independently.

1. Press the **MODE** button to navigate to the Alarm mode. The alarm number (e.g., AL1) will be displayed.
2. Press **RESET** to select the alarm you wish to set.
3. Press **ST/STP** to activate or deactivate the selected alarm. An alarm icon will appear when active.
4. To set the alarm time, hold **MODE** until the alarm time flashes. Use **RESET** to select hours/minutes and **ST/STP** to adjust.
5. Press **MODE** to confirm and exit alarm setting.

Dual Time Function:

The dual time feature allows you to display a second time zone simultaneously.

1. Press the **MODE** button to navigate to the Dual Time mode (often indicated as T2 or similar).
2. Hold the **MODE** button until the dual time display flashes.
3. Use **RESET** to select hours/minutes and **ST/STP** to adjust the time for the second zone.
4. Press **MODE** to confirm and exit.

Backlight (EL):

To illuminate the digital display in low-light conditions, press the **EL** button. The backlight will typically stay on for three seconds.

MAINTENANCE AND CARE

Water Resistance:

Your Armitron Sport watch is water resistant to 100 meters (330 feet). This rating means it is suitable for swimming and snorkeling. However, it is *not* designed for scuba diving. Avoid operating buttons while the watch is submerged in water to prevent water ingress.

Note: Water resistance is not a permanent condition and may eventually be compromised by aging gaskets or accidental shock to the crown or buttons. Annual checks by a qualified watch technician are recommended to maintain water resistance.

Cleaning:

To clean your watch, wipe it with a soft, damp cloth. For resin bands, mild soap and water can be used. Avoid harsh chemicals or abrasive materials, as these can damage the watch case or band.

Battery Replacement:

The watch uses 1 Lithium Metal battery (included). When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a professional watch repair service to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown back in; replace the battery.
Buttons are unresponsive.	Watch may be in a locked mode; internal malfunction.	Try pressing all buttons to see if any are stuck. If issue persists, consult support.
Time is inaccurate.	Low battery; strong magnetic field exposure.	Replace the battery. Keep watch away from strong magnets.
Condensation inside the watch.	Water ingress; sudden temperature change.	Stop using the watch immediately and seek professional repair to prevent further damage.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	20/5062BLK
Brand	Armitron Sport
Movement	Quartz with Analog and Digital Display
Case Material	Resin
Case Diameter	50 mm
Dial Window Material	Acrylic
Band Material	Resin

Feature	Detail
Clasp Type	Buckle
Water Resistance Depth	100 meters (330 feet)
Product Dimensions	3.74 x 3.27 x 2.76 inches
Item Weight	1.59 ounces
Battery Type	1 Lithium Metal battery (included)
Country of Origin	China

WARRANTY AND SUPPORT

Armitron watches are manufactured to high-quality standards. For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Armitron website.

For technical support, service, or inquiries about your Armitron Sport Men's 20/5062 watch, please contact Armitron customer service through their official channels. Contact information can typically be found on the manufacturer's website or in the product packaging.

You can visit the official Armitron Store for more information: [Armitron Store on Amazon](#).