

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lenovo](#) /
- › [Lenovo IdeaPad 100s 11.6" Laptop User Manual](#)

Lenovo FBA_80R2001FUS

Lenovo IdeaPad 100s 11.6" Laptop User Manual

Model: FBA_80R2001FUS

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo IdeaPad 100s 11.6" Laptop. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.



Figure 1: Front view of the Lenovo IdeaPad 100s 11.6" Laptop with the screen open, displaying the keyboard and touchpad. The laptop features a red base and a black lid.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the packing list are present and undamaged. Retain the packaging for future transport or service.

2. Connecting to Power

1. Connect the power adapter to the laptop's power input port.
2. Plug the power adapter into a suitable electrical outlet.
3. Allow the battery to charge for at least 30 minutes before initial use, or until the battery indicator shows a sufficient charge.

3. Initial Power On and Windows 10 Setup

1. Open the laptop lid and press the power button, typically located on the top right of the keyboard deck.
2. Follow the on-screen instructions to complete the Windows 10 initial setup. This includes selecting your region, language, accepting terms, and creating a user account.

4. Connecting to Wi-Fi

1. During Windows 10 setup, you will be prompted to connect to a Wi-Fi network. Select your network from the list and enter the password if required.
2. If setting up later, click the Wi-Fi icon in the taskbar, select your network, and connect.

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Keyboard:** Use the integrated keyboard for typing.
- **Touchpad:** The touchpad acts as a mouse. Tap to click, use two fingers to scroll, and pinch to zoom.

2. Using Ports and Connectors

The IdeaPad 100s features various ports for connectivity:

- **USB 2.0 Ports (x2):** For connecting external devices like USB drives, mice, or printers.
- **HDMI Port:** Connect to an external display or TV.
- **Headphone/Microphone Combo Jack:** For audio output to headphones or input from a microphone.
- **MicroSD Card Reader:** For expanding storage or transferring files from memory cards.

3. Webcam Usage

The built-in webcam can be used for video calls and conferencing. Access it through applications like Camera, Skype, or other video communication software.

4. Battery Management

- To maximize battery life, adjust screen brightness, close unused applications, and enable power-saving modes in Windows settings.
- Charge the laptop when the battery level is low. Avoid completely draining the battery frequently.

MAINTENANCE

1. Cleaning Your Laptop

- **Screen:** Use a soft, lint-free cloth lightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Keyboard and Casing:** Use a soft cloth. For stubborn dirt, a slightly damp cloth with mild soap solution can be used, ensuring

no liquid enters openings.

- **Ports:** Use compressed air to gently clear dust from ports.

2. Software Updates

Regularly update Windows 10 and device drivers to ensure optimal performance and security. Access Windows Update through the Settings menu.

3. Storage Management

The laptop comes with 32GB eMMC flash memory. To manage storage effectively:

- Regularly delete unnecessary files and uninstall unused applications.
- Utilize cloud storage services for large files.
- Consider using a microSD card for additional storage.

TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, refer to the Lenovo support website.

1. Laptop Does Not Power On

- Ensure the power adapter is securely connected to both the laptop and a working electrical outlet.
- Verify the power outlet is functional by plugging in another device.
- Try holding the power button for 10-15 seconds to perform a hard reset.

2. Display Issues

- If the screen is blank, ensure the laptop is powered on.
- Adjust screen brightness using the function keys (Fn + brightness keys).
- If connected to an external monitor, ensure the display output is correctly configured (Fn + F7 or similar key combination).

3. Wi-Fi Connectivity Problems

- Check if Wi-Fi is enabled in Windows settings.
- Restart your router and modem.
- Ensure you are within range of your Wi-Fi network.
- Forget the network and reconnect with the correct password.

4. Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Run a disk cleanup to free up storage space.
- Consider performing a factory reset as a last resort, backing up all important data first.

SPECIFICATIONS

Below are the technical specifications for the Lenovo IdeaPad 100s (Model: FBA_80R2001FUS):

Feature	Detail
Model Name	FBA_80R2001FUS
Screen Size	11.6 Inches

Feature	Detail
Screen Resolution	1366 x 768 pixels
Processor	Intel Atom Z3735F (1.33 GHz)
RAM	2 GB DDR3L
Hard Drive	32 GB eMMC
Graphics Coprocessor	Intel HD Graphics
Operating System	Windows 10
Wireless Type	802.11n
USB 2.0 Ports	2
Average Battery Life	7 Hours
Item Weight	2.64 pounds
Product Dimensions	7.95 x 11.5 x 0.69 inches
Color	Red

WARRANTY INFORMATION

Your Lenovo IdeaPad 100s is covered by a standard manufacturer's warranty. The specific terms and duration of the warranty may vary by region and purchase date. Please refer to the warranty card included with your product or visit the official Lenovo support website for detailed warranty information.

Keep your proof of purchase (receipt or invoice) as it will be required for any warranty claims.

SUPPORT

For further assistance, technical support, driver downloads, or service inquiries, please visit the official Lenovo Support website: <https://support.lenovo.com/>

You may also find helpful resources and community forums on the Lenovo website.