

Auriol 91926

Auriol Women's Quartz Chronograph Watch Instruction Manual

Model: 91926 | Brand: Auriol

1. INTRODUCTION

Thank you for choosing the Auriol Women's Quartz Chronograph Watch, Model 91926. This elegant timepiece combines precise quartz movement with chronograph functionality, designed for daily wear. This manual provides essential information for the proper setup, operation, and maintenance of your watch to ensure its longevity and accurate performance.

Please read these instructions carefully before using your watch and retain them for future reference.

2. SAFETY INFORMATION

- **Water Resistance:** This watch is water-resistant up to 10 BAR (100 meters). This rating is suitable for swimming and snorkeling but not for diving. Do not operate the crown or pushers while the watch is wet or submerged.
- **Battery:** The watch is powered by a battery. Dispose of used batteries responsibly according to local regulations. Keep batteries out of reach of children.
- **Temperature:** Avoid exposing the watch to extreme temperatures (below 0°C or above 50°C) or sudden temperature changes, as this may affect its accuracy and battery life.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, which can interfere with the quartz movement.
- **Impact:** While durable, avoid strong impacts or dropping the watch, as this can damage the internal mechanism or the mineral glass.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Auriol Chronograph Watch.



Figure 1: Watch Face Components

- A. Crown:** Used for setting time and date.
- B. Pusher A:** Starts/stops the chronograph.
- C. Pusher B:** Resets the chronograph.
- D. Main Dial:** Displays hours, minutes, and seconds.
- E. 24-Hour Sub-dial:** Indicates time in a 24-hour format.
- F. Chronograph Minute Sub-dial:** Measures elapsed minutes (up to 60 minutes).
- G. Chronograph Second Sub-dial:** Measures elapsed seconds.
- H. Date Window:** Displays the current date.



Figure 2: Product in Packaging

This image shows the Auriol watch as it appears in its retail packaging, highlighting the elegant design and black leather strap.

4. SETUP

4.1 Setting the Time

1. Pull the crown (A) out to position 2. The second hand will stop.
2. Turn the crown (A) to set the hour and minute hands. Ensure the 24-hour sub-dial (E) is also correctly aligned with the AM/PM cycle.
3. Push the crown (A) back into position 1 to start the watch.

4.2 Setting the Date

1. Pull the crown (A) out to position 1.
2. Turn the crown (A) clockwise to set the date in the date window (H).
3. Push the crown (A) back into its normal position.

Note: Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

5. OPERATING INSTRUCTIONS

5.1 Using the Chronograph (Stopwatch)

The chronograph function allows you to measure elapsed time up to 60 minutes.

1. **Start:** Press Pusher A (B) to start the chronograph. The chronograph second hand (G) and minute hand (F) will begin to move.

- 2. **Stop:** Press Pusher A (B) again to stop the chronograph. The elapsed time will be indicated by the chronograph second and minute hands.
- 3. **Reset:** After stopping, press Pusher B (C) to reset the chronograph hands to their zero positions.

5.2 Water Resistance Guidelines

Your Auriol watch is water-resistant to 10 BAR (100 meters) according to DIN 8310. This means it is suitable for:

- Everyday use, including splashes and rain.
- Showering and bathing.
- Swimming and snorkeling.

***Important:** Do not press any buttons or pull out the crown while the watch is submerged in water or wet. Ensure the crown is fully pushed in before any contact with water.*

6. MAINTENANCE

6.1 Cleaning Your Watch

- Wipe the watch case and mineral glass with a soft, dry cloth.
- For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals. Clean with a slightly damp cloth and allow to air dry.
- Do not use chemical cleaners or abrasive materials, as these can damage the watch's finish.

6.2 Battery Replacement

When the watch stops or the second hand moves erratically, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

6.3 Strap Care

The genuine leather strap is designed for comfort and durability. To prolong its life:

- Avoid excessive moisture and sweat.
- Do not expose to direct sunlight for extended periods.
- Clean gently with a soft, dry cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace battery (professional service recommended).
Date changes at noon instead of midnight.	AM/PM setting incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Requires calibration.	Consult a watch technician for adjustment.

Problem	Possible Cause	Solution
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water seal.	Seek immediate professional service to prevent damage.

8. SPECIFICATIONS

- Model Number:** 91926 (2-LD3533-4)
- Movement Type:** Quartz
- Display:** Analog
- Case Material:** Stainless Steel
- Case Diameter:** Approximately 5.00 cm
- Dial Window Material:** Mineral Glass
- Strap Material:** Genuine Leather (Black)
- Clasp Type:** Buckle
- Water Resistance:** 10 BAR (100 Meters) - Suitable for swimming and snorkeling.
- Special Features:** Chronograph, Chronometer, Date Display, Luminous Hands
- Power Source:** Battery Powered
- Included Components:** Watch, Battery, Instructions

9. WARRANTY AND SUPPORT

Auriol products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer.

For technical support or service inquiries, please contact the customer service department of your place of purchase. Please have your model number (91926) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question