

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Insignia](#) /
- › [Insignia NS-RC4NA-16 Remote Control User Manual](#)

## Insignia NS-RC4NA-16

# Insignia NS-RC4NA-16 Remote Control User Manual

Model: NS-RC4NA-16

[Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## INTRODUCTION

This manual provides comprehensive instructions for the Insignia NS-RC4NA-16 remote control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Insignia television.



## SETUP

---

### 1. Battery Installation

The Insignia NS-RC4NA-16 remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

### 2. Initial Use

This remote control is designed as a direct replacement for compatible Insignia televisions. No programming or pairing is typically required. After installing the batteries, point the remote control at your television and press the **Power** button to turn on the TV.

## OPERATION

---

The Insignia NS-RC4NA-16 remote control provides full functionality for your compatible Insignia television. Below are the general functions of common buttons:

- **Power:** Turns the television on or off.
- **Input/Source:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Volume Up/Down (+/-):** Adjusts the audio volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute:** Silences or restores the television audio.
- **Menu:** Accesses the television's main menu for settings and options.
- **Navigation (Arrow buttons):** Moves the cursor within menus.
- **Enter/OK:** Confirms selections in menus.
- **Back/Exit:** Returns to the previous menu or exits the current menu.
- **Guide:** Displays the program guide (if available).
- **Info:** Displays information about the current program or input.
- **Number Pad (0-9):** Directly enters channel numbers.

Refer to your television's user manual for specific functions and advanced settings accessible via the remote control.

## MAINTENANCE

---

### Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

## Battery Care and Replacement

If the remote control's range decreases or buttons become unresponsive, it may be time to replace the batteries. Follow the battery installation steps outlined in the [Setup](#) section. Remove batteries if the remote will not be used for an extended period to prevent leakage.

## Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity to prolong its lifespan.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	<ul style="list-style-type: none"> <li>• Dead or incorrectly installed batteries.</li> <li>• Obstruction between remote and TV.</li> <li>• Remote control sensor on TV is blocked.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries, ensuring correct polarity.</li> <li>• Remove any objects blocking the line of sight to the TV.</li> <li>• Clear any obstructions from the TV's remote sensor.</li> </ul>
Buttons are unresponsive or sticky.	<ul style="list-style-type: none"> <li>• Low battery power.</li> <li>• Dirt or debris under buttons.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries.</li> <li>• Clean the remote control as described in the <a href="#">Maintenance</a> section.</li> </ul>
Remote range is reduced.	<ul style="list-style-type: none"> <li>• Weak batteries.</li> <li>• Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries.</li> <li>• Move other electronic devices away from the TV or remote.</li> </ul>

If troubleshooting steps do not resolve the issue, contact Insignia customer support or refer to your television's user manual for further assistance.

## SPECIFICATIONS

**Model:** NS-RC4NA-16

**Brand:** Insignia

**Connectivity Technology:** Infrared (IR)

**Compatible Devices:** Insignia Televisions (various models including NS-32DD220MX16, NS-48E200CN15, NS-49E750CN15, NS-55E780CN15, NS-50E880CN15, NS-58E880CN15, NS-65E900CN15, NS-19D220NA16, NS-19D220MX16, NS-55D421NA16, NS-50D421NA16, NS-28D220NA16)

**Power Source:** 2 x AAA Batteries (not included)

**Product Dimensions:** 6 x 2 x 0.5 inches (approximately)

**Item Weight:** 3.52 ounces (approximately)

**Special Feature:** Ergonomic design

## WARRANTY AND SUPPORT

---

This Insignia remote control is typically covered by a manufacturer's limited warranty. For specific warranty terms, duration, and conditions, please refer to the documentation included with your original television purchase or visit the official Insignia website.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Insignia customer service. Contact information can usually be found on the Insignia official website or in your television's user manual.

*Disclaimer: This manual is for informational purposes only. Insignia reserves the right to make changes to products without prior notice.*