

[Manuals.plus](#) /

› [TFA Dostmann](#) /

› TFA Dostmann Radio-Controlled Alarm Clock with Monthly Calendar, Model 60.2529.54 User Manual

## TFA Dostmann 60.2529.54

# TFA Dostmann Radio-Controlled Alarm Clock with Monthly Calendar, Model 60.2529.54

User Manual

[Introduction](#)

[Safety](#)

[Setup](#)

[Operation](#)

[Features](#)

[Troubleshooting](#)

[Specifications](#)

## 1. INTRODUCTION

Welcome and thank you for choosing the TFA Dostmann Radio-Controlled Alarm Clock, Model 60.2529.54. This device provides precise timekeeping, a comprehensive monthly calendar, indoor temperature display, and moon phase indication. Please read this manual carefully to ensure proper setup and operation.

## 2. SAFETY INSTRUCTIONS

- Keep this manual for future reference.
- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified personnel for service.
- Dispose of batteries properly according to local regulations.

## 3. PACKAGE CONTENTS

- TFA Dostmann Radio-Controlled Alarm Clock (Model 60.2529.54)
- 2 x 1.5V AA Batteries
- User Manual

## 4. DEVICE OVERVIEW

Familiarize yourself with the main components of your alarm clock.



Figure 1: Front view of the TFA Dostmann Radio-Controlled Alarm Clock, Model 60.2529.54, displaying the time, date, monthly calendar, indoor temperature, and moon phase. Control buttons are visible on the right side.

## 5. SETUP

### 5.1 Battery Installation

1. Open the battery compartment cover on the back of the device.
2. Insert 2 x 1.5V AA batteries, observing the correct polarity (+/-).
3. Close the battery compartment cover.

The device will automatically begin searching for the radio-controlled time signal. This process may take several minutes.

### 5.2 Initial Radio Signal Reception

Place the alarm clock near a window for optimal signal reception. Avoid placing it near electronic devices that may cause interference. Once the signal is received, the time, date, and day of the week will be automatically set.

## 6. OPERATING INSTRUCTIONS

### 6.1 Setting Time Manually (if radio signal is unavailable)

1. Press and hold the **SET** button (located on the right side) until the time display flashes.
2. Use the **UP** and **DOWN** buttons (also on the right side) to adjust the hour, then press **SET** to confirm.
3. Repeat for minutes, year, month, and day.
4. Press **SET** again to exit manual setting mode.

### 6.2 Setting the Alarm

1. Press the **ALARM** button (refer to device for exact button label, typically one of the right-side buttons) to enter alarm setting mode.
2. Use **UP** and **DOWN** to set the desired alarm time.
3. Press **ALARM** to confirm.

4. Activate or deactivate the alarm using the dedicated alarm ON/OFF switch or button. An alarm icon will appear on the display when active.

### 6.3 Snooze Function

When the alarm sounds, press the **SNOOZE** button (often the top button on the right side, or any button on top of the device) to temporarily silence the alarm. The alarm will sound again after approximately 5-10 minutes.

### 6.4 Backlight

Press any button to activate the backlight for a few seconds, improving readability in low light conditions.

## 7. KEY FEATURES

- **Radio-Controlled Time:** Automatic synchronization with a precise time signal for accurate timekeeping.
- **Monthly Calendar Display:** View the entire current month, including week numbers and day of the week.
- **Calendar Navigation:** Scroll forward and backward through months to check past or future dates.
- **Indoor Temperature Display:** Monitors and displays the ambient room temperature in Celsius or Fahrenheit.
- **Moon Phase Display:** Shows the current moon phase.
- **Alarm with Snooze:** Reliable alarm function with a convenient snooze option.
- **Large Display:** Clear and easy-to-read display for all information.



Figure 2: Close-up view of the TFA Dostmann alarm clock display, highlighting the monthly calendar layout, current date, time, and indoor temperature.

## 8. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the device will not be used for an extended period, remove the batteries to prevent leakage.
- Replace batteries when the display becomes dim or the device stops functioning correctly.

## 9. TROUBLESHOOTING

Problem	Solution
No display / Device not turning on.	Check battery polarity. Replace batteries if necessary. Ensure batteries are correctly inserted.
Incorrect time / No radio signal.	Move the device closer to a window. Manually set the time if the signal cannot be received. Ensure no interference from other electronics. The signal reception can take several minutes.

Problem	Solution
Alarm not sounding.	Ensure the alarm is activated (check for the alarm icon on the display). Verify alarm time settings.

## 10. SPECIFICATIONS

- **Model:** 60.2529.54
- **Dimensions (L x W x H):** 176 x 50 x 120 mm (approx. 6.9 x 2.0 x 4.7 inches)
- **Weight:** 265 g (approx. 9.3 oz)
- **Material:** Plastic
- **Power Supply:** 2 x 1.5V AA batteries (included)
- **Temperature Measurement Range:** -10°C to +50°C (+14°F to +122°F)
- **Display Type:** Digital
- **Features:** Radio-controlled time, monthly calendar, indoor temperature, moon phase, alarm with snooze, backlight.

## 11. WARRANTY AND SUPPORT

TFA Dostmann products are manufactured with quality and precision. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official TFA Dostmann website.

**Manufacturer:** TFA Dostmann GmbH

**Website:** [www.tfa-dostmann.de](http://www.tfa-dostmann.de)