

[Manuals.plus](#) /

> [HAVERLAND](#) /

> Haverland Floor Stands for RCW and Wi Thermal Emitters - Model SOP.SUELO.RCW Instruction Manual

## HAVERLAND SOP.SUELO.RCW

# Haverland Floor Stands for RCW and Wi Thermal Emitters

MODEL: SOP.SUELO.RCW

*Instruction Manual*

---

### 1. Product Overview

The Haverland Floor Stands (Model SOP.SUELO.RCW) are designed to provide stable, freestanding support for compatible Haverland RCW and Wi series thermal emitters. These optional plastic stands allow for flexible placement of your heating unit without permanent wall mounting.



Image showing the two white plastic floor stands included in the package, designed to provide stable support for Haverland RCW and Wi thermal emitters.

## 2. Package Contents

---

Please check the box for the following items:

- 1x Set of Haverland Floor Stands (Model SOP.SUELO.RCW)
- Necessary mounting hardware (screws, etc.) - *(Assumed, as stands need to attach to emitter)*
- Instruction Manual (this document)

## 3. Safety Information

---

- Ensure the thermal emitter is unplugged and cool before installation.
- Always place the emitter on a stable, level surface.
- Do not obstruct the air vents of the thermal emitter.
- Keep children and pets away from the emitter during operation.
- Verify compatibility: These stands are specifically designed for Haverland RCW and Wi series thermal emitters. Using them with incompatible models may result in instability or damage.

## 4. Installation Instructions

---

Follow these steps to attach the floor stands to your Haverland thermal emitter:

1. **Prepare the Emitter:** Ensure your Haverland RCW or Wi thermal emitter is turned off, unplugged from the power outlet, and completely cool to the touch.
2. **Identify Mounting Points:** Locate the designated mounting points on the bottom or sides of your thermal emitter where the floor stands are intended to attach. Refer to your emitter's manual for specific details if needed.
3. **Position the Stands:** Place one floor stand on each side of the emitter, aligning the stand's attachment mechanism with the emitter's mounting points. The stands are typically designed to cradle the base of the emitter.
4. **Secure the Stands:** Using the provided screws and a suitable screwdriver (not included), firmly attach each stand to the thermal emitter. Ensure all screws are tightened securely to prevent wobbling or instability. Do not overtighten.
5. **Verify Stability:** Once both stands are attached, gently lift and place the emitter on a flat surface. Lightly push on the emitter to confirm it is stable and does not wobble. Adjust screws if necessary.

*Note: The exact attachment method may vary slightly depending on the specific RCW or Wi emitter model. Always consult the emitter's own instruction manual for detailed diagrams and instructions regarding stand attachment.*

## 5. Usage

---

Once installed, the floor stands allow you to place your Haverland thermal emitter on any flat, stable surface. This provides flexibility in heating different areas of your home or office. Ensure the emitter is placed away from curtains, furniture, and other flammable materials, maintaining adequate clearance as specified in your emitter's manual.

## 6. Maintenance

---

- **Cleaning:** To clean the floor stands, wipe them with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the plastic.

- **Inspection:** Periodically check the screws and attachment points to ensure they remain tight and secure. If any part appears damaged, discontinue use and contact customer support.

## 7. Troubleshooting

If you encounter any issues with your Haverland Floor Stands, consider the following:

- **Emitter is Unstable/Wobbles:**
  - Ensure all attachment screws are securely tightened.
  - Verify that the emitter is placed on a completely flat and level surface.
  - Confirm that the stands are correctly installed according to the instructions and are compatible with your specific emitter model.
- **Stands do not fit the Emitter:**
  - Double-check the compatibility of your thermal emitter model with the SOP.SUELO.RCW stands. These stands are designed for RCW and Wi series emitters.
  - Contact Haverland customer support if you believe you have received the incorrect product or if there is a manufacturing defect.

## 8. Specifications

Feature	Detail
Brand	HAVERLAND
Model Number	SOP.SUELO.RCW
Color	White
Material	Plastic
Product Dimensions (Package)	49.79 x 13.4 x 6.9 cm
Product Weight	500 g
Recommended Use	Radiator Support
Compatible Emitters	Haverland RCW and Wi series thermal emitters

## 9. Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your Haverland thermal emitter or visit the official Haverland website. You may also contact Haverland customer service directly for assistance with your floor stands.

**Haverland Official Website:** [Visit Haverland Store on Amazon](#)