

AYL FBA_AYL-SoundFitOrange

AYL Soundfit Portable Outdoor and Shower Bluetooth 5.0 Speaker Instruction Manual

Model: FBA_AYL-SoundFitOrange

1. INTRODUCTION

The AYL Soundfit Portable Outdoor and Shower Bluetooth 5.0 Speaker is designed for robust performance in various environments. This manual provides essential information for the proper setup, operation, and maintenance of your speaker.

2. PRODUCT FEATURES

- **Bluetooth 5.0 Connectivity:** Ensures stable and efficient wireless connection.
- **IPX6 Water Resistance:** Protected against low-pressure water streams. Not designed for submersion.
- **Durable Design:** Dust-proof and shock-proof for outdoor and shower use.
- **Extended Battery Life:** Up to 12 hours of playback on a single charge.
- **Integrated Microphone:** Supports hands-free calling.
- **Portable Design:** Compact and lightweight with a hanging strap for easy transport.

3. PACKAGE CONTENTS

- AYL Soundfit Bluetooth Speaker
- USB Charging Cable
- 3.5mm Audio Cable
- Netted Carrying Case with Drawstring
- Instruction Manual (this document)

4. PRODUCT DIAGRAM AND CONTROLS

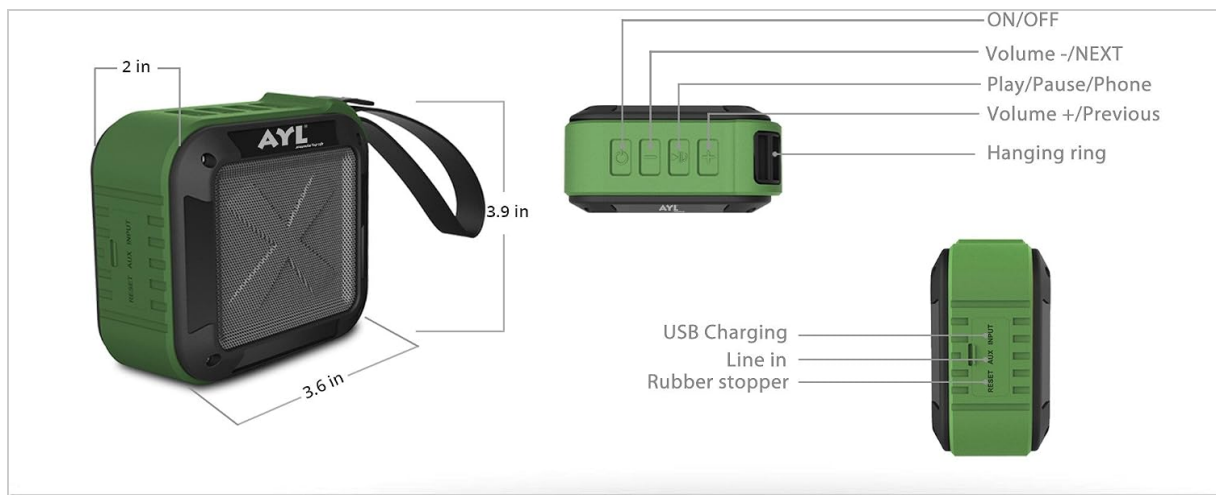


Image Description: This image displays the AYL Soundfit speaker from a top-down view, highlighting its dimensions (3.6 inches width, 2 inches depth, 3.9 inches height). Key controls on the top panel are labeled: ON/OFF button, Volume - /NEXT button, Play/Pause/Phone button, and Volume +/PREVIOUS button. A hanging ring is also visible. The side view indicates the USB Charging port, Line in port, and a rubber stopper protecting these ports.

Control Functions:

- **ON/OFF Button:** Press and hold to power the speaker on or off.
- **Volume - / NEXT Button:** Short press to decrease volume. Long press to skip to the next track.
- **Play/Pause/Phone Button:** Short press to play or pause music. Press to answer or end a phone call. Long press to reject an incoming call.
- **Volume + / PREVIOUS Button:** Short press to increase volume. Long press to go to the previous track.

5. SETUP

5.1 Charging the Speaker

1. Locate the rubber stopper on the side of the speaker.
2. Open the rubber stopper to reveal the USB charging port.
3. Connect the provided USB charging cable to the speaker's charging port.
4. Connect the other end of the USB cable to a USB power source (e.g., computer, wall adapter).
5. The charging indicator light will illuminate. A full charge takes approximately 3 hours.
6. Once fully charged, disconnect the cable and securely close the rubber stopper to maintain water resistance.

5.2 Bluetooth Pairing



EASY PAIRING WITH ALL TYPES OF DEVICES THAT USE BLUETOOTH TECHNOLOGY



OR CONNECT WITH 3.5MM AUDIO CABLE FOR NON-BLUETOOTH DEVICES

Image Description: This diagram illustrates the AYL Soundfit speaker's compatibility with various Bluetooth-enabled devices, including desktop computers, tablet PCs, game players, MP3/MP4 players, smartphones, laptops, and vehicles. It also indicates the option to connect via a 3.5mm audio cable for non-Bluetooth devices.

1. Ensure the speaker is fully charged.
2. Press and hold the ON/OFF button to power on the speaker. A chime will indicate it is powered on, and the Bluetooth indicator light will flash, signifying it is in pairing mode.
3. On your device (smartphone, tablet, laptop, etc.), enable Bluetooth and search for available devices.
4. Select "AYL Soundfit" from the list of found devices.
5. Once paired, a confirmation chime will sound, and the Bluetooth indicator light will stop flashing and remain solid.
6. The speaker has a wireless range of up to 33 feet (10 meters).

5.3 Wired Connection (AUX-in)

1. Open the rubber stopper on the side of the speaker.
2. Connect one end of the provided 3.5mm audio cable to the speaker's Line-in port.
3. Connect the other end of the 3.5mm audio cable to the audio output jack of your non-Bluetooth device.
4. The speaker will automatically switch to AUX mode.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To power on, press and hold the ON/OFF button until you hear a chime.
- To power off, press and hold the ON/OFF button until you hear a chime.

6.2 Music Playback

- **Play/Pause:** Short press the Play/Pause/Phone button.
- **Volume Adjustment:** Short press the Volume + or Volume - buttons.
- **Next Track:** Long press the Volume - button.
- **Previous Track:** Long press the Volume + button.

6.3 Hands-Free Calling

- **Answer Call:** When a call comes in, short press the Play/Pause/Phone button.
- **End Call:** During a call, short press the Play/Pause/Phone button.
- **Reject Call:** When a call comes in, long press the Play/Pause/Phone button.

7. MAINTENANCE

7.1 Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Ensure all ports are dry before charging or connecting cables.

7.2 Water Resistance Care

DUST-PROOF

The seamless shell enables the product to be used in harsh dust environment




With an add on bike accessory (Not included), the speaker can be attached to a bicycle, as shown here.



SHOCK-PROOF

The shell is thick to ensure sufficient protection from an accidental drop of 6.5 feet in height without any effect, with an extra protective plastic layer wrapped on the outside.

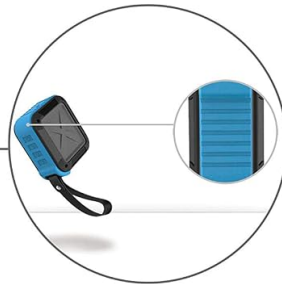

AYL BLUETOOTH SPEAKERS

CYCLING



HIKING



CAMPING



Image Description: The AYL Soundfit speaker is shown with water splashing over it, demonstrating its IPX6 water-resistant capability. The speaker appears to be on a rocky surface, indicating outdoor use.

- The speaker is IPX6 water resistant, meaning it is protected against powerful water jets. It is suitable for use in showers, by the pool, or in light rain.
- **Do not submerge the speaker in water.** Submersion may cause permanent damage.
- Always ensure the rubber stopper covering the charging and AUX ports is securely closed when using the speaker near water.
- If the speaker gets wet, wipe it dry with a clean cloth before charging or opening the port cover.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker for at least 3 hours.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Bluetooth disabled on device; device too far.	Ensure speaker is on and indicator light is flashing. Enable Bluetooth on your device. Move device closer to the speaker (within 33 feet).

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on speaker or device; incorrect input mode.	Increase volume on both the speaker and your connected device. Ensure the correct input mode (Bluetooth or AUX) is active.
Sound stutters or disconnects.	Device is out of range; obstacles between speaker and device; interference.	Move your device closer to the speaker. Reduce obstacles (walls, large objects). Avoid strong electromagnetic interference.
Speaker does not remember volume level.	This is a characteristic of the speaker's design.	Adjust volume manually each time the speaker is turned on.

9. SPECIFICATIONS

Feature	Specification
Model Name	FBA_AYL-SoundFitOrange
Speaker Type	Outdoor
Special Features	Portable, Waterproof (IPX6)
Wireless Communication Technology	Bluetooth 5.0
Bluetooth Range	33 Feet (10 meters)
Power Source	Battery Powered
Charging Time	3 Hours
Playing Time	Up to 12 Hours
Speaker Maximum Output Power	5 Watts
Product Dimensions	3.6 x 2 x 3.9 inches
Item Weight	9.4 ounces (0.59 Pounds)
UPC	610098849438

10. WARRANTY AND SUPPORT

This AYL Soundfit speaker comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or contact AYL customer support directly.

For technical assistance, troubleshooting not covered in this manual, or other inquiries, please visit the official AYL website or contact their customer service department.