

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [esinkin](#) /

› [esinkin Bluetooth Audio Adapter User Manual](#)

esinkin W29

esinkin Bluetooth Audio Adapter User Manual

Model: W29
Brand: esinkin

INTRODUCTION

The esinkin Bluetooth Audio Adapter is designed to bring wireless music streaming capabilities to your existing sound systems. Connect it to computer speakers, home stereo systems, or other speaker systems via 3.5mm or RCA cables, and then pair it with your Bluetooth-enabled devices like smartphones or tablets to stream audio wirelessly. This adapter acts as a Bluetooth receiver, enabling your non-Bluetooth audio equipment to receive wireless signals.



Image: Front view of the esinkin Bluetooth Audio Adapter, showing the AUX and RCA input ports.

WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are present:

- 1 x Bluetooth receiver
- 1 x AC to DC Power adapter
- 1 x 3.5mm to RCA Audio cable
- 1 x USB Power cable
- 1 x User manual



Image: All included accessories for the esinkin Bluetooth Audio Adapter.

SETUP

Follow these steps to set up your esinkin Bluetooth Audio Adapter:

1. **Connect to Power:** Connect the Bluetooth adapter to a power source using either the provided AC to DC power adapter or the USB cable. Note that this adapter does not have a built-in battery and requires continuous power.
2. **Connect to Audio System:** Connect the adapter to your computer speakers, home stereo system, or other speaker system using either the 3.5mm audio cable or the RCA cable. Ensure the connection is secure.
3. **Power On:** The device will power on when connected to power.
4. **Pairing Mode:** Press and hold the large Bluetooth symbol button in the middle of the adapter for approximately 3 seconds until the blue light starts blinking. This indicates the adapter is in pairing mode.
5. **Pair with Your Device:** On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings and search for available devices. Select the esinkin Bluetooth Audio Adapter from the list to pair. Once paired, the blue light on the adapter will become solid.



Image: Connection diagram for the esinkin Bluetooth Audio Adapter.



Image: Illustrates the function of the main Bluetooth button for power and playback control.

OPERATING INSTRUCTIONS

Once successfully set up and paired, operating the esinkin Bluetooth Audio Adapter is straightforward:

- **Music Streaming:** After pairing, music played on your Bluetooth-enabled device will stream wirelessly to the connected audio system.
- **Playback Control:**
 - Click the Bluetooth symbol button once to **Start/Pause** music playback.
 - Hold the Bluetooth symbol button for 3 seconds to turn the device **ON/OFF**.
- **Automatic Reconnect:** The adapter is designed to automatically reconnect with the last paired device when both are within range and Bluetooth is enabled.

- **Wireless Range:** The effective wireless range indoors (without significant obstacles) is approximately 30-40 feet (10-12 meters).

Accessories

1 Bluetooth Receiver



2 AC to DC Power Adapter



3 USB Power Cable



4 AUX to RCA Audio Cable

Image: Demonstrates wireless music streaming from mobile devices to a home stereo via the adapter.

MAINTENANCE

To ensure the longevity and optimal performance of your esinkin Bluetooth Audio Adapter, please observe the following maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the adapter. Avoid using liquid cleaners or abrasive materials.
- **Power Protection:** To protect the adapter from potential damage due to power surges or brown-outs, especially during electrical supply issues or storms, it is recommended to unplug the unit from the wall outlet.
- **Storage:** When not in use for extended periods, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Continuous Operation:** The adapter is designed to remain powered when connected to a power source. To completely turn it off, disconnect it from the power outlet.

TROUBLESHOOTING

If you encounter issues with your esinkin Bluetooth Audio Adapter, please refer to the following common solutions:

Problem	Possible Cause / Solution
No sound or low volume:	Ensure the adapter is properly connected to your audio system's input (AUX or RCA). Check the volume levels on both your streaming device and the connected audio system. Increase both. Verify that the correct input source is selected on your audio system. On your streaming device, check Bluetooth settings for the adapter and ensure "Audio" is active.
Cannot pair with device:	Ensure the adapter is in pairing mode (blinking blue light). If not, hold the Bluetooth button for 3 seconds to restart. Make sure your streaming device's Bluetooth is enabled and within range. Try turning off and on Bluetooth on your streaming device. If previously paired, try "forgetting" the device on your streaming device and re-pairing.
Intermittent connection or poor range:	Reduce the distance between the adapter and your streaming device. Remove any obstacles (walls, large metal objects) that may interfere with the Bluetooth signal. Ensure there are no other strong wireless signals nearby causing interference.
Adapter is always on:	The adapter is designed to remain powered when connected to a power source. To completely turn it off, disconnect it from the power outlet.

SPECIFICATIONS

Feature	Detail
Brand	esinkin
Model Number	W29
Wireless Type	Bluetooth
Item Weight	3.52 ounces
Product Dimensions (LxWxH)	1.97 x 1.97 x 0.94 inches
Color	Black
Compatible Devices	Smartphone, Tablet, Home Stereo System
Connector Type	RCA, Auxiliary (3.5mm)
Power Input	5V === 150mA

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official esinkin website. Contact details for customer service are typically available on the product packaging or the brand's online support page.

For additional resources and product information, you may visit the [esinkin Store on Amazon](#).

