

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux EW30MC65PS Electric Combination Wall Oven User Manual

Electrolux EW30MC65PS

Electrolux EW30MC65PS Electric Combination Wall Oven User Manual

Model: EW30MC65PS

1. INTRODUCTION

Thank you for choosing the Electrolux EW30MC65PS Electric Combination Wall Oven. This appliance combines a powerful convection oven with a built-in microwave, designed to offer versatile cooking options and convenience. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not operate with a damaged cord or plug.
- **Burn Hazard:** Oven surfaces become hot during use. Use oven mitts. Do not touch heating elements.
- **Microwave Safety:** Do not heat sealed containers. Avoid heating liquids beyond boiling point without stirring. Do not operate the microwave if the door is damaged.
- **Children:** Do not allow children to operate or play with the appliance.
- **Flammable Materials:** Do not store or use flammable materials near the oven.

3. SETUP AND INSTALLATION

The Electrolux EW30MC65PS is designed for wall-mount installation. Professional installation is recommended due to the appliance's weight and electrical requirements.

3.1 Unpacking

Carefully remove all packaging materials, tape, and protective film from the oven and microwave. Retain packaging for potential future transport or service.

3.2 Location and Dimensions

Ensure the installation cavity meets the following approximate dimensions:

- **Height:** 45.75 inches
- **Width:** 30 inches
- **Depth:** 24.5 inches

The appliance weighs approximately 275 pounds. The cabinet structure must be capable of supporting this weight.

3.3 Electrical Connection

This is an electric appliance. Ensure the electrical supply meets the specifications outlined in the installation guide provided with the unit. A dedicated circuit is typically required.

3.4 Initial Cleaning

Before first use, wipe the interior and exterior surfaces with a damp cloth and mild detergent. Remove any residual manufacturing odors by running the oven on a low temperature for approximately 30 minutes.



Image: The Electrolux EW30MC65PS oven and microwave with doors open, illustrating the interior layout and components.

4. OPERATING INSTRUCTIONS

The Electrolux EW30MC65PS features Wave-Touch controls for both the oven and microwave, providing intuitive operation for various cooking functions.

4.1 Control Panel Overview

The control panel allows you to select cooking modes, set temperatures, and access special features for both the upper microwave and lower convection oven.



Image: Detailed view of the Wave-Touch control panel, highlighting the various function icons for both oven and microwave.

4.2 Using the Convection Oven (Lower Oven)

The lower oven features Perfect Taste convection technology with two variable speeds and three heating elements for even heat distribution.

- **Bake/Roast:** Select the desired temperature and cooking mode (e.g., Convection Bake, Convection Roast).
- **Perfect Taste Temperature Probe:** Insert the probe into the thickest part of the food. The oven will monitor the internal temperature and automatically switch to Keep Warm when the target temperature is reached.
- **Perfect Turkey Setting:** This specialized setting, combined with the temperature probe, helps ensure your turkey is cooked to perfection with a crispy exterior and juicy interior. A countdown timer assists in monitoring.
- **Sabbath Mode:** This feature allows the oven to operate for an extended period in compliance with kosher cooking practices, maintaining a set temperature without active displays or audible signals.

4.3 Using the Microwave (Upper Oven)

The upper oven functions as a microwave with a capacity of 1.5 cubic feet and 900 watts of power.

- **Auto Cook Functions:** Utilize the 6 auto cook functions for common items like popcorn, beverages, or reheating.
- **Multistage Cooking:** Program the microwave for recipes requiring multiple power levels and cooking times.
- **Ceramic Turntable:** The ceramic turntable rotates food to ensure thorough and even heating. Ensure it is properly seated before operation.



Image: A roast cooking inside the microwave compartment, demonstrating the use of the internal rack and ceramic turntable.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

5.1 Self-Cleaning Cycle (Lower Oven)

The lower oven features a self-cleaning function. The porcelain oven racks are designed to remain inside the oven during the self-clean cycle. Follow the instructions on the control panel to initiate a self-clean cycle. Ensure the oven is well-ventilated during and after the cycle.

5.2 General Cleaning

- **Exterior:** Clean stainless steel surfaces with a soft cloth and a non-abrasive stainless steel cleaner. Wipe in the direction of the grain.
- **Microwave Interior:** Wipe spills immediately with a damp cloth. For stubborn stains, use a mild detergent. The ceramic turntable can be removed and washed with warm, soapy water.
- **Oven Interior (Manual Clean):** For light spills, clean with warm, soapy water after the oven has cooled. Avoid harsh abrasives.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions.

6.1 Common Issues

- **Appliance Not Operating:** Check if the circuit breaker is tripped. Ensure the appliance is properly plugged in.
- **Oven Not Heating:** Verify the cooking mode and temperature are correctly set. Ensure the oven door is fully closed.

- **Microwave Not Heating:** Ensure the door is securely latched. Check if the turntable is properly seated.
- **Error Codes (e.g., F11):** If an error code appears on the display, refer to the comprehensive service manual or contact Electrolux customer support for specific diagnostic and resolution steps. Some errors may require a service technician.
- **Uneven Cooking:** For the oven, ensure proper rack placement and avoid overcrowding. For the microwave, ensure the turntable is rotating freely.

7. SPECIFICATIONS

Feature	Specification
Brand	Electrolux
Model Number	EW30MC65PS
Installation Type	Wall Mount
Fuel Type	Electric
Oven Capacity	3.5 cu. ft.
Microwave Capacity	1.5 cu. ft.
Microwave Wattage	900 watts
Oven Cooking Mode	Convection
Color	Stainless Steel
Material Type	Stainless Steel
Approximate Item Weight	275 pounds
Approximate Dimensions (H x W x D)	45.75" x 30" x 24.5"
Special Features	Defrost, Double Wall, Self Clean, Convection, Temperature Probe, Sabbath Mode

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Electrolux website. Warranty terms and conditions may vary.

8.1 Customer Support

If you require assistance with installation, operation, or troubleshooting beyond what is covered in this manual, please contact Electrolux customer service. You can typically find contact information on the Electrolux website or in your product registration materials.

Online Resources: [Visit the Electrolux Official Website](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B016NZBGC6>

More documents and user manuals: <https://manuals.plus/>