

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bright Starts](#) /

› [Bright Starts Bounce 'n Spring Deluxe Door Jumper Instruction Manual](#)

Bright Starts 10410

Bright Starts Bounce 'n Spring Deluxe Door Jumper Instruction Manual

Model: 10410 | Brand: Bright Starts

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in serious injury or death.

- Use only for a child who is able to hold their head upright unassisted and who weighs less than 26 lbs (12 kg).
- Discontinue use when the child begins to walk or reaches 26 lbs (12 kg), whichever comes first.
- Only use on interior door frames with a wall thickness between 4 – 5 inches (10.2 – 12.7 cm) and a trim thickness of at least 0.5 inches (13 mm).
- Ensure the product is properly secured in the center of the door frame before each use.
- Never leave child unattended. Always keep child in view while in the jumper.
- Do not use near stairs, heat sources, or objects that could be pulled down by the child.

PRODUCT OVERVIEW

The Bright Starts Bounce 'n Spring Deluxe Door Jumper is designed to provide engaging activity for your baby. It features a secure, adjustable design that attaches to most standard door frames, offering a compact and portable solution for playtime. The jumper includes four repositionable toys to keep your baby entertained.



Figure 1: The Bright Starts Bounce 'n Spring Deluxe Door Jumper, featuring a blue and green seat with attached toys, securely fastened to a white door frame. A happy baby is seated inside, ready to bounce.

PACKAGE CONTENTS

Ensure all components are present before assembly:

- Door Jumper Frame with Spring Mechanism
- Fabric Seat Pad
- Soft Prop Pillow (for smaller babies)
- 4 Repositionable Toys (plush zebra, plush giraffe, teether, mirror)

SETUP INSTRUCTIONS

Follow these steps for safe and secure installation:

1. **Inspect Door Frame:** Verify your interior door frame meets the safety requirements: wall thickness between 4 – 5 inches (10.2 – 12.7 cm) and trim thickness of at least 0.5 inches (13 mm). The frame must be sturdy and securely installed.



Figure 2: A visual guide indicating the necessary wall thickness (4-5 inches) and trim thickness (at least 0.5 inches) for proper and secure installation of the door jumper.

2. **Attach Clamp:** Open the clamp mechanism at the top of the jumper. Place it over the top of the door frame, ensuring the hooks firmly grip both sides of the trim.
3. **Secure Clamp:** Close the clamp securely. Tug gently on the main strap to confirm it is firmly attached and does not slip.
4. **Adjust Height:** Use the adjustable strap and buckle system to set the appropriate height for your baby. The baby's feet should be able to touch the floor with their toes, allowing for bouncing motion.



Figure 3: An image highlighting the adjustable strap and buckle system of the jumper, allowing users to customize the height for the baby's comfort and reach.

5. **Attach Toys:** The four included toys can be repositioned on the loops around the seat for your baby's engagement.

OPERATING INSTRUCTIONS

To ensure your baby's enjoyment and safety:

1. **Place Baby in Jumper:** Gently place your baby into the fabric seat, ensuring their legs are through the leg openings and they are comfortably supported. For smaller babies, use the soft prop pillow for additional support.



Figure 4: A close-up view of a baby happily seated in the jumper, with various attached toys like a plush zebra, giraffe, and teethers visible around the seat.

2. **Supervise Play:** Always supervise your baby while they are in the door jumper. Encourage them to bounce and interact with the attached toys.



Figure 5: A detailed shot of the jumper's attached toys, featuring a small mirror for self-discovery, a leaf-shaped teether, and two plush animal toys (zebra and giraffe) designed for engagement.

3. Remove Baby: When playtime is over, carefully remove your baby from the jumper.

MAINTENANCE

Proper care ensures the longevity and hygiene of your door jumper:

- **Cleaning the Seat Pad:** The fabric seat pad is machine-washable. Refer to the care label for specific washing instructions.
- **Cleaning the Frame:** Wipe down the plastic and metal components of the frame with a damp cloth and mild soap. Rinse thoroughly and air dry.
- **Storage:** The lightweight design allows for easy storage. When not in use, detach from the door frame and store in a clean, dry place.



Figure 6: A parent is shown easily carrying the folded door jumper in a bag, emphasizing its lightweight and portable design for travel or storage.

TROUBLESHOOTING

If you encounter any issues, refer to the following:

- **Jumper feels unstable:** Ensure the clamp is fully engaged and the door frame meets the specified dimensions. Re-check all connections.
- **Baby's feet not touching the floor:** Adjust the strap to lower the seat. The baby's toes should lightly touch the floor.
- **Baby not engaging with toys:** Try repositioning the toys or attaching different toys to the loops to maintain interest.

PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	10410
Product Dimensions	13.8 x 16.9 x 76 inches (assembled)
Item Weight	4.42 pounds
Maximum Weight Recommendation	26 lbs (12 kg)
Target Gender	Unisex
Material Type	Metal, Plastic, Fabric (40% metal, 50% fabric, 10% plastic)
Care Instructions	Machine-washable seat pad
Age Range (Description)	6 Months and Up (when baby can sit up unassisted)

WARRANTY AND SUPPORT

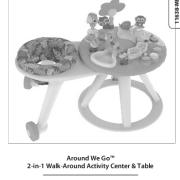
Bright Starts products are manufactured to high-quality standards. For specific warranty details, please refer to the product packaging or contact Bright Starts customer service.

For further assistance, product support, or to inquire about replacement parts, please visit the official Bright Starts website or contact their customer service department directly.

© 2025 Bright Starts. All rights reserved.

Related Documents - 10410

 <p>Bright Starts Bounce Baby 2-in-1 Activity Jumper & Table User Manual Comprehensive user manual for the Bright Starts Bounce Baby 2-in-1 Activity Jumper & Table. Includes safety warnings, assembly instructions, care, and cleaning guides for this baby activity center.</p>	
 <p>Bright Starts Winnie the Pooh Once Upon a Bounce Door Jumper - User Manual & Safety Guide Comprehensive user manual and safety guide for the Bright Starts Winnie the Pooh Once Upon a Bounce Door Jumper. Includes assembly instructions, usage warnings, and care tips.</p>	

 <p>Disney Baby bright starts</p> <p>DISNEY THE LITTLE MERMAID SEA OF ACTIVITIES JUMPER</p> <p>Activity Center • Centre de Actividades</p> <p>Activité pour bébé • Centro de Actividades</p> <p>Actividad para bebé • Centro de Actividades</p> <p>brightstarts.com</p> <p>14721-MEWS</p>	<p>Disney The Little Mermaid Sea of Activities Jumper - User Manual</p> <p>User manual for the Disney The Little Mermaid Sea of Activities Jumper by Bright Starts. Includes safety warnings, assembly instructions, care and cleaning information, and parts list.</p>
 <p>Disney Baby bright starts</p> <p>STITCH Little 'Ohana™</p> <p>Activity Center • Centre de Actividades</p> <p>Activité pour bébé • Centro de Actividades</p> <p>Actividad para bebé • Centro de Actividades</p> <p>brightstarts.com</p> <p>14718-MEWS</p>	<p>Bright Starts STITCH Little 'Ohana™ Activity Center - User Manual</p> <p>Comprehensive user manual and operating instructions for the Bright Starts STITCH Little 'Ohana™ Activity Center. Learn about safety, assembly, care, battery information, and parts.</p>
 <p>bright starts</p> <p>Around We Go™</p> <p>2-in-1 Walk-Around Activity Center & Table</p> <p>Activity Center • Centre de Actividades</p> <p>Activité pour bébé • Centro de Actividades</p> <p>Actividad para bebé • Centro de Actividades</p> <p>brightstarts.com</p> <p>11638-MEWSC, 12664-MEWSC</p>	<p>Bright Starts Around We Go 2-in-1 Walk-Around Activity Center & Table User Manual and Assembly Guide</p> <p>Comprehensive user manual and assembly guide for the Bright Starts Around We Go 2-in-1 Walk-Around Activity Center & Table. Includes safety warnings, battery information, care instructions, parts list, and step-by-step assembly instructions. Model numbers: 11638-MEWSC, 12664-MEWSC.</p>
 <p>Disney Baby bright starts</p> <p>Winnie the Pooh Once Upon a Walk™ Walker</p> <p>Walker • Andador • Andador</p> <p>Activity Center • Centre de Actividades</p> <p>Activité pour bébé • Centro de Actividades</p> <p>Actividad para bebé • Centro de Actividades</p> <p>brightstarts.com</p> <p>14708-MEWS</p>	<p>Bright Starts Winnie the Pooh Once Upon a Walk Walker User Manual</p> <p>User manual for the Bright Starts Winnie the Pooh Once Upon a Walk Walker, featuring safety guidelines, assembly instructions, care tips, and product details. Ensure safe use for your child.</p>