

[Manuals.plus](#) /

> [Citizen](#) /

> Citizen Men's Eco-Drive Weekender Garrison Field Watch User Manual

## Citizen AW0050-82E

# Citizen Men's Eco-Drive Weekender Garrison Field Watch User Manual

Model: AW0050-82E

## INTRODUCTION

---

This manual provides detailed instructions for the proper use, setup, and maintenance of your Citizen Men's Eco-Drive Weekender Garrison Field Watch, Model AW0050-82E. Designed for durability and precision, this timepiece features Citizen's innovative Eco-Drive technology, which harnesses light energy to power the watch, eliminating the need for battery replacement. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.





Image: Front view of the Citizen Eco-Drive Weekender Garrison Field Watch. This image displays the watch's black dial with prominent white Arabic numerals, luminous hands, and a day/date display at the 3 o'clock position. The watch is encased in a silver-tone stainless steel case and features a matching stainless steel bracelet.

## SETUP AND INITIAL USE

---



Image: The Citizen Eco-Drive Weekender Garrison Field Watch presented within its official black and white box, indicating the initial unboxing experience.

## 1. Initial Charging

Your Eco-Drive watch is powered by light. Upon receiving your watch, it may not be fully charged. To ensure proper operation, expose the watch dial to a bright light source (natural sunlight is ideal) for several hours. Avoid placing the watch in direct sunlight for prolonged periods in extremely hot environments, as this may cause damage. A fully charged watch can operate for an extended period in darkness.

## 2. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (located on the right side of the watch case) out to the second click

position. The second hand will stop.

2. **Set the time:** Rotate the crown to set the hour and minute hands. To ensure the AM/PM is correctly set for the date change, advance the time past 12 o'clock. If the date changes, it is midnight (AM). If it does not change, it is noon (PM).
3. **Set the day and date:** Push the crown in to the first click position. Rotate the crown clockwise to set the date and counter-clockwise to set the day. Do not attempt to set the date between 9:00 PM and 1:00 AM, as this may damage the movement.
4. **Push in the crown:** Once the time, day, and date are set, push the crown back in to the normal position. The second hand will resume movement.



Image: Close-up view of the watch dial, specifically pointing out the day and date window. This image illustrates the clear legibility of the day (e.g., "MON") and date (e.g., "7") indicators, which are positioned at 3 o'clock.

### 3. Adjusting the Watch Band

The stainless steel bracelet can be adjusted by adding or removing links. This procedure typically requires specialized tools and is best performed by a qualified jeweler or watch technician to prevent damage to the band or watch. Ensure the band fits comfortably on your wrist, allowing for slight movement without being too loose or too tight.

## OPERATING YOUR WATCH

---

### Basic Timekeeping

Your Citizen Eco-Drive watch is designed for accurate timekeeping. The hour, minute, and second hands continuously display the current time. The day and date display automatically advances at midnight, provided the time is set correctly.

### Luminous Features

The hands and hour markers on your watch are treated with a luminous material that absorbs light and glows in the dark. For optimal luminosity, expose the watch to a bright light source for a few minutes before entering a dark environment. The glow intensity and duration will vary depending on the exposure time and light source.

### Water Resistance

This watch is water resistant to 100 meters (330 feet). This rating makes it suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or pushers while the watch is wet.

## MAINTENANCE

---

### Charging Guidelines

To maintain continuous operation, ensure your Eco-Drive watch is regularly exposed to light. If the watch is stored in darkness for an extended period, it may stop. Simply expose it to light to restart and recharge. Avoid prolonged exposure to extreme temperatures (below 0°C/32°F or above 60°C/140°F) as this can affect the watch's performance and battery life.

### Cleaning Your Watch

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt, dust, and moisture. For the stainless steel bracelet, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

### Storage

When not wearing your watch, store it in a location where it can receive some light, such as on a dresser or near a window, to keep it charged. If storing for a very long period, ensure it is fully charged before storage to prevent deep discharge.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Insufficient charge.	Expose the watch dial to bright light (natural or artificial) for several hours to fully charge.
Time or date is incorrect.	Time/date not set properly or crown is not fully pushed in.	Refer to the "Setting the Time and Date" section to reset. Ensure the crown is fully pushed in after setting.
Luminous hands/markers are not glowing.	Insufficient light exposure.	Expose the watch to a strong light source for a few minutes to activate the luminescence.
Condensation inside the crystal.	Exposure to extreme temperature changes or water ingress.	Immediately take the watch to an authorized Citizen service center for inspection and repair. Do not attempt to dry it yourself.

## SPECIFICATIONS

- **Model Number:** AW0050-82E
- **Movement:** Eco-Drive (Caliber J800)
- **Case Material:** Stainless Steel
- **Dial Color:** Black
- **Dial Features:** Arabic Markers, Luminous Hands and Markers
- **Crystal:** Mineral Crystal
- **Case Diameter:** Approximately 43mm
- **Water Resistance:** 100 Meters (330 feet)
- **Functions:** 3-Hand, Day / Date
- **Power Source:** Light-powered (Eco-Drive), never needs a battery replacement.
- **Product Dimensions:** 3.94 x 4.88 x 4.33 inches; 12.8 ounces

## WARRANTY AND SUPPORT

Your Citizen Eco-Drive Weekender Garrison Field Watch comes with a **5-Year Limited Warranty**. This warranty covers manufacturing defects under normal use. For detailed terms and conditions, please refer to the warranty information provided with your purchase or visit the official Citizen website.

For technical support, service, or warranty claims, please contact Citizen customer service or visit an authorized Citizen service center. Do not attempt to repair the watch yourself, as this may void the warranty.

You can find additional resources and support on the official Citizen website: [www.citizenwatch.com](http://www.citizenwatch.com)

