

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bialetti](#) /
- › [Bialetti Easy Timer Electric Moka Pot - Model 6093 - Instruction Manual](#)

Bialetti 6093

Bialetti Easy Timer Electric Moka Pot - Model 6093

Instruction Manual

WELCOME TO YOUR BIALETTI EASY TIMER ELECTRIC MOKA POT

The Bialetti Easy Timer Electric Moka Pot, model 6093, is designed to bring the authentic taste of Italian coffee directly to your home. This electric Moka pot combines traditional brewing with modern convenience, featuring a programmable timer to ensure your coffee is ready when you are. Made from durable stainless steel, it guarantees a high-quality coffee experience.



Image: The Bialetti Easy Timer Electric Moka Pot, showcasing its sleek design and integrated digital timer display.

SETUP AND FIRST USE

Unpacking and Initial Cleaning

1. Carefully remove all components from the packaging.
2. Wash the upper chamber, filter funnel, and water boiler with warm water and mild detergent. Rinse

thoroughly to remove any residue. Do not immerse the electrical base in water.

3. Dry all parts completely before assembly.

First Brew (Seasoning the Pot)

To season your Moka pot and remove any metallic taste, perform a few initial brews with just water or a small amount of inexpensive coffee that will be discarded.

1. Fill the water boiler with cold water up to the safety valve.
2. Insert the filter funnel. Add a small amount of ground coffee (or leave empty for water-only seasoning).
3. Screw the upper chamber firmly onto the base.
4. Place the Moka pot onto the electric base and plug it in.
5. Allow the coffee maker to complete a full brewing cycle.
6. Discard the brewed liquid. Repeat this process 2-3 times.



Image: The Bialetti Easy Timer Electric Moka Pot disassembled, illustrating its main components for cleaning and assembly.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Unscrew the upper chamber from the water boiler.
2. Fill the water boiler with cold water up to the safety valve. Do not overfill.
3. Insert the filter funnel into the water boiler.
4. Fill the filter funnel with ground coffee. Do not tamp the coffee. Level the coffee gently.
5. Screw the upper chamber firmly onto the water boiler. Ensure a tight seal to prevent leaks.
6. Place the assembled Moka pot onto the electric base.
7. Plug the power cord into an electrical outlet.
8. Press the power button to start brewing immediately, or proceed to set the timer.

Setting the Timer

The Bialetti Easy Timer allows you to program your coffee to brew at a specific time.

1. After preparing the Moka pot as described above, ensure it is placed on the electric base and plugged in.
2. Press the 'TIMER' button. The display will show the current time setting.
3. Use the '+' and '-' buttons (often integrated with 'MODE' or 'TIMER' button presses) to adjust the desired brewing time.
4. Confirm the time by pressing the 'TIMER' button again or waiting a few seconds for the setting to save automatically.
5. The coffee maker will automatically start brewing at the set time.

Key Features

- Programmable with automatic shut-off.
- High-definition LED display.
- Audible signal for start or stop.
- Keeps coffee warm for 30 minutes.



Image: A detailed view of the electric base and control panel, highlighting the digital display and control buttons for timer and mode settings.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Bialetti Easy Timer Electric Moka Pot and ensure consistent coffee quality.

Daily Cleaning

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Unscrew the upper chamber from the water boiler.
3. Discard used coffee grounds from the filter funnel.
4. Wash the upper chamber, filter funnel, and water boiler with warm water. Avoid using harsh detergents or abrasive materials, as these can damage the aluminum and affect coffee flavor.

5. Rinse all parts thoroughly.

6. Dry all components completely before reassembling or storing. Do not reassemble while wet.

Important Notes

- Do not wash the electric base in water or any other liquid. Wipe it clean with a damp cloth if necessary.
- Regularly check the rubber gasket and filter plate for wear and tear. Replace them if they appear damaged to maintain optimal performance.
- Do not use steel wool or other abrasive cleaners on any part of the Moka pot.



Image: The Bialetti Easy Timer Electric Moka Pot from a side angle, illustrating its complete form for general reference during maintenance.

TROUBLESHOOTING

If you encounter issues with your Bialetti Easy Timer Electric Moka Pot, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew or brews slowly.	Insufficient water; coffee too finely ground or tamped; clogged filter; loose assembly.	Ensure water is filled to the valve. Use medium-fine grind, do not tamp. Clean filter. Tighten upper chamber.
Water leaks from the side.	Loose assembly; worn gasket; damaged threads.	Ensure upper chamber is screwed on tightly. Replace worn gasket.
Coffee tastes burnt or bitter.	Over-extraction; dirty pot; incorrect coffee-to-water ratio.	Reduce heat (if applicable, though electric is fixed); clean pot thoroughly; adjust coffee amount.
Timer not working.	Incorrect setting; power interruption.	Re-set the timer according to instructions. Ensure continuous power supply.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Bialetti
Model Number	0006093 (6093)
Color	Black/Grey
Product Dimensions (L x W x H)	25 x 22 x 1 cm; 1.2 kilograms (8.7D x 9.8W x 0.4H centimeters)
Capacity	180 Milliliters (6 Cups)
Power	365 Watts
Voltage	230 Volts
Material	Stainless Steel
Automatic Shut-off Function	No (Programmable feature includes auto shut-off after brewing)
Noise Level	44 Decibels
Special Feature	Programmable
Item Weight	1.2 Kilograms
Spare Parts Availability	Information unavailable on spare parts
ASIN	B016TLZ0LC
Date First Available	13 April 2022

Feature	Detail
Battery	1 Lithium-ion battery required
Discontinued by Manufacturer	No
Language	English
Manufacturer	Bialetti
Coffee Maker Type	Moka Pot
Style	Classic
Specific Uses for Product	Espresso-based beverages
Recommended Uses for Product	Travel

WARRANTY INFORMATION

Bialetti products are manufactured to high-quality standards. This product is covered by the manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, product inquiries, or technical support, please contact Bialetti customer service. Contact information can typically be found on the official Bialetti website or within the product packaging. When contacting support, please have your product model number (6093) and purchase details ready.