

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Electrolux](#) /

› [Electrolux C Bags and After Filters: Installation and Maintenance Guide](#)

Electrolux AX-AY-ABHI-94412

# Electrolux C Bags and After Filters: Installation and Maintenance Guide

Model: AX-AY-ABHI-94412

## INTRODUCTION

This manual provides instructions for the proper installation and maintenance of Electrolux Style C vacuum bags and after filters. These components are designed to fit various plastic Aerus/Electrolux canister vacuum models, ensuring optimal performance and filtration.

**Product Contents:** 24 Electrolux Style C 4-Ply Bags and 2 After Filters.

## COMPATIBILITY

These bags and filters are compatible with the following plastic Aerus/Electrolux canister vacuum models:

- C141A, C141F, C152b, C101A, C101G, C101H, C101J, C101L
- C102A, C102D, C102G, C102J, C151D, C151G, C153C, C153D
- C141B, C141D, C101K, C141C, C141E, C141G, C152C, C102K
- C153A, C152E, C151C, 2100, Epic 6500, Epic 6000, LE
- Ambassador, Special Edition, Classic

Refer to your vacuum cleaner's owner's manual for specific instructions regarding bag and filter replacement for your model.

## INSTALLATION INSTRUCTIONS

### Important Safety Note:

Always turn off and unplug your vacuum cleaner from the power outlet before attempting to change bags or filters to prevent electric shock or injury.

### Installing the Vacuum Bag (Style C)

1. **Open Vacuum Compartment:** Locate and open the bag compartment on your Electrolux canister vacuum. This usually involves releasing latches or clips.

2. **Remove Old Bag:** Carefully remove the full vacuum bag. Most Style C bags are self-sealing; gently pull the cardboard collar to close the opening before removal to contain dust. Dispose of the old bag responsibly.
3. **Insert New Bag:** Take a new Electrolux Style C bag. Align the cardboard collar of the new bag with the bag holder inside the vacuum compartment. Ensure the bag is fully seated and the opening is securely connected to the vacuum's intake port.
4. **Position Bag:** Gently unfold the bag inside the compartment, ensuring it is not creased or obstructing the compartment closure.
5. **Close Compartment:** Close the vacuum bag compartment securely until the latches or clips engage.



Image: Packaging for Electrolux Style C vacuum bags and an after filter. The bags are brown, self-sealing, and labeled "Style C" and "Multi-Filter". The white after filter is visible in clear plastic packaging.

## Installing the After Filter

1. **Locate Filter Compartment:** Refer to your vacuum's owner's manual to locate the after filter compartment. This is typically near the exhaust port of the vacuum.
2. **Remove Old Filter:** Open the filter compartment and carefully remove the old, dirty after filter.
3. **Insert New Filter:** Place the new after filter into the compartment, ensuring it is correctly oriented and seated.
4. **Close Compartment:** Close the filter compartment securely.

## OPERATING CONSIDERATIONS

---

Once the new bag and filter are installed, your vacuum cleaner is ready for use. Monitor the vacuum's suction power and the bag fullness indicator (if present on your model) to determine when the bag needs replacement.

## MAINTENANCE AND REPLACEMENT

---

- **Vacuum Bag Replacement:** Replace the vacuum bag when it is full, or when you notice a decrease in suction power. Do not overfill the bag, as this can strain the vacuum motor and reduce efficiency.
- **After Filter Replacement:** It is recommended to change the after filter approximately every 6 months, or more frequently if the vacuum is used heavily or in dusty environments. A dirty after filter can reduce air flow and filtration efficiency.

## TROUBLESHOOTING

---

If you experience issues after replacing bags or filters, consider the following:

- **Reduced Suction:**
  - Ensure the new bag is correctly installed and fully seated in the bag holder.
  - Check that the bag compartment is securely closed.
  - Verify the after filter is clean and properly installed.
  - Inspect the vacuum hose and attachments for any blockages.
- **Dust Leakage:**
  - Confirm the self-sealing mechanism of the bag engaged properly during installation.
  - Ensure the bag is not torn or damaged.
  - Check that all vacuum compartments (bag and filter) are tightly sealed.

For persistent issues, consult your vacuum cleaner's original owner's manual or contact the vacuum manufacturer's support.

## PRODUCT SPECIFICATIONS

---

<b>Product Type</b>	Vacuum Bags & After Filters
<b>Bag Style</b>	Electrolux Style C (4-Ply)
<b>Quantity</b>	24 Bags, 2 After Filters
<b>Model Number</b>	AX-AY-ABHI-94412

<b>Item Weight</b>	5 ounces (total package)
<b>Product Dimensions</b>	9 x 6 x 2 inches (package)
<b>Material</b>	Plastic (filter), Paper/Synthetic (bags)

## WARRANTY INFORMATION

---

Please note that this product is not an Aerus OEM (Original Equipment Manufacturer) product. It is not covered under any Aerus manufacturer's warranty.

It is advisable to check your vacuum cleaner manufacturer's warranty regarding the use of non-OEM parts. The seller provides no warranty or guarantee with regard to this product or its compatibility with your Aerus product beyond the initial fitment as described.

The Aerus, GUARDIAN, TURBO, LUX, ELECTROLUX, SIDEKICK brand names and logos are registered trademarks of their respective owners. Any use of these brand names or model designations for this product is made solely for purposes of demonstrating compatibility.

## SUPPORT

---

For further assistance with the installation or use of these bags and filters, please refer to the owner's manual of your specific Electrolux or Aerus vacuum cleaner model.

If you have questions regarding this specific product, please contact the seller directly through the platform where it was purchased.