

[Manuals.plus](#) /

› [DOMO](#) /

› Domo DO42325PC Stainless Steel Pressure Cooker Instruction Manual

DOMO DO42325PC

Domo DO42325PC Stainless Steel Pressure Cooker

INSTRUCTION MANUAL

Product Overview

The Domo DO42325PC is a high-capacity stainless steel pressure cooker and sterilizer, ideal for preserving food and preparing large meals. Its robust design and intelligent features ensure efficient and safe operation.

Key Features:

- Automatic timer activation upon reaching set temperature.
- Powerful 2000 Watt heating element.
- Large 27-liter capacity (accommodates approximately 14 to 18 jars).
- Adjustable timer up to 120 minutes or continuous heating mode.
- Precise temperature control up to 1000C.
- Backlit LCD screen with user-friendly navigation.
- Internal tap for convenient liquid dispensing.
- Audible signal upon completion of the cycle.
- Integrated overheat and dry-boil protection for safety.

Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep out of reach of children and pets.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Always unplug the appliance from the power outlet when not in use and before cleaning.

- Exercise extreme caution when moving an appliance containing hot liquids.
- Ensure the tap is securely closed before operation to prevent leaks.
- Do not operate the appliance empty (dry-boil protection is present, but it's best practice to avoid).
- Allow the appliance to cool completely before cleaning or storing.

Components

Familiarize yourself with the main components of your Domo pressure cooker:

- **Main Unit:** Stainless steel pot with integrated heating base.
- **Lid:** Securely fits on top to seal the unit.
- **Control Panel:** Features an LCD screen and rotary knobs for setting temperature and timer.
- **Tap/Spigot:** Located at the bottom for dispensing liquids.
- **Handles:** For safe transportation of the unit.
- **Rack/Grid:** For placing jars during sterilization.



Figure 1: Front view of the Domo DO42325PC Pressure Cooker, showing the main stainless steel body, black lid, and the control panel with integrated tap.



Figure 2: Detailed view of the control panel, displaying the digital LCD screen with temperature and timer settings, and the two rotary knobs for adjustments.



Figure 3: Side view of the pressure cooker, highlighting the capacity (27L) and power (2000W) labels, along with an illustration of fruits and vegetables, indicating its use for preserving.



Figure 4: Top-down view of the pressure cooker's interior, showing various sizes of canning jars placed on the included rack, demonstrating its sterilization capability.

Setup

1. **Unpacking:** Carefully remove all packaging materials. Inspect the appliance for any damage.
2. **Initial Cleaning:** Before first use, clean the interior of the pot and all removable parts (lid, rack) with warm soapy water. Rinse thoroughly and dry. It is recommended to rinse the pot and avoid draining water through the tap during this initial cleaning to prevent any metal dust from settling in the tap mechanism.
3. **Placement:** Place the pressure cooker on a flat, stable, and heat-resistant surface, away from walls or other appliances to ensure proper ventilation. Ensure the power cord can reach a suitable electrical outlet without being strained.
4. **Power Connection:** Plug the appliance into a grounded 230V electrical outlet.

Operating Instructions

1. **Prepare Contents:** Place your jars (for sterilizing) or ingredients (for cooking) inside the pot. If sterilizing, ensure the rack is at the bottom and jars are arranged to allow water circulation.
2. **Add Water:** Fill the pot with the required amount of water. For sterilization, ensure water covers the jars as per your recipe or up to the recommended fill line.
3. **Close Lid:** Securely place the lid on the pot.
4. **Set Temperature:** Use the left rotary knob on the control panel to set the desired temperature (up to 1000C). The LCD screen will display the set temperature and the current temperature.
5. **Set Timer:** Use the right rotary knob to set the desired cooking or sterilization time (up to 120 minutes). You can also select continuous heating mode if needed.
6. **Start Operation:** The timer will automatically start counting down once the set temperature is reached. The appliance will begin heating.
7. **Monitoring:** The LCD screen allows you to monitor both the set and current temperatures, as well as the remaining time.
8. **Completion:** Once the set time has elapsed, the appliance will emit an audible signal and automatically switch off.
9. **Cool Down:** Allow the appliance to cool down before opening the lid and carefully removing the contents.
10. **Dispensing (if applicable):** If using the tap, ensure the contents have cooled sufficiently before opening the tap to dispense liquids.

Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your appliance.

- **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Interior Cleaning:** Wash the interior of the stainless steel pot with warm soapy water and a soft sponge. Rinse thoroughly.
- **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the stainless steel finish.
- **Lid and Rack:** Wash the lid and any removable racks or grids with warm soapy water. Rinse and dry completely.
- **Tap Cleaning:** Ensure the tap mechanism is clean and free of any residue. You can run clean water through it after each use.
- **Storage:** Store the appliance in a dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your Domo pressure cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Heating is uneven or stops prematurely.	Overheat protection activated; insufficient water; internal fault.	Ensure adequate water level. Allow the unit to cool down and try again. If problem persists, contact customer support.
Tap is leaking or clogged.	Residue buildup; tap not fully closed.	Clean the tap thoroughly. Ensure it is fully closed before operation.
Audible signal does not sound at end of cycle.	Malfunction.	Note the time manually. Contact customer support if this feature is critical for your use.
LCD screen is not displaying correctly.	Power issue; internal fault.	Unplug and re-plug the unit. If the issue persists, contact customer support.

Technical Specifications

Specification	Value
Brand	DOMO
Model Number	DO42325PC
Color	Stainless Steel
Product Dimensions (L x W x H)	39.3 x 43 x 50.3 cm
Capacity	27 Liters
Power	2000 Watts
Voltage	230 Volts
Material	Stainless Steel
Automatic Shut-off Function	No (Timer-based shut-off)
Special Feature	Pressure Cooker / Sterilizer
Item Weight	4.1 Kilograms
Control Method	Tactile (Knobs)

Warranty and Support

This Domo appliance is manufactured with high-quality materials and undergoes strict quality control. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Domo website.

For technical support, spare parts, or service inquiries, please contact Domo customer service. Keep your purchase receipt and model number (DO42325PC) handy when contacting support.

© 2023 DOMO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question