

Jensen CD-60C

Jensen CD-60C Portable Personal CD Player

Instruction Manual

INTRODUCTION

Thank you for purchasing the Jensen CD-60C Portable Personal CD Player. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before operation and retain it for future reference.

SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the unit to strong impacts.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Use only the specified power source (AC adapter or batteries).
- Prolonged listening at high volume levels can cause hearing damage. Adjust volume to a moderate level.
- Keep the unit away from water and other liquids.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Jensen CD-60C CD player.



Figure 1: Top view of the Jensen CD-60C Portable CD Player with the lid open, showing the CD compartment and control buttons.



Figure 2: Side view of the Jensen CD-60C Portable CD Player, highlighting the volume control, headphone jack, and DC IN 4.5V power input.

Controls and Features:

- **PLAY/PAUSE Button:** Starts or pauses CD playback.
- **STOP Button:** Stops CD playback.
- **SKIP/SEARCH Buttons:** Skips to the next/previous track or fast forwards/rewinds within a track.
- **MODE Button:** Selects playback modes (Repeat 1, Repeat All, Random).
- **PROG Button:** Programs tracks for custom playback order.
- **BASS BOOST Switch:** Enhances low-frequency audio.
- **VOLUME Control:** Adjusts audio output level.
- **PHONES Jack:** 3.5mm stereo headphone output.
- **DC IN 4.5V Jack:** Power input for optional AC adapter.
- **LCD Display:** Shows track number, time, and playback status.
- **FM Radio Tuner:** Integrated FM radio functionality.

SETUP

1. Powering the Unit

The CD-60C can be powered by batteries or an optional AC adapter.

Battery Installation:

1. Open the battery compartment cover on the bottom of the unit.
2. Insert the required number of 'AA' size batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

AC Adapter (Optional):

- Connect a compatible 4.5V DC AC adapter (not included) to the DC IN 4.5V jack on the side of the unit.
- Plug the AC adapter into a standard wall outlet.
- When using the AC adapter, batteries are automatically disconnected.

2. Connecting Headphones

Insert the stereo earbuds (included) or your preferred 3.5mm stereo headphones into the PHONES jack on the side of the unit.

OPERATING INSTRUCTIONS

1. Loading a CD

1. Gently press the OPEN button to lift the CD compartment lid.
2. Place a CD (or CD-R/RW disc) onto the center spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

2. CD Playback

- Press the **PLAY/PAUSE** button to start playback. The track number and elapsed time will appear on the LCD display.
- Press **PLAY/PAUSE** again to pause playback. Press it once more to resume.
- Press the **STOP** button to stop playback.
- To skip to the next track, press the **SKIP/SEARCH FORWARD** button (>>|).
- To go back to the beginning of the current track, press the **SKIP/SEARCH BACKWARD** button (|<<) once. Press it twice to go to the previous track.
- To fast forward, press and hold the **SKIP/SEARCH FORWARD** button (>>|).
- To fast rewind, press and hold the **SKIP/SEARCH BACKWARD** button (|<<).
- Adjust the **VOLUME** control to your desired listening level.

3. Anti-Skip Protection

The Jensen CD-60C features 60-second anti-skip protection to ensure uninterrupted audio during minor shocks or vibrations. This feature is automatically active during CD playback.

4. Bass Boost Function

Slide the **BASS BOOST** switch to the ON position to enhance the bass frequencies for a richer sound experience. Slide it to OFF to disable.

5. Playback Modes (Repeat/Random)

Press the **MODE** button repeatedly to cycle through the following playback options:

- **REPEAT 1:** Repeats the current track.
- **REPEAT ALL:** Repeats all tracks on the disc.

- **RANDOM:** Plays tracks in a random order.
- (No indicator): Normal playback.

6. Programmable Playback

1. In STOP mode, press the **PROG** button. The program indicator will flash.
2. Use the **SKIP/SEARCH** buttons to select your desired first track.
3. Press **PROG** again to confirm the selection.
4. Repeat steps 2 and 3 to add more tracks to your program (up to 20 tracks).
5. After programming, press the **PLAY/PAUSE** button to start programmed playback.
6. To clear the program, press the **STOP** button twice.

7. FM Radio Operation

The CD-60C includes an integrated FM radio tuner.

- Ensure no CD is playing.
- Press the **MODE** button to switch to FM radio mode. The frequency will appear on the LCD display.
- Use the **SKIP/SEARCH** buttons to tune to your desired FM station. A short press will fine-tune, while a long press will auto-scan for the next available station.
- Adjust the **VOLUME** control as needed.

MAINTENANCE

Cleaning the Unit:

- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- To clean the CD lens, use a specialized CD lens cleaner disc (not included).

Battery Care:

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.

CD Care:

- Handle CDs by their edges to avoid fingerprints and scratches.
- Store CDs in their cases when not in use.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly inserted. AC adapter not connected or faulty.	Replace batteries, ensuring correct polarity. Check AC adapter connection and power outlet.
No sound from headphones.	Headphones not properly connected. Volume too low. CD not playing.	Ensure headphones are fully plugged in. Increase volume. Press PLAY/PAUSE.
CD skips or stops.	CD is dirty or scratched. Unit is subjected to strong vibration.	Clean the CD. Avoid excessive movement during playback.

Problem	Possible Cause	Solution
CD does not play. "NO DISC" error.	No CD inserted or CD inserted incorrectly. Disc is unreadable.	Insert a CD correctly with the label side up. Try a different CD. Ensure disc type is CD or CD-R/RW.
Poor FM radio reception.	Weak signal. Interference.	Adjust the unit's position for better reception. Move away from other electronic devices.

SPECIFICATIONS

Feature	Detail
Model	CD-60C
Brand	Jensen
Compatible Disc Types	CD, CD-R/RW
Anti-Skip Protection	60 Seconds
Audio Features	Bass Boost
Playback Modes	Repeat 1, Repeat All, Random, Programmable Memory
Radio Tuner	FM
Headphone Jack	3.5mm Stereo
Power Source	4.5V DC (AC adapter, not included) or Batteries (AA x 2, not included)
Product Dimensions (LxWxH)	26.54 x 19.3 x 6.35 cm
Item Weight	90.7 g

WARRANTY INFORMATION

Jensen products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact Jensen customer support.

CUSTOMER SUPPORT

Should you encounter any issues or have questions regarding your Jensen CD-60C Portable Personal CD Player, please contact Jensen customer support for assistance. Contact details can typically be found on the product packaging or the official Jensen website.