

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aiwa](#) /

› [Aiwa XP-655 Portable Compact Disc Player User Manual](#)

Aiwa XP-655

Aiwa XP-655 Portable Compact Disc Player User Manual

Model: XP-655

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Aiwa XP-655 Portable Compact Disc Player and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Do not expose the unit to rain or moisture.
- Do not open the casing. Refer all servicing to qualified service personnel.
- Avoid extreme temperatures. Do not place the unit near heat sources or in direct sunlight.
- Use only specified power sources (batteries or optional AC adapter).
- Do not use the unit while driving or cycling, as it may cause a traffic hazard.
- Prolonged listening at high volume levels can cause permanent hearing damage.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Aiwa XP-655 Portable Compact Disc Player
- Earphones
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Aiwa XP-655 Portable Compact Disc Player.

Front View and Controls

This image displays the front of the Aiwa XP-655 Portable Compact Disc Player. Visible features include the circular disc lid, a small LCD display, and control buttons such as Play/Pause, Stop, Skip Forward, Skip Backward, and Volume Up/Down. The overall design is compact and dark grey.

- **OPEN Button:** Press to open the disc compartment lid.
- **PLAY/PAUSE Button (▶ / -):** Press to start playback or pause during playback.

- **STOP Button (■):** Press to stop playback.
- **SKIP/SEARCH Buttons (◀◀ / ▶▶):** Press briefly to skip tracks. Press and hold to search within a track.
- **VOLUME Control:** Adjusts the audio output level.
- **DISPLAY:** Shows track number, playback time, and other status indicators.

Side/Rear View and Connections



This image shows a side view of the Aiwa XP-655 Portable Compact Disc Player, highlighting the headphone output jack and the DC power input port. These are essential for connecting audio accessories and external power sources.

- **PHONES Jack:** Connect your earphones or headphones here.
- **DC IN 4.5V Jack:** Connect an optional AC power adapter (not included) for continuous power.

SETUP

 
Power Supply

Your Aiwa XP-655 can be powered by batteries or an optional AC adapter.

Using Batteries

The unit requires four (4) AA batteries (not included).

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert four AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.



This diagram illustrates the proper method for installing AA batteries into the player's battery compartment, emphasizing the correct alignment of positive and negative terminals.

Using an AC Adapter (Optional)

For extended use, an optional 4.5V DC AC adapter (not included) can be used. Connect the adapter to the DC IN 4.5V jack on the unit and plug it into a standard wall outlet.

Connecting Headphones

Plug the included earphones or your preferred headphones into the PHONES jack on the side of the unit.

Car Operation (Optional Accessory)

This unit can be operated on an automobile power system with the use of the optional accessory car kit CKS-C5 and the optional car audio cassette adaptor CAP-5 (included with some packages). Refer to the instructions provided with the CKS-C5 car kit for detailed installation and operation.

OPERATING INSTRUCTIONS

Loading a Compact Disc

1. Press the **OPEN** button to open the disc compartment lid.
2. Hold the CD by its edges and place it onto the center spindle with the label side facing up. Gently press down until it clicks into place.
3. Close the disc compartment lid firmly until it latches.



This image demonstrates the correct way to load a compact disc into the player, ensuring the disc is properly seated on the center spindle with the printed label facing upwards.

Basic Playback

- **To Play:** Press the **PLAY/PAUSE (▶/-)** button. Playback will start from the first track or where it was last paused.
- **To Pause:** Press the **PLAY/PAUSE (▶/-)** button during playback. Press again to resume.
- **To Stop:** Press the **STOP (■)** button.
- **To Skip Tracks:** Press **SKIP/SEARCH (▶▶)** to go to the next track. Press **SKIP/SEARCH (◀◀)** to go to the beginning of the current track or the previous track.
- **To Search:** Press and hold **SKIP/SEARCH (▶▶)** or **(◀◀)** during playback to fast forward or rewind within a track.
- **Volume Adjustment:** Use the **VOLUME** control to set your desired listening level.

Advanced Playback Functions (If Available)

Your player may include additional features such as Repeat, Random Play, or Program Play. Refer to the display indicators and any additional buttons on your unit for these functions. Typically, a 'MODE' or 'FUNCTION' button cycles through these options.

MAINTENANCE

Proper care will ensure long-lasting performance from your CD player.

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Lens:** If playback issues occur, the optical lens may be dirty. Use a commercially available CD lens cleaner disc. Do not touch the lens directly.
- **Disc Care:** Handle CDs by their edges. Keep them clean and free from scratches. Store discs in their cases when not in use.
- **Battery Replacement:** Replace all batteries with new ones when the power indicator dims or playback becomes erratic. Remove batteries if the unit will not be used for an extended period.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you experience problems with your player, consult the following table for possible solutions.

Problem	Possible Cause	Solution
No power	Batteries are dead or inserted incorrectly. AC adapter not connected or faulty.	Replace batteries, check polarity. Ensure AC adapter is securely connected and functional.
Disc does not play / "No Disc" error	Disc inserted incorrectly. Disc is dirty or scratched. Laser lens is dirty.	Reinsert disc with label side up. Clean disc. Use a CD lens cleaner.
Skipping or distorted sound	Disc is dirty or scratched. Unit is subject to excessive vibration. Headphones not fully plugged in.	Clean disc. Place unit on a stable surface. Ensure headphone plug is fully inserted.
No sound from headphones	Headphones not connected. Volume too low. Headphones faulty.	Connect headphones. Increase volume. Try different headphones.

SPECIFICATIONS

Feature	Detail
Brand	Aiwa
Model Number	XP-55 AUB (also known as XP-655)
Power Source	4 x AA batteries (DC 6V) or optional 4.5V DC AC adapter
Package Dimensions	11 x 11 x 8 inches
Color	Dark Grey
Connectivity Technology	Auxiliary (for headphones)
Special Features	Compatible with optional car kit CKS-C5 and car audio cassette adaptor CAP-5 for automobile use.
Included Components	Earphones, User Manual

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Aiwa website. Keep your proof of purchase for warranty claims.

Online Support: www.aiwa.co/support (Example link, actual link may vary)