

[manuals.plus](#) /

› [LEICKE](#) /

› [Sharon 4 in 1 Bluetooth Multitouch Keyboard for Android, iOS/Mac OS X, Windows 8 & 10 and Smart TVs | Integrated Touchpad | Geman QWERTZ Layout | With Stand and Protective Bag](#)

LEICKE SI54235

Sharon 4 in 1 Bluetooth Multitouch Keyboard User Manual

Brand: LEICKE | Model: SI54235

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Sharon 4 in 1 Bluetooth Multitouch Keyboard. Designed for versatility, this keyboard integrates a touchpad, making it an ideal accessory for various devices including Android, iOS/Mac OS X, Windows 8 & 10, and Smart TVs.

The keyboard features a durable aluminum housing, a long-lasting battery, and special function keys to enhance your productivity and entertainment experience. Please read this manual carefully to ensure proper use and to maximize the functionality of your device.



Image: Top view of the Sharon 4 in 1 Bluetooth Multitouch Keyboard, highlighting its QWERTZ layout and integrated multitouch touchpad.

PACKAGE CONTENTS

Before you begin, please verify that all items are present in your package:

- Sharon 4 in 1 Bluetooth Multitouch Keyboard (QWERTZ layout)
- USB Charging Cable
- Plastic Stand
- High-quality Protective Bag



Image: The Sharon keyboard package contents, including the keyboard, USB charging cable, foldable stand, and protective carrying bag.

SETUP

1. Charging the Keyboard

The keyboard comes with a built-in rechargeable Lithium Polymer battery. For optimal performance, fully charge the keyboard before first use.

1. Connect the supplied USB charging cable to the charging port on the keyboard.
2. Plug the other end of the USB cable into any standard USB port on a computer, laptop, or a USB wall charger.
3. The charging indicator light on the keyboard will illuminate during charging and turn off when fully charged. A full charge provides up to 45 hours of continuous use or 60 days of standby time.

2. Bluetooth Pairing

The Sharon keyboard uses Bluetooth 3.0 for wireless connectivity, offering a range of up to 10 meters.

1. Ensure the keyboard is charged and powered on. The power switch is typically located on the side or back of the keyboard.
2. Press the "CONNECT" button on the keyboard. The Bluetooth indicator light will start blinking, indicating that the keyboard is in pairing mode.
3. On your device (smartphone, tablet, computer, or Smart TV), navigate to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "Sharon Keyboard" or a similar name from the list of found devices.
6. If prompted, enter the pairing code displayed on your device's screen using the Sharon keyboard, then press Enter.
7. Once paired, the Bluetooth indicator light on the keyboard will stop blinking and remain solid, or turn off, depending on the model. Your keyboard is now ready for use.

3. Using the Stand

The included plastic stand allows you to position your tablet or smartphone at various angles for comfortable viewing and typing.

- Unfold the stand to its desired position. It supports 5 different angles.
- Place your device securely in the stand's groove.
- For transport, the keyboard and stand can be stored together in the provided protective bag.

OPERATING INSTRUCTIONS

1. Compatibility

The Sharon keyboard is designed for broad compatibility across multiple operating systems:

- **iOS:** Apple iPad, iPhone 4, 5, 6, 6 Plus
- **OS X:** Mac Pro, iMac, MacBook, MacBook Pro series with OS X
- **Android:** Devices such as Samsung, Sony Xperia, Huawei, ASUS, Nexus
- **Windows:** Tablets and smartphones with Windows 7, 8, 8.1, 10 (Bluetooth required)
- **Smart TVs:** Compatible with Smart TVs that support Bluetooth keyboards



Image: The Sharon keyboard shown in use with a large monitor, a tablet, and a smartphone, illustrating its versatile compatibility across different device types.

2. Switching Layouts / Operating Systems

To optimize keyboard functionality for different operating systems, you can switch between layouts using the dedicated function keys:

- Press **Fn + Q** for iOS/Mac OS X layout.
- Press **Fn + W** for Android layout.
- Press **Fn + E** for Windows layout.
- Press **Fn + R** for Smart TV layout.



Image: Detailed view of the keyboard's top row, highlighting the function keys (F1-F12) and the dedicated keys for switching between iOS/Mac, Android, Windows, and TV operating system layouts.

3. Touchpad Usage and Gestures

The integrated multitouch touchpad allows for intuitive navigation and control, similar to a laptop's trackpad. It supports various gestures:

- **Single Finger Tap**: Left click / Select.
- **Two Finger Tap**: Right click.
- **Two Finger Scroll**: Drag two fingers up or down to scroll vertically.
- **Pinch to Zoom**: Pinch in or out with two fingers to zoom in or out.
- **Swipe Left/Right with Two Fingers**: Page forward/backward.
- **Three Finger Swipe Up/Down**: Page Up/Page Down.

- **Three Finger Swipe Left/Right:** Move selection.

To activate/deactivate the touchpad, press **Fn + Spacebar**.



Image: Visual guide demonstrating common multitouch gestures for the integrated touchpad, such as single-finger tap for left click, two-finger tap for right click, and pinch gestures for zooming.

4. Special Function Keys

The top row of the keyboard features special function keys (F1-F12) that provide quick access to common commands. These keys often require pressing the **Fn** key simultaneously.

Key Combination	Function
Fn + F1	Home Button
Fn + F2	Search
Fn + F3	Select Language / Change Input Method
Fn + F4	Show/Hide On-screen Keyboard
Fn + F5	Copy

Key Combination	Function
Fn + F6	Cut
Fn + F7	Paste
Fn + F8	Open Standard E-Mail Program
Fn + F9	Music Playback Control
Fn + F10	Volume Down
Fn + F11	Volume Up
Fn + F12	Screen Lock/Unlock

5. Power Management

The keyboard features an intelligent standby mode to conserve battery life. After 15 minutes of inactivity, the keyboard will automatically enter sleep mode. To wake it up, simply press any key. The keyboard is designed for long battery life, offering up to 60 days in standby mode and 45 hours of continuous working time on a single charge.

MAINTENANCE

To ensure the longevity and optimal performance of your Sharon keyboard, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Storage:** When not in use, store the keyboard in the provided protective bag to prevent dust accumulation and scratches.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the keyboard when the low battery indicator appears. If storing for an extended period, charge the battery to about 50% to prevent deep discharge.
- **Avoid Extremes:** Do not expose the keyboard to extreme temperatures, direct sunlight, or high humidity.
- **Handle with Care:** The keyboard has a bending-resistant aluminum housing, but avoid dropping it or applying excessive force.

TROUBLESHOOTING

If you encounter issues with your Sharon keyboard, please refer to the following common solutions:

Problem	Possible Cause	Solution
Keyboard does not turn on.	Battery is depleted.	Charge the keyboard using the supplied USB cable.
Cannot pair the keyboard via Bluetooth.	Keyboard not in pairing mode; Bluetooth off on device; device too far.	Ensure keyboard is charged and powered on. Press the "CONNECT" button. Verify Bluetooth is enabled on your device and that the keyboard is within 10m range. Try restarting both devices.
Keyboard disconnects frequently.	Low battery; interference; device too far.	Recharge the keyboard. Move closer to your device. Avoid strong electromagnetic interference.






Problem	Possible Cause	Solution
Keys are not responding correctly.	Incorrect OS layout selected; software glitch.	Ensure the correct OS layout is selected (Fn + Q/W/E/R). Restart the keyboard and your device.
Touchpad is not working.	Touchpad deactivated; software glitch.	Press Fn + Spacebar to ensure the touchpad is activated. Restart the keyboard and your device.

SPECIFICATIONS

Feature	Detail
Brand	LEICKE
Model Number	SI54235
Product Dimensions	24.4 x 17.1 x 0.6 cm
Item Weight	267 g
Connectivity Type	Bluetooth 3.0
Wireless Range	Up to 10 meters
Battery Type	1 Lithium Polymer battery (included)
Battery Life (Continuous Use)	Up to 45 hours
Battery Life (Standby)	Up to 60 days
Material	Aluminium
Keyboard Layout	German QWERTZ
Operating System Compatibility	iOS, OS X, Android, Windows (7, 8, 8.1, 10), Smart TVs (with Bluetooth)
Included Components	Keyboard, USB Cable, Stand, Protective Bag

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage and how to contact customer support for your LEICKE Sharon 4 in 1 Bluetooth Multitouch Keyboard.

<p>Bedienungsanleitung Smartwatch für Smartphones mit Bluetooth</p>  <p>Produktnummer: WD67269</p>	<p>LEICKE WD67269 Smartwatch Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die LEICKE WD67269 Smartwatch. Enthält Anleitungen zur Einrichtung, Funktionen, technische Daten, Fehlerbehebung und Sicherheitshinweise. Verbindung mit iOS- und Android-Geräten über Bluetooth.</p>
<p>Bedienungsanleitung Smartwatch für Smartphones mit Bluetooth</p>  <p>Produktnummer: WD67260</p>	<p>LEICKE WD67260 Smartwatch User Manual</p> <p>Comprehensive user manual for the LEICKE WD67260 Smartwatch, covering setup, features, troubleshooting, and care instructions for smartphones with Bluetooth connectivity.</p>
<p>Bedienungsanleitung Tragbarer Bluetooth-Lautsprecher</p>  <p>Produktnummer: EP18169</p>	<p>LEICKE EP18169 Tragbarer Bluetooth-Lautsprecher Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für den LEICKE EP18169 tragbaren Bluetooth-Lautsprecher. Enthält technische Daten, Funktionen, Kopplungsanweisungen, Fehlerbehebung und Sicherheitshinweise für optimale Nutzung.</p>
<p>Bedienungsanleitung Bluetooth-Kopfhörer</p>  <p>Produktnummer: EP18154/62</p>	<p>LEICKE Bluetooth-Kopfhörer Bedienungsanleitung EP18154/62</p> <p>Umfassende Bedienungsanleitung für LEICKE Bluetooth-Kopfhörer Modelle EP18154 und EP18162. Enthält technische Daten, Anweisungen zur Kopplung, Musikwiedergabe, Anrufverwaltung, SD-Karten-Modus, Ladehinweise und Sicherheitsinformationen.</p>
<p>Bedienungsanleitung Bluetooth-TWS-Kopfhörer Pro 3 mit ANC</p>  <p>Produktnummer: EP18196</p>	<p>LEICKE Pro 3 TWS ANC Bluetooth Earphones User Manual</p> <p>User manual for LEICKE Pro 3 True Wireless Stereo (TWS) Bluetooth earphones with Active Noise Cancellation (ANC). Learn about package contents, technical specifications, functions like pairing, ANC mode, music control, and safety instructions.</p>