

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UPBRIGHT AV Cable Cord User Manual for Hitachi Sharp Viewcam Camcorders

UPBRIGHT AV Cable Cord

UPBRIGHT AV Cable Cord User Manual

For Hitachi and Sharp Viewcam Camera Camcorders

1. INTRODUCTION

The UPBRIGHT AV Cable Cord is designed to connect compatible Hitachi and Sharp Viewcam camcorders to televisions or other display devices. This cable facilitates the transfer of video and audio signals, allowing you to view recorded footage directly from your camcorder on a larger screen. It features a 3.5mm jack on one end for connection to the camcorder and standard RCA connectors (yellow for video, white for left audio, red for right audio) on the other end for connection to a display device.

2. SETUP

Follow these steps to connect your camcorder to a display device using the UPBRIGHT AV Cable Cord:

- 1. Identify Ports:** Locate the 3.5mm AV output jack on your Hitachi or Sharp Viewcam camcorder. On your television or display device, identify the corresponding RCA input ports, typically labeled 'Video In' (yellow), 'Audio In L' (white), and 'Audio In R' (red).
- 2. Connect to Camcorder:** Insert the 3.5mm jack end of the UPBRIGHT AV Cable Cord firmly into the AV output jack on your camcorder.
- 3. Connect to Display Device:** Connect the RCA plugs to the corresponding input ports on your television or display device. Ensure the yellow plug connects to the yellow video input, the white plug to the white left audio input, and the red plug to the red right audio input.
- 4. Power On Devices:** Turn on your camcorder and your television/display device.
- 5. Select Input:** On your television/display device, use the remote control to select the correct input source (e.g., AV, Video 1, Input 1) that corresponds to the RCA ports you used.



Image 1: The UPBRIGHT AV Cable Cord showing the 3.5mm jack and the yellow, white, and red RCA connectors.



Image 2: A closer view of the 3.5mm jack and the color-coded RCA connectors (yellow, white, red) of the UPBRIGHT AV Cable Cord.

3. OPERATING

Once the cable is connected and the correct input is selected on your display device:

- **Camcorder Playback:** Put your camcorder into playback mode. The video and audio from your camcorder should now be displayed on your television or monitor.
- **Adjust Volume:** Adjust the volume on your television or display device as needed.
- **Recording to External Devices:** If your display device or an external recorder has AV output capabilities, you may be able to record the camcorder's output. Refer to the manual of your recording device for specific instructions.

4. MAINTENANCE

To ensure the longevity and optimal performance of your UPBRIGHT AV Cable Cord:

- **Storage:** Store the cable in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply, which can damage internal wires.
- **Cleaning:** If the connectors become dirty, gently wipe them with a clean, dry, lint-free cloth. Do not use liquid cleaners or abrasive materials.
- **Handling:** Always grasp the connector ends when plugging or unplugging the cable. Avoid pulling on the cable itself, as this can strain the connections and cause damage.
- **Inspection:** Periodically inspect the cable for any signs of wear, such as frayed insulation or bent connectors.

Discontinue use if damage is observed.

5. TROUBLESHOOTING

If you encounter issues while using the AV Cable Cord, consider the following:

- **No Video or Audio Output:**
 - Ensure all connections are secure and fully inserted into their respective ports.
 - Verify that your camcorder is in playback mode and has content to display.
 - Confirm that your television or display device is set to the correct input source (e.g., AV, Video 1).
 - Check the camcorder's settings to ensure AV output is enabled.
- **Incorrect Video or Audio (e.g., no video, only audio, or distorted image):**
 - Double-check that the RCA plugs are connected to the correct color-coded ports on your display device (yellow for video, white for left audio, red for right audio).
 - **Important Note:** *Some users have reported that the wiring of certain AV cables may not strictly adhere to standard color coding. If you experience issues like no video on the yellow channel or video appearing on an audio channel, try swapping the yellow, white, and red RCA plugs on the display device to see if a different configuration resolves the issue. For example, try connecting the yellow plug to the white input, or the white plug to the yellow input, to identify the correct video signal.*
 - Test the cable with another compatible camcorder or display device if available, to isolate whether the issue is with the cable, camcorder, or display.
- **Loose Connection:** If the cable feels loose in the port, gently rotate the connector while pushing it in to ensure a snug fit. Avoid excessive force.

6. SPECIFICATIONS

- **Brand:** UPBRIGHT
- **Cable Type:** Composite AV Cable
- **Compatible Devices:** Hitachi and Sharp Viewcam Camera Camcorders (e.g., VL-Ah50U, VL-NZ150U, VL-NZ105, VL-NZ105U, VL-NZ100, VL-NZ100U, VL-100U, VL-NZ55, VL-NZ50, VL-NZ10, VL-E650, VL-E650U, VL-H870U, VL-AH30)
- **Special Feature:** Tangle Free
- **Color:** Black
- **Connector Gender:** Male-to-Male
- **Shape:** Round
- **Number of Pins (3.5mm jack):** 2 (typically for stereo audio and video, or specific AV configurations)
- **Item Weight:** Approximately 3 Ounces
- **Specification Met:** RoHS
- **Usage:** Indoor, Outdoor

7. WARRANTY AND SUPPORT

This UPBRIGHT AV Cable Cord comes with the following warranty and support information:

- **Refund Policy:** 30 days refund period from the date of purchase.

- **Exchange Policy:** 24 months exchange period for defective units.
- **Customer Support:** For any questions, issues, or warranty claims, please contact UPBRIGHT customer service through the retailer where the product was purchased or refer to the UPBRIGHT official website for contact information.

© 2024 UPBRIGHT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B016XCVXUE>

More documents and user manuals: <https://manuals.plus/>