

SPT MK-17S18E-E5

Sunpentown MK-17S18E-E5 Electric Kettle User Manual

Model: MK-17S18E-E5

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Extreme caution must be used when moving an appliance containing hot water.
14. This appliance is for household use only.

PRODUCT OVERVIEW

The SPT MK-17S18E-E5 is a 1.7-liter stainless steel cordless electric kettle designed for rapid water heating with variable temperature control. Its sleek design and user-friendly features make it ideal for preparing a variety of hot beverages and instant meals.



Image: Front view of the Sunpentown MK-17S18E-E5 Electric Kettle, showcasing its stainless steel body, black handle, and power base.



Image: Top view of the kettle's handle and control panel, showing the temperature adjustment buttons and "BOIL", "KEEP WARM" functions.

SETUP

1. **Unpacking:** Carefully remove the kettle and its power base from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX fill line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface, away from the edge of the counter.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. Ensure the voltage matches the appliance's requirements (typically 120V AC for North America).

OPERATING INSTRUCTIONS

Filling the Kettle

- Press the lid release button to open the lid.
- Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark.
- Close the lid firmly until it clicks into place.

Boiling Water

1. Place the kettle securely on its power base.
2. Press the "BOIL" button (or the power button, depending on model specifics). The indicator light will illuminate.
3. The kettle will automatically shut off once the water reaches a rolling boil. The indicator light will turn off.
4. Carefully lift the kettle from the base to pour.

Variable Temperature Control

This kettle features variable temperature settings, allowing you to heat water to specific temperatures for different beverages.

1. Place the kettle on its power base.
2. Use the "+" and "-" buttons on the handle to select your desired temperature. Common settings include:
 - **160°F (70°C):** Green Tea
 - **175°F (80°C):** White Tea
 - **195°F (90°C):** Oolong Tea, French Press Coffee
 - **200°F (93°C):** Black Tea, Instant Coffee
 - **212°F (100°C):** Boiling (for instant noodles, hot chocolate, etc.)
3. Press the power/start button to begin heating. The display will show the current temperature as it heats up.
4. The kettle will automatically shut off once the selected temperature is reached.

Keep Warm Function

The "KEEP WARM" function maintains the water at your selected temperature for a period of time.

- After selecting your desired temperature and starting the heating process, press the "KEEP WARM" button.
- The kettle will heat to the set temperature and then maintain it for approximately 30 minutes.
- To deactivate, press the "KEEP WARM" button again or lift the kettle from the base.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your kettle. Always unplug the kettle and allow it to cool completely before cleaning.

Exterior Cleaning

- Wipe the exterior of the kettle and power base with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.
- Ensure the power base and electrical connections remain dry.

Interior Cleaning (Descaling)

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Descaling is recommended every 1-3 months, depending on water hardness.

1. **Vinegar Method:** Fill the kettle with 2 cups of white vinegar and 2 cups of water. Let it stand for at least 30 minutes, or boil the mixture and let it stand for 15-20 minutes.
2. **Citric Acid Method:** Dissolve 1 tablespoon of citric acid powder in 4 cups of water. Pour into the kettle and boil.
3. After descaling, discard the solution and rinse the kettle thoroughly with fresh water several times to remove any residue and odor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; Kettle not properly seated on base; No power at outlet.	Ensure plug is firmly in outlet; Re-seat kettle on base; Check household circuit breaker.
Kettle turns off before boiling/reaching set temperature.	Limescale buildup; Kettle was lifted from base during operation.	Descal the kettle (see Maintenance section); Do not lift kettle from base until heating cycle is complete.
Water has an unusual taste or odor.	New kettle odor; Limescale buildup.	Perform initial cleaning (boil and discard water several times); Descal the kettle.
Kettle leaks.	Lid not closed properly; Overfilled.	Ensure lid is securely closed; Do not fill above the MAX line.

SPECIFICATIONS

Feature	Detail
Model Name	MK-17S18E-E5
Brand	SPT
Capacity	1.7 Liters (approx. 57.5 fl oz)
Material	Stainless Steel
Special Features	Cordless, Variable Temperature Control, Keep Warm Function
Color	Gray
Dimensions (L x W x H)	9 x 6.5 x 9.75 inches
Item Weight	2.33 pounds

Feature	Detail
Power Source	Corded Electric (Base)
Care Instructions	Hand wash, Wipe clean

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official SPT website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact SPT customer service directly. Contact details are typically available on the manufacturer's website or product packaging.

Note: Specific warranty terms and conditions may vary and are subject to change by the manufacturer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question