

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Quad Lock](#) /
- › [Quad Lock Action Camera Adaptor \(QLA-GPR\) Instruction Manual](#)

## Quad Lock QLA-GPR

# Quad Lock Action Camera Adaptor (QLA-GPR) Instruction Manual

Model: QLA-GPR

## INTRODUCTION

---

The Quad Lock Action Camera Adaptor (Model QLA-GPR) is designed to securely attach action cameras with a standard GoPro fitting to your existing Quad Lock Out Front Mount. This adaptor allows for convenient video recording during activities such as cycling, providing a stable platform for your camera.

**Note:** The Quad Lock Out Front Mount is not included with this adaptor and must be purchased separately.

## SETUP INSTRUCTIONS

---

### 1. Attaching the Adaptor to the Out Front Mount

1. Ensure your Quad Lock Out Front Mount is securely installed on your bicycle handlebars.
2. Align the Quad Lock Action Camera Adaptor with the mounting points on the underside of your Out Front Mount.
3. Insert the provided screws through the adaptor and into the Out Front Mount.
4. Using an appropriate tool, tighten the screws until the adaptor is firmly attached. Do not overtighten.



Image: Quad Lock Action Camera Adaptor components, showing the adaptor and screws.

### 2. Attaching an Action Camera

1. Position your action camera (e.g., GoPro) onto the standard fitting of the Quad Lock Action Camera Adaptor.
2. Secure the camera using its standard mounting screw and nut. Ensure the camera is stable and does not wobble.



Image: An action camera and a smartphone securely mounted on bicycle handlebars using the Quad Lock system.



Image: A cyclist's perspective showing an action camera and phone mounted on the bike, ready for recording.

## OPERATING INSTRUCTIONS

---

Once the Action Camera Adaptor and your camera are securely mounted, operate your action camera according to its manufacturer's instructions. The adaptor provides a stable base for recording video while riding.

- Ensure the camera's lens is clear and unobstructed.
- Verify the camera's battery level and memory card capacity before starting your ride.
- Adjust the camera's angle as needed for optimal recording.

## MAINTENANCE

---

- **Cleaning:** Wipe the adaptor with a damp cloth to remove dirt and debris. Avoid harsh chemicals.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Storage:** Store the adaptor in a cool, dry place when not in use.

## TROUBLESHOOTING

---

### Camera Wobbles or is Loose

- **Check Camera Screw:** Ensure the action camera's mounting screw is fully tightened to the adaptor.
- **Check Adaptor Screws:** Verify that the screws attaching the adaptor to the Out Front Mount are secure.
- **Compatibility:** Confirm your action camera uses a standard GoPro fitting.

### Adaptor Does Not Fit Out Front Mount

- **Model Verification:** Ensure you have a genuine Quad Lock Out Front Mount. This adaptor is specifically designed for Quad Lock Out Front Mounts.
- **Orientation:** Double-check the orientation of the adaptor against the mount.

## SPECIFICATIONS

---

Model Number	QLA-GPR
Product Dimensions	0.79 x 2.36 x 3.94 inches
Item Weight	1.92 ounces
Color	Black
Compatible Devices	Action Cameras with standard GoPro fitting
Mounting Type	Front Mount (requires Quad Lock Out Front Mount)
Special Features	Lightweight
Manufacturer	Annex Products Pty Ltd

## OFFICIAL PRODUCT VIDEO

---

Your browser does not support the video tag.

Video: Demonstration of Quad Lock products in use. This video provides a general overview of the Quad Lock ecosystem and how various mounts and adaptors function.

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the official Quad Lock website or contact their customer service directly. Details regarding product guarantees and assistance with any issues can be found through these channels.

**Official Website:** [www.quadlockcase.com](http://www.quadlockcase.com)