

[Manuals.plus](#) /

› [Hot Wheels](#) /

› Hot Wheels Action Gravity Spin Playset Instruction Manual (Model CDL45)

Hot Wheels CDL45

Hot Wheels Action Gravity Spin Playset

INSTRUCTION MANUAL - MODEL CDL45

Introduction

Welcome to the exciting world of Hot Wheels Action! This manual provides essential information for the assembly, operation, and maintenance of your Hot Wheels Action Gravity Spin Playset, Model CDL45. Please read these instructions carefully before use to ensure a safe and enjoyable experience. This playset is designed for children aged 5 years and up, offering thrilling high-speed action and imaginative play.



Image: The product packaging for the Hot Wheels Action Gravity Spin Playset, illustrating the playset's features and included components.

Setup Instructions

Assembly is required for this playset. Please follow the included assembly instructions carefully. Ensure all track pieces are securely connected to prevent cars from derailing during high-speed action.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Track Sections:** Connect the various track pieces as indicated in the separate assembly guide. Ensure all connections are firm.
3. **Install Batteries:** The playset requires batteries for the motorized booster (batteries not included). Locate the battery compartment, typically on the base of the booster unit. Insert the required alkaline batteries, ensuring correct polarity. Close the compartment securely.
4. **Placement:** Place the assembled playset on a flat, stable surface to ensure optimal performance.



Image: Two children engaged in setting up and playing with the Hot Wheels Action Gravity Spin Playset on a wooden floor.

Operating Instructions

The Hot Wheels Action Gravity Spin Playset features a motorized booster, multiple crash zones, and opportunities for competitive play.

1. **Power On:** Ensure batteries are installed and turn on the playset's power switch, if available, to activate the motorized booster.
2. **Launch Cars:** Place a Hot Wheels car (1:64 scale) at the starting gate. Use the manual launcher to propel the car into the track. The motorized booster will then take over to send the car through loops and crash zones.



PUSH TO LAUNCH

Image: A close-up view of a hand pressing down on a yellow lever, labeled 'PUSH TO LAUNCH', to propel a Hot Wheels car onto the track.

- 3. Navigate Crash Zones:** The playset includes three different crash zones designed for one or two players. Experiment with timing and car speed to survive these zones or create exciting crashes.



SURVIVE THE CRASH ZONES!

Image: Hot Wheels cars are shown in motion within the playset's crash zones, highlighting the dynamic action and challenge of navigating these sections.

- 4. Multiplayer Action:** With two controllers, two players can launch cars simultaneously for head-to-

head racing and crashing fun.



Image: Two hands are shown operating different sections of the playset, emphasizing its design for '1 OR 2 PLAYERS' and interactive play.

5. **Connect to Other Tracks:** This playset can be connected to other Hot Wheels tracks (sold separately) to expand your racing world and create custom layouts.

Maintenance

To ensure the longevity and optimal performance of your Hot Wheels Action Gravity Spin Playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the track and playset components with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic.
- **Storage:** When not in use, store the playset in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the playset will not be used for an extended period to prevent leakage and corrosion.

Troubleshooting

Problem	Possible Cause	Solution
Cars do not complete loops or lose speed.	Weak batteries in the motorized booster. Incorrect car type/weight. Track not fully connected.	Replace batteries with fresh alkaline batteries. Ensure you are using standard 1:64 scale Hot Wheels cars. Check all track connections for secure fit.

Problem	Possible Cause	Solution
Playset is excessively noisy.	Normal operation of the motorized booster.	Some noise is expected from the motorized components. Ensure no foreign objects are obstructing moving parts.
Cars frequently crash outside designated crash zones.	Track misalignment. Excessive speed.	Re-check track assembly for proper alignment. Adjust launch force if cars are being propelled too fast.

Specifications

Feature	Detail
Brand	Hot Wheels
Model Number	CDL45
Material Type	Plastic
Product Dimensions	8.64 x 82.98 x 65.99 cm
Product Weight	1.99 kg
Maximum Suggested Manufacturer Weight	2.05 Kilograms
Manufacturer Recommended Age	5 years and up
Assembly Required	Yes
Batteries Required	Yes
Batteries Included	No
Battery Type	Alkaline
Number of Players	>1
Scale	1:64
Track Gauge	1.5 inches
Educational Objectives	Hand-eye coordination, problem-solving skills, social competence
Recommended Play Suitability	Imaginative play, high-speed action, both at home and on the go
Release Date	August 26, 2021
First Available	April 28, 2015

Warranty and Support

This Hot Wheels product is covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Hot Wheels website. If you encounter any issues or require assistance, please contact Hot Wheels customer support. For further information or support, please visit the [Hot Wheels Brand Store](#).

© 2025 Hot Wheels. All rights reserved.