



Manuals.plus /

› Moulinex /

› Moulinex Multicooker MK705111 User Manual: 5L, 750W, 12 Programs

Moulinex MK705111

Moulinex Multicooker MK705111 User Manual: 5L, 750W, 12 Programs

Model: MK705111

INTRODUCTION

Welcome to the user manual for your new Moulinex Multicooker MK705111. This versatile appliance is designed to simplify your daily cooking with its 12 automatic programs and Fuzzy Logic technology. With a 5-liter capacity and 750W power, it offers convenient and efficient meal preparation. Please read this manual carefully before using the appliance to ensure safe and optimal performance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Moulinex Multicooker.



Figure 1: Front view of the Moulinex Multicooker MK705111, showing the main unit with its red lid and white body. The control panel is visible on the front, featuring a digital display and various program buttons such as Rice, Stew, Steam, Yogurt, and controls for Keep Warm/Cancel, Crust/Fry, Delayed Start, and Menu selection.



Figure 2: The Moulinex Multicooker MK705111 displayed with its standard accessories. These include a measuring cup, a rice spoon, and a soup spoon, all designed to assist in the preparation and serving of meals.

Components:

1. Main Unit (Housing)
2. Removable Non-Stick Inner Bowl
3. Lid
4. Control Panel with Digital Display
5. Steam Basket
6. Rice Spoon
7. Soup Spoon
8. Measuring Cup
9. Spoon Holder
10. Power Cord

SETUP AND BEFORE FIRST USE

Unpacking:

- Remove all packaging materials, stickers, and accessories from inside and outside the appliance.
- Ensure all listed components are present.

Initial Cleaning:

- Wash the inner bowl, steam basket, rice spoon, soup spoon, and measuring cup with warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Placement:

- Place the multicooker on a stable, flat, heat-resistant surface, away from water splashes.
- Ensure adequate ventilation around the appliance.

OPERATING INSTRUCTIONS

General Operation:

1. Place ingredients into the inner bowl.
2. Insert the inner bowl into the main unit.
3. Close the lid securely.
4. Plug the power cord into a suitable electrical outlet.
5. Press the **Menu** button to select your desired cooking program. The selected program will be highlighted on the display.
6. Adjust cooking time if necessary using the **+** and **-** buttons.
7. Press the **Start** button (usually indicated by a power symbol) to begin cooking.
8. Once cooking is complete, the appliance will automatically switch to the **Keep Warm** function for up to 12 hours.
9. To cancel a program or turn off the appliance, press the **Keep Warm/Cancel** button.

Understanding Fuzzy Logic Technology:

The Moulinex Multicooker MK705111 features Fuzzy Logic technology. This advanced system automatically adjusts cooking parameters such as temperature and time based on the type and quantity of ingredients. This ensures optimal cooking results for various dishes, providing consistent performance without constant manual adjustments.

Specific Cooking Programs:

- **Rice/Cereals:** Ideal for cooking various types of rice and grains.
- **Risotto:** Specifically designed for creamy risotto dishes.
- **Reheat:** For warming up previously cooked meals.
- **Baby Food:** Gentle cooking for preparing baby meals.
- **Stew:** Perfect for slow-cooked stews and casseroles.
- **Steam/Soup:** For steaming vegetables, fish, or preparing soups. Use the included steam basket for steaming.
- **Yogurt:** For homemade yogurt preparation.
- **Baking/Dessert:** Suitable for baking cakes, puddings, and other desserts.
- **Crust/Fry:** For browning ingredients or shallow frying.

Using Delayed Start:

The **Delayed Start** function allows you to program the multicooker to begin cooking at a later time, up to 24 hours in advance.

1. Prepare your ingredients and place them in the inner bowl.
2. Select your desired cooking program using the **Menu** button.
3. Press the **Delayed Start** button.
4. Use the **+** and **-** buttons to set the desired delay time (in hours).
5. Press the **Start** button to confirm. The timer will count down, and cooking will begin automatically after the set delay.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your multicooker.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The removable inner bowl, steam basket, rice spoon, and soup spoon are dishwasher-safe. Alternatively, wash them with warm, soapy water and rinse thoroughly.
- Wipe the exterior of the main unit and the control panel with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure all parts are completely dry before storing or reusing the appliance.
- Do not immerse the main unit or power cord in water or any other liquid.

TROUBLESHOOTING

If you encounter any issues with your Moulinex Multicooker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power supply; try a different outlet.
Cooking program does not start.	Lid not properly closed; Start button not pressed.	Ensure lid is securely closed; press the Start button firmly.
Food is undercooked or overcooked.	Incorrect program selected; incorrect cooking time; incorrect water/ingredient ratio.	Refer to recipe book for correct settings; adjust cooking time as needed; ensure proper ingredient measurements.
Steam leaking from lid.	Lid not properly sealed; sealing gasket dirty or damaged.	Check lid closure; clean or replace sealing gasket if necessary.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Moulinex
Model Number	MK705111
Color	Red / White
Capacity	5 Liters
Power	750 Watts
Voltage	240 Volts
Material	Plastic
Dimensions (DxWxH)	28.8 x 37.4 x 24.5 cm
Item Weight	3.72 Kilograms
Control Method	Touch
Special Features	12 Programs, Removable Bowl, Optimal Performance, Keep Warm Setting

WARRANTY AND SUPPORT

Moulinex is committed to providing high-quality products. This appliance is designed for repairability for 15 years at a fair price. This commitment is supported by a network of 6,200 repairers worldwide, contributing to environmental protection and waste reduction.

For detailed warranty information, service, or spare parts, please refer to the warranty card included with your product or visit the official Moulinex website.

Online Support: For further assistance, FAQs, and product registration, please visit the official Moulinex website.