

[Manuals.plus](#) /

› [Techwood](#) /

› Techwood TCR-259 2.5L Rice Cooker Instruction Manual

Techwood TCR-259



Techwood TCR-259 2.5L Rice Cooker

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

2. PRODUCT OVERVIEW

The Techwood TCR-259 Rice Cooker is designed for efficient and convenient rice preparation. It features a non-stick inner pot and a simple control system.



This image shows the Techwood TCR-259 Rice Cooker, a compact appliance with a black exterior, a transparent glass lid, and two indicator lights on the front panel for cooking and keeping warm.

Components:

- Main Unit with Heating Element
- Removable Non-Stick Inner Bowl
- Glass Lid
- Spatula
- Measuring Cup

3. SETUP

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
2. **Initial Cleaning:** Before first use, wash the inner bowl, glass lid, spatula, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, level, heat-resistant surface, away from water and heat sources. Ensure adequate ventilation around the appliance.

4. OPERATING INSTRUCTIONS

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. Rinse the rice under cold water until the water runs clear, if desired.
2. **Add Water:** Place the rinsed rice into the non-stick inner bowl. Add the appropriate amount of water. A common ratio is 1 cup of rice to 1.5-2 cups of water, but this may vary based on rice type. Refer to

rice packaging for specific recommendations.

3. **Insert Bowl:** Place the inner bowl into the main unit, ensuring it sits correctly on the heating element.
4. **Close Lid:** Place the glass lid securely on the rice cooker.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet (230 Volts).
6. **Select Cook Mode:** Push the selector switch down to the "Cook" position. The cooking indicator light will illuminate.
7. **Automatic Keep Warm:** Once the rice is cooked, the appliance will automatically switch to the "Keep Warm" mode. The keep warm indicator light will illuminate.
8. **Serve:** Allow the rice to rest in "Keep Warm" mode for 5-10 minutes for optimal texture. Use the provided spatula to fluff and serve the rice.
9. **Disconnect:** After serving, unplug the rice cooker from the power outlet.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your rice cooker.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Bowl and Lid:** Wash the removable non-stick inner bowl and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the electrical components.
4. **Spatula and Measuring Cup:** Wash with warm, soapy water, rinse, and dry.
5. **Storage:** Store the cleaned and dried rice cooker in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

- **Rice not cooking:**

- Ensure the power cord is securely plugged into both the appliance and the wall outlet.
- Verify the selector switch is in the "Cook" position and the cooking indicator light is on.
- Check if there is a power outage or a tripped circuit breaker.

- **Rice sticking to the bottom:**

- Ensure the inner bowl is clean and the non-stick coating is intact.
- Adjust the water-to-rice ratio. Some rice types may require more water.
- Allow the rice to rest in "Keep Warm" mode for 5-10 minutes after cooking before serving.

- **Water boiling over:**

- Do not overfill the inner bowl beyond its maximum capacity.
- Ensure the lid is properly seated.

- **Appliance not turning on:**

- Check the power connection and wall outlet.
- Ensure the selector switch is correctly engaged.

7. SPECIFICATIONS

Feature	Specification
Brand	Techwood
Model Number	TCR-259
Capacity	2.5 Liters
Power	850 Watts
Voltage	230 Volts
Color	Black
Material (Lid)	Glass
Material (Inner Bowl)	Non-stick
Product Dimensions (L x W x H)	29 x 29 x 24.7 cm
Item Weight	1.5 Kilograms
Automatic Shut-off Function	No (switches to Keep Warm)
Care Instructions	Hand wash (removable parts)
Included Components	Spatula, Measuring Cup

8. WARRANTY AND SUPPORT

This Techwood TCR-259 Rice Cooker comes with a **1-year warranty** from the date of purchase.

For warranty claims, technical support, or spare parts inquiries, please contact your retailer or the manufacturer directly. Keep your proof of purchase for warranty validation.