

[Manuals.plus](#) /

› [Litton](#) /

› Litton Micro-Browner Microwave Steak Grill Dish 11.5" x 8" User Manual

Litton Micro-Browner Microwave Steak Grill Dish 11.5" x 8"

Litton Micro-Browner Microwave Steak Grill Dish User Manual

Model: Micro-Browner Microwave Steak Grill Dish 11.5" x 8"

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Litton Micro-Browner Microwave Steak Grill Dish. Designed for use in microwave ovens, this dish facilitates browning, searing, and grilling of various foods, particularly steaks, by converting microwave energy into intense heat on its surface. Please read all instructions carefully before first use.



Image: The Litton Micro-Browner Microwave Steak Grill Dish, a white rectangular dish with subtle floral patterns, displayed alongside its original brown cardboard packaging. The packaging features the "Litton Micro-Browner STEAK GRILL" logo and text.

2. SAFETY PRECAUTIONS

- Always use the Micro-Browner dish in a microwave oven. Do not use in conventional ovens, on stovetops, or under a broiler.
- The dish will become extremely hot during use. Always use oven mitts or heat-resistant gloves when handling.
- Do not preheat the dish for longer than recommended, as this may cause damage to the dish or your microwave oven.
- Ensure the dish is clean and dry before each use.
- Keep out of reach of children.

3. SETUP

1. Unpack the Litton Micro-Browner dish and remove all packaging materials.
2. Wash the dish thoroughly with warm, soapy water before first use. Rinse and dry completely.
3. Place the clean, dry dish directly onto the microwave oven's turntable or a suitable microwave-safe surface.

4. OPERATING INSTRUCTIONS

4.1 Preheating the Dish

1. Place the empty Micro-Browner dish in the microwave oven.

- Heat on HIGH power for 3-5 minutes, or until the surface is hot enough to sear. Heating times may vary depending on your microwave's wattage.
- Carefully remove the dish from the microwave using oven mitts.

4.2 Grilling/Browning Food

- Immediately after preheating, place the food (e.g., steak, chicken, vegetables) directly onto the hot surface of the Micro-Browner dish.
- Return the dish with food to the microwave oven.
- Cook on HIGH power for the desired time, flipping the food halfway through for even browning. Cooking times will depend on the type and thickness of the food. Refer to standard microwave cooking guidelines for specific food items.
- Monitor food closely to prevent overcooking or burning.
- Once cooking is complete, carefully remove the dish and food using oven mitts.

Note: The Micro-Browner dish is designed to achieve a browning effect. For thorough cooking, especially with thicker meats, ensure internal temperatures meet food safety standards.

5. MAINTENANCE AND CARE

- Cleaning:** The Litton Micro-Browner dish is **Hand Wash Only**. Do not place in a dishwasher. Wash with warm, soapy water and a non-abrasive sponge or cloth.
- Drying:** Ensure the dish is completely dry before storing or next use.
- Storage:** Store in a dry place.
- Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or metal utensils, as these can scratch or damage the dish's surface.
- Temperature Shock:** Avoid sudden temperature changes, such as placing a hot dish into cold water, as this may cause the glass material to crack. Allow the dish to cool completely before washing.

6. TROUBLESHOOTING

Food not browning sufficiently:

Ensure the dish was preheated for the recommended time. Microwave wattages vary; adjust preheating time as needed. Ensure food is not overcrowded on the dish.

Uneven browning:

Flip food halfway through cooking. Ensure your microwave's turntable is functioning correctly.

Dish appears damaged:

Discontinue use immediately if you notice any cracks, chips, or other damage. Do not attempt to repair.

7. SPECIFICATIONS

Brand:	Litton
Model:	Micro-Browner Microwave Steak Grill Dish
Dimensions:	11.5" x 8" x 2" (Package Dimensions)
Material:	Glass

Color:	White
Item Weight:	3.8 pounds
Care Instructions:	Hand Wash Only
Oven Safe:	No
Dishwasher Safe:	No
Recommended Use:	Grilling steaks and browning in a microwave

8. WARRANTY AND SUPPORT

As this is a vintage product, specific manufacturer warranty information may no longer be available. For operational questions or concerns, please refer to the troubleshooting section or consult general microwave cooking resources. Always prioritize safety when using vintage kitchen appliances.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question