

VINABTY CT90326

Vinabty CT-90326 / CT90326 Replacement Remote Control User Manual

INTRODUCTION

This manual provides instructions for the Vinabty CT-90326 / CT90326 replacement remote control, designed for use with various Toshiba television models. This remote control is a direct replacement and does not require any programming or setup beyond battery installation.

PRODUCT OVERVIEW

The Vinabty CT-90326 / CT90326 remote control is engineered to function identically to the original Toshiba remote. Its ergonomic design ensures comfortable handling. Simply insert the correct batteries, and the remote is ready for immediate use with your compatible Toshiba TV.

SETUP: BATTERY INSTALLATION

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the release tab (if present) to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



The image displays the rear of the Vinabty CT-90326 remote control with the battery cover removed, revealing two slots for AAA batteries. Markings indicate UM-4, AAA, IECR03, 1.5V for battery type and polarity.

OPERATING INSTRUCTIONS

After installing the batteries, the remote control is ready for use. Point the remote directly at your Toshiba TV and press the desired function button.

- **Power Button:** Press to turn the TV on or off.
- **Channel Buttons (CH+/CH-):** Press to change channels.
- **Volume Buttons (VOL+/VOL-):** Press to adjust the volume.
- **Number Buttons (0-9):** Use to directly input channel numbers.
- **Menu Button:** Access the TV's on-screen menu.
- **Navigation Buttons (Arrow keys, OK):** Navigate through menus and confirm selections.

COMPATIBLE TOSHIBA TV MODELS

This remote control is compatible with a wide range of Toshiba TV models, including but not limited to:

- **19AV Series:** 19AV605PB, 19AV605PG, 19AV605PR, 19AV606PG, 19AV606PR, 19AV615DB, 19AV615DG, 19AV616DB, 19AV616DG, 19AV625, 19AV635, 19AV733F, 19EL833F, 19EL833G, 19EL834G, 19EL933G, 19SL738F
- **22AV Series:** 22AV605PB, 22AV605PG, 22AV605PR, 22AV606PG, 22AV606PR, 22AV615, 22AV615DB, 22AV615DG, 22AV616DB, 22AV616DG, 22AV625, 22AV635, 22AV713B, 22AV733F, 22AV733G, 22AV733N, 22AV733R, 22AV734F, 22EL833F, 22EL833G, 22EL834G
- **23DL/EL Series:** 23DL934G, 23EL933G, 23EL934G, 2503SFZ
- **26AV/EL/SL Series:** 26AV605PB, 26AV605PG, 26AV605PR, 26AV615DB, 26AV615DG,

26AV635DG, 26AV733F, 26AV733G, 26AV734F, 26EL833F, 26EL833G, 26EL834G, 26EL933B, 26EL933G, 26EL934G, 26SL738G

- **32AV/CV/DB/DL/EL/HL/L/LV/RV/SL/W Series:** 32AV603PR, 32AV605PB, 32AV605PG, 32AV605PR, 32AV607PG, 32AV615DB, 32AV615DG, 32AV635D, 32AV703G1, 32AV733, 32AV733D, 32AV733F, 32AV734F, 32AV833F, 32AV833G, 32AV833N, 32AV834G, 32AV933G, 32AV934G, 32CV711B, 32DB833G, 32DL933G, 32EL833B, 32EL833F, 32EL833G, 32EL834G, 32EL933G, 32EL934G, 32HL833B, 32HL833F, 32HL833G, 32HL834G, 32HL933G, 32L2331D, 32L2331DG, 32L2333D, 32L2333DG, 32LV655D, 32LV655P, 32LV665D, 32LV675D, 32LV685, 32LV685D, 32LV685D, 32LV685DG, 32LV703, 32LV703G1, 32LV733, 32LV733F, 32LV733G, 32LV833F, 32LV833G, 32LV933G, 32RV623D, 32RV625D, 32RV626D, 32RV633D, 32RV635, 32RV635D, 32SL738F, 32SL738G, 32SL738N, 32W2333DG, 32W2434DG, 32W2453DG
- **37RV Series:** 37RV633D
- **39L Series:** 39L2331DG, 39L2333DB, 39L2333DG, 39L2337DB, 39L2337DG
- **40HL/LV Series:** 40HL933G, 40LV665D, 40LV675, 40LV675D, 40LV685, 40LV703G1, 40LV733F, 40LV733N, 40LV833F, 40LV833G, 40LV833N, 40LV933G
- **42AV/HL/RV/SL Series:** 42AV625D, 42HL833F, 42HL833G, 42HL833N, 42RV623D, 42SL738B, 42SL738F, 42SL738G, 42SL738N
- **50L Series:** 50L2333DG
- **Other:** 75014827, REGZA (32AV635DG), SL738G

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
- **Limited range:**
 - Ensure there is a clear line of sight to the TV.
 - Replace batteries if they are low.

SPECIFICATIONS

Brand	VINABTY
Model Number	CT90326
Color	Black
Connectivity Technology	Radio Frequency
Special Feature	Ergonomic
Controller Type	Remote Control
Maximum Range	10 Miles
Item Weight	3 Ounces
Battery Type	AAA (UM-4, IECR03, 1.5V)
UPC	604007976568, 600316723688

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct support contacts for this product is not available in the provided documentation. Please refer to the retailer or your purchase records for warranty details and customer service options.