

[Manuals.plus](#) /

> [Miele](#) /

> Miele WMF111 WPS PWash 2.0 Front-load Washing Machine User Manual

Miele WMF111 WPS PWash 2.0

Miele WMF111 WPS PWash 2.0 Front-load Washing Machine User Manual

Model: WMF111 WPS PWash 2.0

1. INTRODUCTION

Thank you for choosing the Miele WMF111 WPS PWash 2.0 Front-load Washing Machine. This appliance is designed for high performance and efficiency, featuring an 8 kg load capacity, a maximum spin speed of 1600 RPM, and an A+++ energy efficiency rating. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your new washing machine. Please read it thoroughly before first use and keep it for future reference.

TESTSIEGER

Stiftung
Warentest

test



GUT (1,6)

Zusammen mit zwei
Geräten anderer Marken

Im Test:

8 Frontlader mit
1600 Umdrehungen/Minute

Ausgabe 11/2016

www.test.de

16YT13

WMF 111 WPS

This image shows a full front view of the Miele WMF111 WPS PWash 2.0 washing machine. The appliance is white with a chrome and white door, featuring the control panel at the top.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent accidents and damage to the appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded electrical outlet (220-240V, 50Hz, 10A). Do not use extension cords or adapters.
- **Water Connection:** Connect the water inlet hose securely to a cold water supply. Ensure all connections are tight to prevent leaks.
- **Child Safety:** Activate the child lock feature to prevent unintended operation by children. Keep packaging materials away from children.
- **Appliance Placement:** Place the machine on a firm, level surface. Do not install in areas prone to freezing temperatures.
- **Maintenance:** Always unplug the appliance before cleaning or performing any maintenance.

3. UNPACKING AND INSTALLATION

3.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Locate and remove the transport bolts from the rear of the machine. Keep these bolts for future transport.

3.2 Placement

- The washing machine is a freestanding appliance. Place it on a stable, level floor.
- Ensure there is adequate ventilation around the machine.
- The door hinge is on the right side. Allow sufficient space for the door to open fully.

3.3 Water and Electrical Connection

- Connect the water inlet hose to a cold water tap.
- Position the drain hose into a suitable standpipe or sink, ensuring it is securely fixed to prevent displacement during draining.
- Plug the power cord into a grounded electrical outlet.

4. INITIAL SETUP

Before washing clothes for the first time, it is recommended to run an empty wash cycle to clean the drum and remove any manufacturing residues.

1. Add a small amount of detergent to the main wash compartment of the dispenser.
2. Close the detergent dispenser and the washing machine door.
3. Select a short program, such as 'Quick Wash' or 'Cotton' at 60°C, without any laundry.
4. Start the program.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel features a combination of buttons and a rotary dial for program selection, along with an integrated display for status and settings.

5.2 Loading Laundry

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload (maximum 8 kg).
- Close the door firmly until it clicks.

5.3 Adding Detergent and Fabric Softener

- Pull out the detergent dispenser drawer.
- Add the recommended amount of detergent to the main wash compartment.
- Add fabric softener to the designated compartment, if desired.
- Push the dispenser drawer back in.

5.4 Program Selection and Settings

- Turn the rotary dial to select your desired wash program (e.g., Cotton, Delicates/Silk, Easy Care, Hand/Wool, Intensive/Outdoor, Mixed, Pre-wash, Sport).
- Use the buttons to adjust settings such as temperature, spin speed (up to 1600 RPM), and delayed start (up to 24 hours).
- The display will show the selected program and estimated remaining time.

5.5 Starting and Ending a Cycle

- Press the 'Start' button to begin the wash cycle.
- The machine will automatically proceed through the selected program.
- At the end of the cycle, an audible signal will sound, and the display will indicate 'End'.
- Open the door and remove your laundry.

5.6 Child Lock

To activate or deactivate the child lock, refer to the specific instructions in your machine's display menu, typically involving holding down a combination of buttons for a few seconds.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Cleaning the Detergent Dispenser:** Remove the dispenser drawer and rinse it under running water to remove any detergent residue.
- **Cleaning the Drum:** Periodically run a maintenance wash cycle (e.g., 'Drum Clean' program or a hot cotton wash with no laundry and a descaling agent).
- **Cleaning the Filter:** Regularly check and clean the drain pump filter, located at the bottom front of the machine, to prevent blockages.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common solutions before contacting service.

- **Machine Not Starting:** Ensure the power cord is plugged in, the door is closed properly, and the 'Start' button has been pressed. Check for any error codes on the display.
- **Water Not Draining:** Check if the drain hose is kinked or blocked. Clean the drain pump filter.
- **Excessive Noise/Vibration:** Ensure the machine is level and all transport bolts have been removed. Check that the load is balanced.
- **Error Codes:** Refer to the display for specific error codes. Consult the full Miele user manual for detailed explanations and solutions for each code.
- **Adjusting Buzzer Volume:** If the end-of-cycle tone is too loud or persistent, you can adjust it. On the display, hold both arrow keys simultaneously and navigate to 'Buzzer volume'. Then set the desired volume.



This image displays the 'Test Winner' badge awarded by Stiftung Warentest, a German consumer organization, to the Miele WMF 111 WPS washing machine. It received a 'Good' rating of 1.6 in their 11/2016 issue, specifically for 8 front-loading washing machines with 1600 RPM spin speed.

8. SPECIFICATIONS

Brand	Miele
-------	-------

Model Name	WMF111 WPS PWash 2.0
Product Dimensions (D x W x H)	64.3 x 59.6 x 85 cm
Product Weight	91.5 kg
Capacity	8 Kilograms
Maximum Spin Speed	1600 RPM
Energy Efficiency Class	A+++
Noise Level	45 Decibels
Installation Type	Freestanding
Color	White
Human Interface Input	Buttons, Rotary Dial
Special Feature	Drum
Annual Water Consumption (Washing)	9900 L
Annual Energy Consumption (Washing)	157 kWh
Water Consumption per Cycle	48 L
Energy Consumption per Cycle	0.86 kWh
Power Consumption	2400 W
Voltage/Frequency	220-240 V / 50 Hz
Model Number	4002515660546

9. WARRANTY AND SUPPORT

Your Miele washing machine comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Miele customer service. Contact information can typically be found on the Miele website or in the documentation supplied with your product.