

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer LR44/A76 Alkaline Batteries User Manual

Energizer E300141400

Energizer LR44/A76 Alkaline Batteries User Manual

Model: E300141400

INTRODUCTION

The Energizer LR44/A76 Alkaline Coin Battery is designed to provide reliable and lasting power for a variety of specialty devices. These batteries are ideal for use in heart rate monitors, remotes, keyless entry systems, medical devices, handheld electronics, toys, and games. This manual will guide you through the proper use and care of your Energizer batteries to ensure optimal performance.

SAFETY INFORMATION

WARNING: Always insert batteries correctly, observing the positive (+) and negative (-) polarities as indicated on the device and battery. Keep batteries away from children. Do not swallow, open, recharge, or expose batteries to water, fire, or high temperatures. Doing so may cause the battery to explode, leak, or cause damage. **Immediately see a doctor if a battery is swallowed.**

PRODUCT OVERVIEW

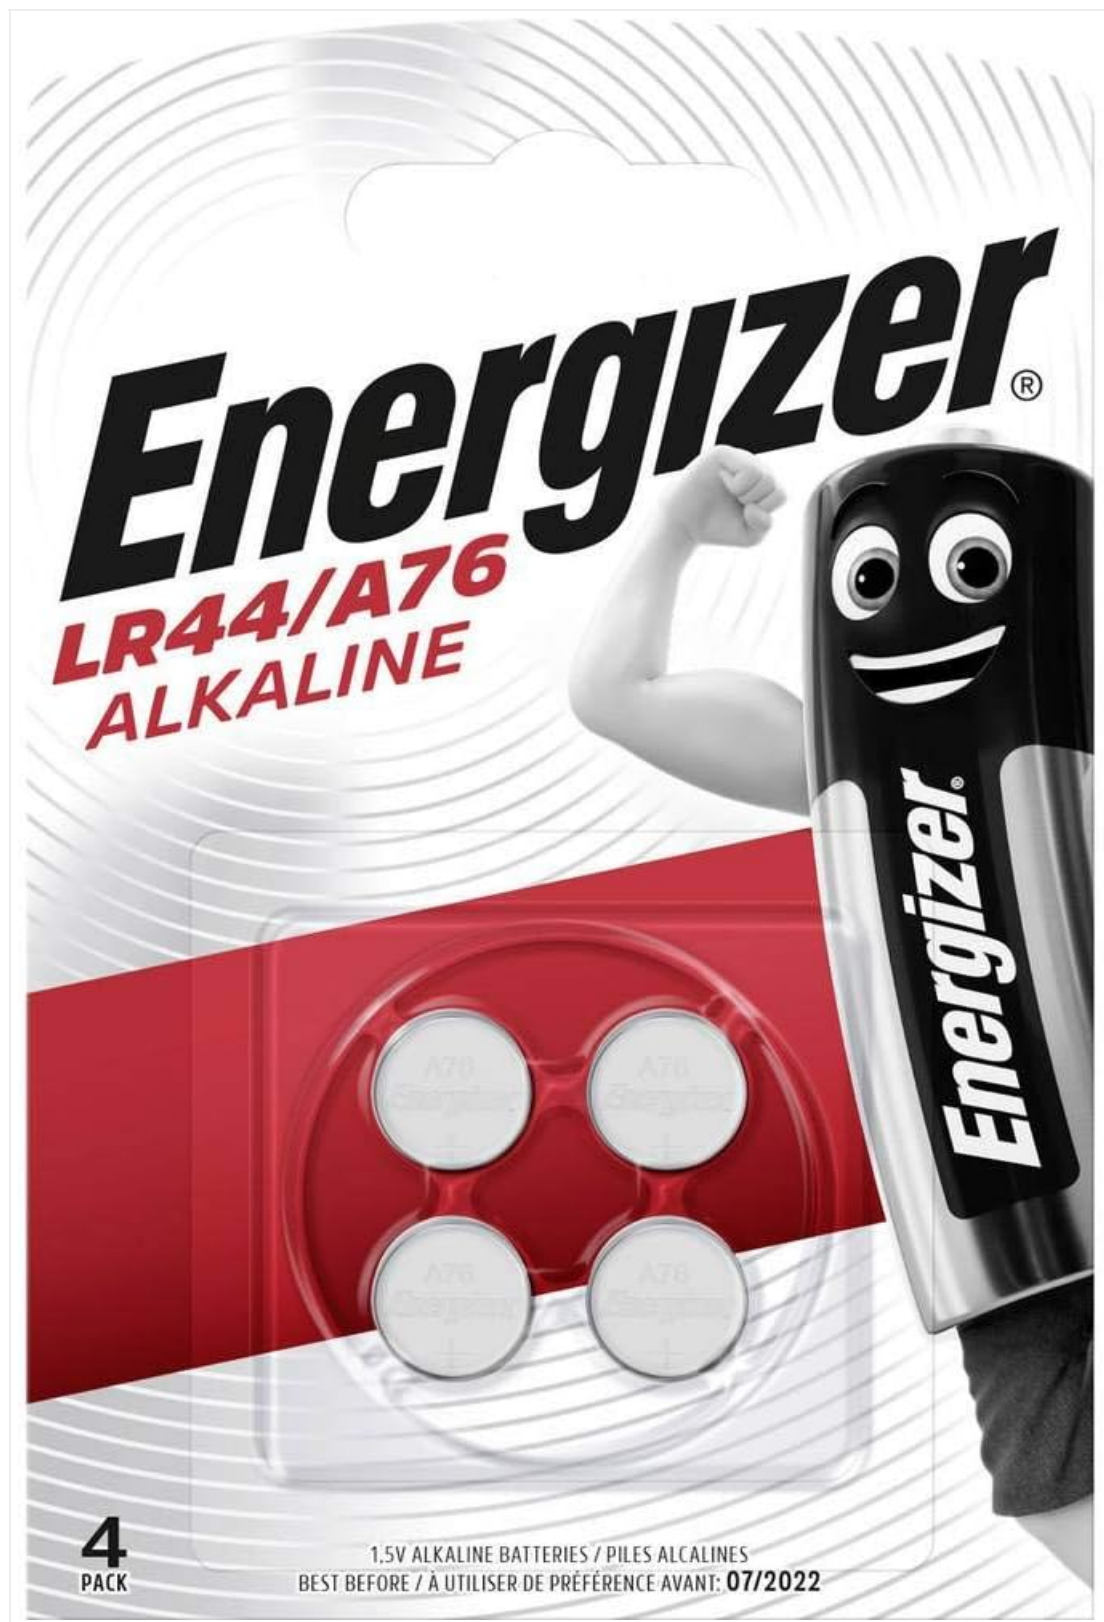


Image: Packaging of Energizer LR44/A76 Alkaline Batteries, showing a pack of four batteries.

Energizer LR44/A76 Alkaline Coin Batteries are 1.5V batteries designed for small electronic devices. Each pack contains four batteries, providing a convenient supply for multiple uses or replacements. These batteries are known for their long-lasting and reliable performance.

Key Features:

- Contains four (4) Energizer LR44/A76 alkaline button batteries.
- Provides long-lasting, reliable performance in specialty devices.
- Holds power for up to three years in storage.

- Cell size: LR44/A76; Type: Alkaline Coin; Volt: 1.5V.
- Replacement for: 157, 303, 357, AG13, EPX76, LR44, S76, SG13, SR44.

SETUP AND INSTALLATION



Image: A top-down view of four individual Energizer A76 coin batteries.

To install your Energizer LR44/A76 batteries, follow these steps:

1. Identify the battery compartment on your device. This is typically a small door or cover that can be opened with a small screwdriver or by sliding a latch.
2. Remove any old batteries from the compartment. Dispose of old batteries responsibly according to local regulations.
3. Observe the polarity markings (+ and -) inside the battery compartment. These indicate the correct orientation for the new battery.
4. Insert the new Energizer LR44/A76 battery, ensuring that the positive (+) side aligns with the positive marking in the compartment and the negative (-) side aligns with the negative marking.

5. Close the battery compartment securely.
6. Test your device to ensure it is functioning correctly.

OPERATING INSTRUCTIONS

Once installed, Energizer LR44/A76 batteries operate automatically within your device. They are designed to provide consistent power for the lifespan of the battery. No specific user operation is required beyond proper installation.

Recommended Uses:

- Watches
- Flashlights
- Clocks
- Digital Thermometers
- Toys
- Calculators
- Heart Rate Monitors
- Keyless Entry Systems
- Glucose Monitors

MAINTENANCE AND STORAGE

To maximize the life and performance of your Energizer LR44/A76 batteries:

- Store unused batteries in their original packaging in a cool, dry place at room temperature. Avoid extreme temperatures.
- Do not store batteries with metal objects like coins or keys, as this can cause a short circuit.
- Remove batteries from devices that will not be used for extended periods to prevent potential leakage.
- Clean battery contacts in your device periodically with a dry cloth to ensure good connection.
- These batteries hold power for up to three years in storage.

TROUBLESHOOTING

If your device is not functioning after installing new batteries, consider the following:

- **Device Not Powering On:** Double-check that the batteries are inserted with the correct polarity (+ and -). Ensure the battery compartment is closed securely.
- **Intermittent Power:** Clean the battery contacts in the device and on the batteries with a clean, dry cloth. Loose connections can cause intermittent power.
- **Short Battery Life:** Ensure the batteries are fresh and not expired. Check if the device itself is drawing excessive power or has an internal fault.
- **Battery Leakage:** If you notice any leakage, immediately remove the battery (wearing gloves if possible) and clean the compartment thoroughly. Dispose of the leaking battery safely. Do not touch the leaked material with bare skin.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Product Dimensions	0.46 x 0.46 x 0.21 inches
Item Weight	0.494 ounces
ASIN	B017B7DQ96
Item Model Number	E300141400
Batteries Required	4 LR44 batteries (included)
Manufacturer	Energizer Group
Brand	Energizer
Battery Cell Composition	Alkaline
Battery Capacity	1.5V
Recommended Uses	Watches, Flashlights, Clocks, Digital Thermometers, Toys

WARRANTY AND SUPPORT

Energizer batteries are manufactured to high-quality standards. For specific warranty information or product support, please refer to the official Energizer website or contact their customer service directly. You can also visit the [Energizer Store on Amazon](#) for more product details and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B017B7DQ96>

More documents and user manuals: <https://manuals.plus/>