

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gingko](#) /
- › [Gingko Gravity Cube Click Clock GK18SE Instruction Manual](#)

Gingko GK18SE

Gingko Gravity Cube Click Clock Instruction Manual

Model: GK18SE

INTRODUCTION

The Gingko Gravity Cube Click Clock is a digital alarm clock designed to display time, date, and temperature. It features a unique gravity-controlled alarm and a touch-sensitive snooze function for intuitive interaction. The clock's LED display is sound-activated, automatically turning off when the environment is quiet to conserve energy and minimize light disturbance.



Image: The Gingko Gravity Cube Click Clock in blue, displaying the time 13:33, positioned on a wooden surface alongside

SETUP

Follow these steps to set up your Gingko Gravity Cube Click Clock:

1. **Power Connection:** Connect the provided USB power cable to the clock's power input port. Plug the other end into a compatible USB power adapter (not included) and then into a wall outlet.
2. **Backup Battery (Optional):** If your model supports a backup battery for memory retention during power outages, insert the specified Lithium Ion battery (not included) into the battery compartment, ensuring correct polarity.
3. **Initial Placement:** Place the clock on a stable, flat surface.
4. **Setting Time and Date:**
 - Locate the control buttons, typically found on the back or bottom of the clock.
 - Press the 'SET' or 'MODE' button to enter the setting mode. The display will likely flash.
 - Use the '+' and '-' buttons (or similar) to adjust the hour, minute, year, month, and day.
 - Press 'SET' or 'MODE' again after each adjustment to move to the next setting or to confirm and exit the setting mode.



Image: The Gingko Gravity Cube Click Clock in blue, displaying 12:00, situated on a clean white desk next to a blue mug and a potted plant.

OPERATING INSTRUCTIONS

Display Modes

The clock alternately displays the time, date, and temperature. The LED display is sound-activated; it will turn on when it detects a sound (e.g., a clap or a tap on the surface) and automatically turn off after a short period of silence.

Setting the Alarm

1. In normal display mode, press the 'ALARM' button (or similar) to enter alarm setting mode.
2. Use the '+' and '-' buttons to set the desired alarm time.

3. Press 'ALARM' again to confirm and activate the alarm. An alarm icon may appear on the display.

Snooze Function

- When the alarm sounds, gently touch the soft top surface of the cube to activate the snooze function. The alarm will pause and sound again after a set interval.

Turning Off the Alarm

- To completely turn off the alarm for the day, simply turn the clock over onto any of its other sides. This action will deactivate the alarm until the next set alarm time.



Image: A close-up view of the blue Gingko Gravity Cube Click Clock, clearly showing the digital display indicating 12:43.

MAINTENANCE

- **Cleaning:** Wipe the clock's surface with a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the rubberized finish and display.
- **Battery Replacement (if applicable):** If your clock uses a backup battery and you notice settings are lost after a power disconnection, replace the battery with the specified type and size, ensuring correct polarity.
- **Storage:** If storing the clock for an extended period, disconnect it from power and remove any backup batteries. Store in a cool, dry place.

TROUBLESHOOTING

- **Display Not Lighting Up:**
 - Ensure the clock is properly connected to a power source.
 - Check if the power adapter and outlet are functioning correctly.
 - Make a sound (e.g., clap, tap the surface) to activate the sound-sensitive display.

- **Alarm Not Sounding:**

- Verify that the alarm time is correctly set and the alarm function is activated (look for an alarm icon on the display).
- Ensure the clock is not turned over, which deactivates the alarm.

- **Inaccurate Time/Temperature Readings:**

- Reset the time and date manually.
- For temperature, ensure the clock is not placed near heat sources or in direct sunlight, which can affect sensor accuracy.
- If issues persist, try disconnecting and reconnecting the power to perform a soft reset.

- **Snooze Function Not Working:**

- Ensure you are touching the designated soft top surface of the cube.
- Check if the alarm is active and sounding before attempting to snooze.

SPECIFICATIONS

Feature	Detail
Brand	Gingko
Model Number	GK18SE
Color	Blue
Display Type	Digital LED
Product Dimensions	3"W x 3"H x 3"D (Cube)
Item Weight	9.2 ounces
Power Source	Corded Electric
Batteries Required	1 Lithium Ion (for backup, not included)
Alarm Clock Function	Yes, with gravity control and touch snooze
Special Features	Sound-activated LED display, displays Time, Date, Temperature

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Gingko Gravity Cube Click Clock, please refer to the documentation included with your purchase or visit the official Gingko website. Contact details for customer service are typically available on the product packaging or the manufacturer's support page.

