

Gingko GK18TL

Gingko Gravity Cube Click Clock GK18TL User Manual

Model: GK18TL | Brand: Gingko

INTRODUCTION

The Gingko Gravity Cube Click Clock is an innovative alarm clock designed for ease of use and modern aesthetics. This device features a sound-activated LED display, a gravity-controlled alarm function, and a touch-sensitive snooze. This manual provides detailed instructions for setting up, operating, and maintaining your Gravity Cube Click Clock.



Figure 1: Front view of the Gingko Gravity Cube Click Clock.

SETUP

Before using your Gravity Cube Click Clock, please follow these steps for initial setup.

1. Powering the Device

The clock can be powered via USB or batteries.

- **USB Power:** Connect the provided USB cable to the DC5V port on the back of the clock and plug the other end into a USB power adapter (not always included) or a powered USB port.
- **Battery Power:** Open the battery compartment on the back of the clock. Insert 1 Lithium Polymer battery (required, not always included) according to the polarity markings. Ensure the battery is securely placed.



Figure 2: Back panel with controls and power input.

2. Initial Settings (Time, Date, Temperature)

Upon first power-on, the display will activate. You will need to set the current time and date.

1. Press the **SET** button on the back of the clock to enter setting mode.
2. Use the **+** and **-** buttons to adjust the values (e.g., hour, minute, year, month, day).
3. Press **SET** again to confirm each setting and move to the next parameter.
4. Continue until all settings (time, date, temperature unit if applicable) are configured.

OPERATING INSTRUCTIONS

1. Display Activation

The LED display is sound-activated. It will automatically switch off when the room is quiet to conserve power. To activate the display:

- Make a sound (e.g., clap your hands).
- Gently tap the bedside table or surface the clock is resting on.

The display will show time, date, and temperature alternately.



Figure 3: Clock displaying time.

2. Setting the Alarm

The Gravity Cube features a gravity-controlled alarm.

1. Press the **Alarm Icon** button on the back of the clock to enter alarm setting mode.
2. Use the **+** and **-** buttons to set the desired alarm time.
3. Press the **Alarm Icon** button again to confirm.
4. To activate the alarm, ensure the side of the clock with the alarm icon is facing upwards. The display will show an alarm indicator.
5. To deactivate the alarm, turn the clock over so a different side is facing upwards. The alarm indicator will disappear.

3. Snooze Function

When the alarm sounds, you can activate the snooze function:

- Gently touch the top surface of the clock (where "SNOOZE" is indicated). The alarm will pause for a short period (typically 5-9 minutes) and then sound again.

4. Voice/Sound Control Sensitivity (V/S)

The **V/S** button on the back panel may allow adjustment of the sound activation sensitivity for the display. Refer to the specific product packaging or a more detailed manual for precise control over this feature.

MAINTENANCE

To ensure the longevity and proper functioning of your Gingko Gravity Cube Click Clock, follow these maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the rubberized finish.
- **Battery Replacement:** If using battery power, replace the Lithium Polymer battery when the display dims or functions become erratic. Ensure correct polarity when inserting new batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your Gravity Cube Click Clock, refer to the following common problems and solutions:

- **Display Not Activating:**
 - Check power source: Ensure USB cable is securely connected or batteries are correctly inserted and not depleted.
 - Make a louder sound or tap the surface more firmly to activate the display.
- **Alarm Not Sounding:**
 - Verify the alarm is set correctly (refer to "Setting the Alarm" section).
 - Ensure the side with the alarm icon is facing upwards to activate the alarm.
 - Check battery level if operating on batteries.
- **Alarm Cannot Be Turned Off:**
 - Turn the clock over to a different side to deactivate the alarm.
 - If the issue persists, temporarily remove batteries or disconnect USB power to reset the device.
- **Incorrect Time/Date:**
 - Re-enter the setting mode using the **SET** button and adjust the time and date.
 - Ensure batteries are not low, as this can sometimes affect timekeeping.

SPECIFICATIONS

Model Number	GK18TL
Brand	Gingko
Product Dimensions	2.95 x 2.95 x 2.95 inches (7.5 x 7.5 x 7.5 cm)
Item Weight	9.2 ounces (260 grams)
Power Source	USB DC5V or 1 Lithium Polymer battery (not included)
Display Type	LED, Sound Activated

Alarm Features

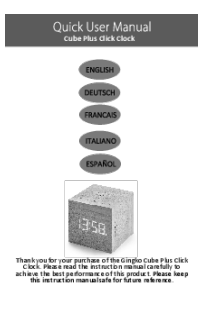



Gravity Controlled On/Off, Touch Sensitive Snooze






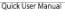
WARRANTY AND SUPPORT

Specific warranty information for the Gingko Gravity Cube Click Clock GK18TL is typically provided with the product packaging or available on the manufacturer's official website. Please refer to these sources for details regarding warranty coverage and terms.

For technical support or further assistance, please contact Gingko customer service through their official website or the contact information provided with your purchase.

Related Documents - GK18TL

	<p>Gingko Cube Plus Click Clock User Manual</p> <p>A comprehensive guide to setting up, operating, and maintaining the Gingko Cube Plus Click Clock, including features like time setting, alarm functions, sound activation, and flip operations.</p>
	<p>Gingko Click Clock Digital Alarm Clock - Features, Settings, and Manual</p> <p>Comprehensive guide to the Gingko Click Clock, a wooden digital alarm clock. Learn about its features, how to set the time, date, alarms, temperature format, sound activation, and snooze function. Includes care instructions.</p>
	<p>Gingko Tumbler Click Clock: Quick User Manual</p> <p>User manual for the Gingko Tumbler Click Clock, detailing its features, setup, operation, and care. Learn how to set time, alarms, and manage display modes.</p>
	<p>Gingko Lumos Clock Quick User Manual - Setup, Operation, and Care</p> <p>Comprehensive guide for the Gingko Lumos Clock, covering setup, charging, touch controls, time and alarm settings, display modes, snooze, light functions, product care, and warranty information.</p>

  	<p>Gingko clickclock: Digital Alarm Clock User Manual and Instructions</p> <p>Comprehensive user manual for the Gingko clickclock digital alarm clock. Learn how to set time, date, temperature, alarms, use sound activation, and snooze functions. Includes product care information.</p>
  	<p>Gingko Smart Diffuser Lamp: User Manual & Guide</p> <p>Official user manual for the Gingko Smart Diffuser Lamp. Learn about its features, how to use it, charging, care, and warranty information.</p>