

SYLVANIA SRCD804BT

Sylvania SRCD804BT CD Microsystem Instruction Manual

Model: SRCD804BT

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Sylvania SRCD804BT CD Microsystem. This compact audio system features a top-loading CD player, AM/FM radio, Bluetooth wireless connectivity, and an auxiliary input for connecting external audio devices. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Sylvania SRCD804BT Main Unit
- Detachable Speakers (2)
- Instruction Manual

4. PRODUCT OVERVIEW

The Sylvania SRCD804BT consists of a central unit and two detachable speakers. The central unit houses the CD player, radio tuner, Bluetooth module, and main controls.



Image 1: Front view of the Sylvania SRCD804BT CD Microsystem, showing the central unit with its display and controls, flanked by two detachable speakers. The display shows 'CD' and '2:48'.

Controls and Functions:

- **ON/OFF Button:** Powers the unit on or off.
- **SOURCE Button:** Selects input source (CD, FM, AM, Bluetooth, AUX).
- **MODE Button:** Changes playback mode (e.g., repeat, random for CD).
- **PROG/MEM Button:** Programs radio stations or CD tracks.
- **VOLUME Knob:** Adjusts the audio output level.
- **PLAY/PAUSE Button:** Starts or pauses CD playback.
- **STOP/M+ Button:** Stops CD playback; used for memory functions in radio mode.
- **SKIP+/TU+ Button:** Skips to the next track/station or tunes up.
- **SKIP-/TU- Button:** Skips to the previous track/station or tunes down.
- **CD Compartment:** Top-loading tray for compact discs.
- **LCD Display:** Shows current mode, track number, time, and radio frequency.

5. SETUP

Follow these steps to set up your SRCD804BT Microsystem:



Image 2: A general front view of the Sylvania SRCD804BT CD Microsystem, showcasing its compact design with the central unit and two speakers.

5.1 Connecting the Speakers

The SRCD804BT comes with two detachable speakers. Connect the speaker wires from each speaker to the corresponding speaker terminals on the back of the main unit. Ensure correct polarity (positive to positive, negative to negative) for optimal sound quality.

5.2 Connecting Power

Plug the AC power cord into the AC IN jack on the back of the main unit, then plug the other end into a standard AC wall outlet (120V, 60Hz).

5.3 Antenna Connection

For FM radio reception, extend the FM wire antenna fully. For AM radio reception, ensure the built-in AM antenna is positioned for best reception. You may need to adjust the unit's position for optimal signal.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **ON/OFF** button to turn the unit on or off.

6.2 Source Selection

Press the **SOURCE** button repeatedly to cycle through available input modes: CD, FM Radio, AM Radio, Bluetooth, and AUX.

6.3 CD Player Operation

1. Press the **SOURCE** button to select CD mode.
2. Open the CD compartment cover located on top of the unit.
3. Place a CD with the label side facing up into the compartment.
4. Close the CD compartment cover. The unit will read the disc, and the total number of tracks will appear on the

display.

5. Press the **PLAY/PAUSE** button to start playback.
6. Press **PLAY/PAUSE** again to pause playback; press it once more to resume.
7. Press **SKIP+** or **SKIP-** to skip to the next or previous track.
8. Press and hold **SKIP+** or **SKIP-** to fast forward or rewind within a track.
9. Press the **STOP/M+** button to stop CD playback.

6.4 Radio Operation (AM/FM)

1. Press the **SOURCE** button to select FM or AM radio mode.
2. **Manual Tuning:** Press **TU+** or **TU-** repeatedly to tune to your desired frequency.
3. **Automatic Tuning:** Press and hold **TU+** or **TU-** for a few seconds to automatically scan for the next available station.
4. **Setting Presets:**
 - a. Tune to the desired station.
 - b. Press the **PROG/MEM** button. A preset number will flash on the display.
 - c. Use **SKIP+** or **SKIP-** to select the desired preset number.
 - d. Press **PROG/MEM** again to confirm.
5. **Recalling Presets:** In radio mode, press **PROG/MEM** repeatedly to cycle through your stored preset stations.

6.5 Bluetooth Operation

1. Press the **SOURCE** button to select Bluetooth mode. The display will show 'BT' and flash, indicating it is ready for pairing.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for available devices.
3. Select 'SRCD804BT' from the list of devices.
4. Once paired, the 'BT' indicator on the display will stop flashing and remain solid. You can now play audio from your device through the microsystem.
5. Control playback (play/pause, skip) either from your connected device or using the **PLAY/PAUSE**, **SKIP+**, and **SKIP-** buttons on the microsystem.

6.6 Aux-In Connection

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN jack on the front or back of the microsystem.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device (e.g., MP3 player, smartphone).
3. Press the **SOURCE** button to select AUX mode.
4. Play audio from your external device. Volume can be controlled via the microsystem's **VOLUME** knob or your external device.

6.7 Clock and Sleep Timer

The unit features a digital clock and a sleep timer function.

- **Setting the Clock:** Refer to the specific instructions in your model's detailed manual for setting the time, as procedures can vary. Typically, this involves holding a 'TIME' or 'CLOCK' button and using tuning/skip buttons to adjust hours and minutes.
- **Sleep Timer:** The sleep timer allows the unit to automatically turn off after a set period. Consult your model's

detailed manual for activation and setting the duration.

7. MAINTENANCE AND CARE

- **Cleaning the Unit:** Wipe the exterior surfaces of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. If a CD is dirty, wipe it gently with a soft, lint-free cloth from the center outwards.
- **Speaker Care:** Keep speakers free from dust. Do not expose them to excessive moisture.
- **Storage:** If the unit will not be used for an extended period, unplug it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your SRCD804BT, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not securely connected; Power outlet not active.	Ensure power cord is firmly plugged into the unit and a working wall outlet.
No sound	Volume too low; Incorrect source selected; Speaker wires disconnected.	Increase volume; Select correct source; Check speaker wire connections.
CD skipping or not playing	CD is dirty or scratched; CD inserted incorrectly; Unit is vibrating.	Clean or replace CD; Reinsert CD correctly; Place unit on a stable surface.
Bluetooth not connecting	Bluetooth not in pairing mode; Device too far; Device already connected to another unit.	Ensure unit is in Bluetooth pairing mode; Move device closer; Disconnect from other devices.
Poor radio reception	Antenna not extended/positioned correctly; Interference.	Extend and adjust FM antenna; Reposition unit for AM reception; Move away from electronic devices causing interference.

9. SPECIFICATIONS

- **Model:** SRCD804BT
- **Power Source:** AC 120V ~ 60Hz
- **Connectivity:** Bluetooth, Auxiliary Input
- **Radio Frequencies:** AM/FM
- **CD Compatibility:** CD, CD-R/RW
- **Product Dimensions (L x W x H):** 17 x 10.25 x 6.25 inches
- **Item Weight:** 4.99 pounds
- **Manufacturer:** Curtis International LTD

10. WARRANTY AND SUPPORT

This product is covered by a limited warranty. For detailed warranty information, including terms and conditions, please refer to the warranty card included with your product or visit the manufacturer's official website. For technical support or service inquiries, please contact Curtis International LTD customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question