

[Manuals.plus](#) /

› [Westinghouse](#) /

› Westinghouse 6343300 Iron Hill Four-Light Convertible Chandelier/Semi-Flush Ceiling Fixture Instruction Manual

Westinghouse 6343300

Westinghouse 6343300 Iron Hill Four-Light Convertible Chandelier/Semi-Flush Ceiling Fixture Instruction Manual

This manual provides detailed instructions for the safe installation, operation, and maintenance of the Westinghouse 6343300 Iron Hill Four-Light Convertible Chandelier/Semi-Flush Ceiling Fixture.

INTRODUCTION

The Westinghouse Iron Hill Four-Light Convertible Chandelier/Semi-Flush Ceiling Fixture is designed to provide versatile lighting for various indoor spaces. Its industrial yet vintage aesthetic, featuring an oil rubbed bronze finish with highlights and metal shades, complements a range of design styles from modern to farmhouse. This fixture can be installed as either a hanging chandelier or a semi-flush ceiling light, making it suitable for both high and low ceilings in dining rooms, foyers, and living rooms.



The Westinghouse Iron Hill Four-Light Convertible Chandelier/Semi-Flush Ceiling Fixture, showcasing its oil rubbed bronze finish and metal shades.

SAFETY INFORMATION

WARNING: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Always disconnect power at the circuit breaker before installing, cleaning, or servicing this fixture. Failure to do so may result in electric shock, injury, or death. Consult a qualified electrician if you are unsure about any installation procedures. Ensure all electrical connections are secure and comply with local electrical codes and ordinances. Do not exceed the maximum wattage specified for the light bulbs.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact customer support.

- Chandelier/Semi-Flush Ceiling Fixture Body
- Mounting Hardware (canopy, chain, screws, wire nuts)
- Four Metal Shades
- Instruction Manual
- *Note: Light bulbs are not included.*

SETUP AND INSTALLATION

This fixture offers convertible installation as either a chandelier (hanging with a chain) or a semi-flush ceiling fixture (mounted closer to the ceiling). Choose the appropriate method for your space.

1. Preparation

1. Turn off power at the main circuit breaker.
2. Carefully unpack the fixture and all components. Place them on a clean, flat surface.
3. Review all instructions and diagrams thoroughly before beginning installation.

2. Chandelier Installation (Hanging with Chain)

For hanging installation, the chain length can be adjusted to achieve the desired drop from the ceiling.



Image showing the ceiling canopy and chain connection. The chain connects to the canopy, which mounts to the ceiling junction box. The fixture body hangs from the chain.

4. Attach the mounting bracket to the ceiling junction box using the provided screws.
5. Determine the desired hanging length. Open a link in the chain to remove excess links if needed.
6. Connect one end of the chain to the fixture's stem and the other end to the ceiling canopy.
7. Carefully thread the electrical wires through the chain and the center hole of the canopy.
8. Make electrical connections: Connect the fixture's black wire to the house's black (hot) wire, the fixture's white wire to the house's white (neutral) wire, and the fixture's ground wire to the house's ground wire. Secure each connection with a wire nut.
9. Carefully push the canopy up to the ceiling, covering the junction box, and secure it to the mounting bracket.

3. Semi-Flush Installation (Direct Mount)

For semi-flush installation, the fixture is mounted directly to the ceiling, providing a closer fit.

10. Attach the mounting bracket to the ceiling junction box using the provided screws.

11. If using the semi-flush option, the chain is typically not used or is significantly shortened. Follow the specific instructions in your included manual for direct mounting.
12. Make electrical connections as described in step 8.
13. Carefully push the fixture body up to the ceiling, covering the junction box, and secure it to the mounting bracket, ensuring a snug fit.

4. Attaching Shades and Bulbs



Image showing a detailed view of a metal shade with a light bulb. The shade has a white interior for light reflection and an oil-rubbed bronze exterior.

14. Attach the four metal shades to each light socket by screwing them onto the socket rings.
15. Install four medium-base (E26) light bulbs, up to 60-watt maximum each (not included).

For a vintage aesthetic, consider using Westinghouse Timeless Vintage Inspired light bulbs.



The Westinghouse Iron Hill Chandelier installed in a kitchen, demonstrating its aesthetic and light distribution.

OPERATING INSTRUCTIONS

Once the fixture is fully installed and power is restored at the circuit breaker, the Westinghouse Iron Hill fixture operates via a standard wall switch (not included). This fixture is designed for general purpose indoor lighting. The design of the metal shades directs most of the light downwards, providing focused illumination. This makes it ideal for lighting dining tables, kitchen islands, or other areas where direct ambient or task lighting is desired.

MAINTENANCE

- **Cleaning:** Always disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes, as they may damage the finish.
- **Bulb Replacement:** Ensure power is off and bulbs have cooled completely before attempting to replace them. Use

only medium-base (E26) bulbs, with a maximum wattage of 60 watts per socket.

- **Periodic Inspection:** Periodically check all electrical connections and mounting hardware for tightness to ensure safe operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fixture does not light up.	No power to the fixture. Loose wiring connection. Faulty light bulb.	Check the circuit breaker for the room. Verify all electrical connections are secure (ensure power is off first). Replace the light bulb.
Lights flicker or dim unexpectedly.	Loose bulb. Incompatible dimmer switch (if applicable).	Ensure all bulbs are screwed in tightly. If using a dimmer, ensure it is compatible with the type of bulbs installed (e.g., LED dimmers for LED bulbs).
Fixture hangs unevenly or feels loose.	Improper mounting or loose hardware.	Re-check the mounting bracket installation and ensure all screws and connections are tightened securely. Adjust chain links if necessary for chandeliers.

SPECIFICATIONS

Brand: Westinghouse

Model Number: 6343300

Model Name: Iron Hill Four-Light Indoor

Fixture Type: Convertible Chandelier/Semi-Flush

Color: Oil Rubbed Bronze with Highlights and White Interior

Material: Metal

Style: Industrial

Number of Light Sources: 4

Bulb Base: E26 Medium

Max Wattage per Bulb: 60 watts

Total Max Wattage: 240 watts

Voltage: 120 Volts

Light Output (Maximum): 3200 Lumens

Item Dimensions (L x W x H): 22.24"L x 9.06"W x 22.24"H

Item Weight: 5.85 Pounds

Indoor/Outdoor Usage: Indoor

Control Method: Touch (via wall switch)

Water Resistance Level: Not Water Resistant

Required Assembly: No (refers to main fixture body; some assembly of shades/chain required)

WARRANTY AND SUPPORT

Warranty Information

This Westinghouse fixture is backed by a **Five-year limited warranty** against defects in materials and workmanship. This warranty covers manufacturing defects under normal use. For specific terms, conditions, and to make a warranty claim, please refer to the official Westinghouse website or contact their customer service department.

Customer Support

For technical assistance, inquiries about missing or damaged parts, or any other product-related questions, please contact Westinghouse customer support. Contact details can typically be found on the product packaging or the official Westinghouse website.