

[Manuals.plus](#) /

› [Wahl](#) /

› Wahl All in One Rechargeable Grooming Kit #9685 User Manual

Wahl 9685

Wahl All in One Rechargeable Grooming Kit #9685 User Manual

Model: 9685

INTRODUCTION

The Wahl All in One Rechargeable Grooming Kit #9685 is designed for versatile personal grooming, offering multiple attachments for various hair trimming needs. This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your grooming kit. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Wahl All in One Rechargeable Grooming Kit, showcasing the main trimmer unit and its three distinct interchangeable heads.

SAFETY INFORMATION

Potential safety warnings may include: 'Avoid use on irritated or broken skin.', 'Keep away from eyes to prevent injury.', 'Ensure the trimmer is turned off and unplugged when not in use or during cleaning.', 'Do not submerge the trimmer in water or expose it to moisture.', 'Do not use the trimmer on infants or young children.', 'Always follow the manufacturer's instructions for cleaning and maintenance.'

PACKAGE CONTENTS

Your Wahl All in One Rechargeable Grooming Kit #9685 includes the following items:

- Rechargeable Trimmer Unit
- Standard Trimmer Blade Attachment
- Nose/Ear Trimmer Attachment

- Foil Shaver Attachment
- Four Guide Combs (various lengths)
- Cleaning Brush
- Blade Oil
- Charger Power Cord
- Storage Pouch
- Instruction Manual



Image: A complete view of all accessories and components included with the Wahl All in One Rechargeable Grooming Kit.

SETUP

Initial Charging

1. Before first use, ensure the trimmer is turned off.
2. Insert the charger plug into the charging port at the bottom of the trimmer unit.

3. Plug the charger into a standard electrical outlet.
4. Allow the unit to charge for a minimum of 3-5 hours for the initial charge. The charging indicator light will illuminate during charging.
5. Subsequent charges typically require less time, approximately 1 hour for a full charge.

Attaching and Removing Heads

- To attach a head: Align the desired attachment head with the trimmer body and gently push until it clicks securely into place.
- To remove a head: Hold the trimmer unit firmly and gently pull the attachment head straight off. Avoid twisting.

OPERATING INSTRUCTIONS

General Operation

- To turn on the trimmer, slide the power switch upwards.
- To turn off the trimmer, slide the power switch downwards.

Using the Standard Trimmer Blade

- This blade is ideal for beard trimming, stubble, and general body grooming.
- For different lengths, attach one of the four guide combs. Ensure the comb is firmly seated on the blade.
- Always trim against the direction of hair growth for best results.
- Start with a longer guide comb and gradually reduce the length if desired.

Using the Nose/Ear Trimmer Attachment

- This attachment is designed for safe and comfortable removal of unwanted nose and ear hair.
- Gently insert the trimmer tip into the nostril or ear canal. Do not insert too deeply.
- Move the trimmer in a circular motion to cut hairs.

Using the Foil Shaver Attachment

- The foil shaver is suitable for achieving a close, smooth finish on smaller areas or for detailing.
- Hold the shaver flat against the skin and move it in short, gentle strokes.
- Ensure skin is clean and dry for optimal results.

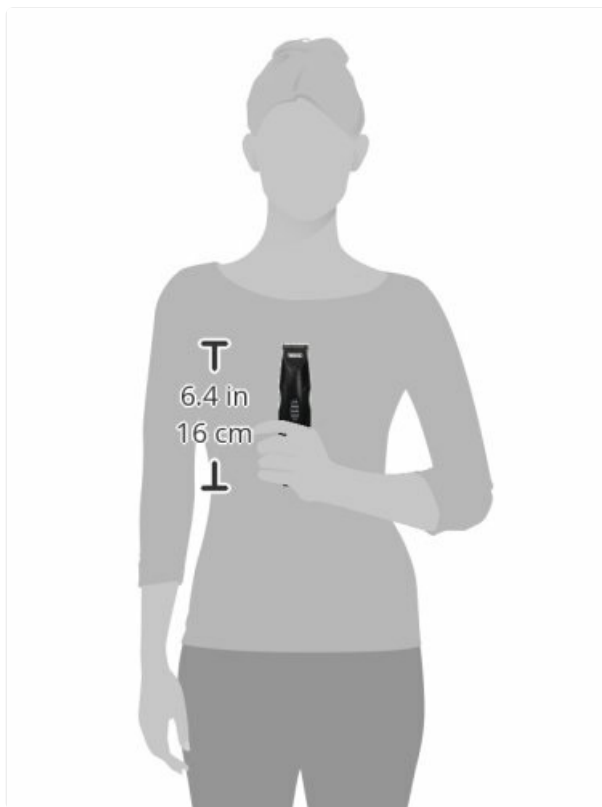


Image: Illustrates the compact size of the Wahl grooming kit, showing it held in hand with approximate dimensions.

MAINTENANCE

Cleaning the Blades and Attachments

- After each use, turn off the trimmer and remove the attachment head.
- Use the provided cleaning brush to brush away any loose hairs from the blades and the inside of the attachment head.
- For thorough cleaning, the blades can be rinsed under running water. Ensure the trimmer unit itself does not get wet. Allow blades to air dry completely before reattaching or storing.

Oiling the Blades

- To maintain optimal cutting performance and blade longevity, apply 1-2 drops of the provided blade oil to the teeth of the trimmer blade after every few uses or as needed.
- Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
- Wipe off any excess oil with a soft cloth.

Storage

- Store the grooming kit and all its accessories in the provided storage pouch in a cool, dry place.
- Ensure the trimmer is fully charged before storing for extended periods to preserve battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on or operate.	Battery is not charged.	Charge the trimmer for the recommended time.

Problem	Possible Cause	Solution
Trimmer pulls or snags hairs.	Blades are dull, dirty, or not oiled. Hair buildup in blades.	Clean and oil the blades. Ensure no hair is trapped. Replace blades if excessively dull.
Charger connection feels loose.	Charger not fully inserted.	Ensure the charger plug is pushed firmly and completely into the trimmer's charging port.
Attachments are difficult to remove.	Incorrect removal technique.	Pull the attachment head straight off the trimmer unit without twisting.

SPECIFICATIONS

Model Number: 9685

Brand: Wahl

Power Source: Rechargeable (1 Lithium Ion battery required)

Product Dimensions: 2.3 x 6.85 x 11 inches

Item Weight: 12.8 Ounces

Color: Black

Recommended Uses: Beard, Mustache, Stubble, Ear, Nose, Body

Manufacturer: WAHL

UPC: 043917100289

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the warranty card included in your product packaging or visit the official Wahl website. You may also contact Wahl customer service directly for assistance.

[Visit the Official Wahl Store on Amazon](#)

© 2023 Wahl. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I dropped my Wahl 9685 trimmer and the cutter head came apart; how do I reassemble it, specifically the white plastic piece?

The white plastic piece you are referring to is likely the cam follower (or drive lever), which connects the motor's rotating pin to the moving blade. When a trimmer is dropped, the blade assembly...

[Read full answer](#)

Why are my Wahl 9685 trimmer blades not cutting properly after only one use?

If your Wahl 9685 trimmer has stopped cutting effectively after only one use, it is likely due to a lack of lubrication or hair buildup between the blades. According to the manual, follow these...

[Read full answer](#)