

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Braun](#) /

› [Braun HC 5010 Hair Clipper Instruction Manual](#)

Braun HC 5010

Braun HC 5010 Hair Clipper Instruction Manual

Model: HC 5010

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Braun HC 5010 Hair Clipper. Please read these instructions thoroughly before first use and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your device.

2. IMPORTANT SAFETY INFORMATION

- **Water and Moisture:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. Do not immerse the appliance in water.
- **Power Source:** Use only the charger provided with the appliance. Ensure the voltage specified on the charger matches your local mains voltage.
- **Children:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Damage:** Do not use the appliance if the cutting head, comb attachment, or charger is damaged.
- **Maintenance:** Do not attempt to repair the appliance yourself. Contact an authorized service center for repairs.
- **Storage:** Store the appliance in a dry place, away from extreme temperatures.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Braun HC 5010 Hair Clipper.







Figure 1: Braun HC 5010 Hair Clipper. This image displays the black clipper body with a blue length comb attached. The power button and length adjustment dial are visible on the front. The model number "Hair Clipper HC 5010" is printed on the side.

Components:

1. Cutting Head
2. Length Comb Attachment (blue)
3. Length Adjustment Dial/Button
4. Power On/Off Button
5. Charging Indicator Light
6. Appliance Socket
7. SmartPlug Charger

4. SETUP AND CHARGING

4.1 Initial Charging

- Before first use, fully charge the clipper for approximately 8 hours.
- Connect the SmartPlug charger to the appliance socket and then plug it into a mains outlet.
- The charging indicator light will illuminate to show the device is charging.
- A full charge provides approximately 50 minutes of cordless operation.

4.2 Attaching the Length Comb

- Ensure the clipper is switched off.
- Align the length comb attachment with the cutting head and slide it on until it clicks into place.
- To remove, gently push the comb attachment upwards and slide it off.

5. OPERATING THE HAIR CLIPPER

5.1 Powering On/Off

- To turn on the clipper, press the Power On/Off button.
- To turn off the clipper, press the Power On/Off button again.

5.2 Adjusting Hair Length (9 Settings)

- The Braun HC 5010 offers 9 precise length settings.
- With the length comb attached, use the length adjustment dial/button to select your desired hair length. The settings are typically indicated by numbers or markings on the comb or clipper body.
- Start with a longer setting if you are unsure, and gradually reduce the length until the desired result is achieved.

5.3 Hair Clipping Technique

- Ensure hair is clean and dry before clipping.
- Hold the clipper with the comb attachment flat against the head.
- Move the clipper slowly against the direction of hair growth.
- For an even cut, ensure the comb attachment remains in full contact with the skin.
- Regularly clear cut hair from the comb and cutting head during use to maintain performance.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Clipper

- Always switch off the clipper and disconnect it from the power outlet before cleaning.
- Remove the length comb attachment.
- Use the cleaning brush (if supplied) to brush away hair from the cutting head and the inside of the clipper body.
- The cutting head can typically be rinsed under running water. Ensure the clipper body remains dry unless specified as fully washable.
- Allow all parts to air dry completely before reassembling or storing.

6.2 Oiling the Blades

- For optimal performance and longevity, it is recommended to oil the cutting blades regularly (e.g., after every few uses).
- Apply a small drop of light machine oil (e.g., sewing machine oil or clipper oil, if supplied) to the top of the blades.
- Turn the clipper on for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is discharged.	Charge the clipper for the recommended duration.
Clipper does not cut effectively.	Blades are clogged with hair or not oiled.	Clean the cutting head and blades. Apply oil to the blades.
Comb attachment falls off.	Not properly attached.	Ensure the comb attachment clicks securely into place.
Reduced battery life.	Battery wear over time.	Ensure full charging cycles. If problem persists, battery may need replacement by authorized service.

8. SPECIFICATIONS

- **Model:** HC 5010
- **Item Model Number:** 4210201129806
- **Power Source:** Battery Powered (Cordless)
- **Blade Material:** Stainless Steel
- **Length Settings:** 9
- **Product Dimensions:** 15.5 x 2.5 x 16.5 cm
- **Item Weight:** 0.36 Kilograms
- **Color:** Black
- **Manufacturer:** Braun

9. WARRANTY AND SUPPORT

This Braun product is manufactured to high-quality standards. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Braun website. For technical support or service, please contact Braun customer service in your region.

You can find more information and support resources on the official Braun website: www.braun.com