

Peg Perego IP0428NA35EB49RO49

Peg Perego Pliko Mini Twin Stroller User Manual

Model: IP0428NA35EB49RO49

1. INTRODUCTION

Thank you for choosing the Peg Perego Pliko Mini Twin Stroller. This lightweight and compact double stroller is designed for optimal agility and comfort for two children. It features independent adjustable backrests and footrests, height-adjustable handles, and a convenient quick-fold mechanism. This manual provides essential information for the safe assembly, operation, maintenance, and care of your Peg Perego Pliko Mini Twin Stroller.

Please read this manual thoroughly before using the stroller and retain it for future reference. Proper use and maintenance will ensure the longevity and safe operation of your stroller.

2. SAFETY INFORMATION

Your child's safety is paramount. Always follow these safety guidelines:

- **Never leave children unattended** in the stroller.
- Always use the **5-point safety harness** for each child to prevent falls or slipping out. Ensure it is correctly adjusted and securely fastened.
- Engage the **brakes** whenever the stroller is stationary.
- Do not overload the storage basket or hang bags on the handles, as this can cause the stroller to become unstable and tip over.
- Ensure all locking devices are engaged before placing children in the stroller.
- The stroller is designed for children from birth up to 36 months, with a maximum weight of **45 pounds per seat**. Do not exceed this weight limit.
- Avoid placing hot liquids, electrical cords, or other hazards near the stroller.
- Keep children clear of moving parts when adjusting or folding the stroller.
- Do not use accessories or spare parts other than those approved by Peg Perego.
- Regularly inspect the stroller for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.

3. COMPONENTS OVERVIEW

Familiarize yourself with the main components of your Pliko Mini Twin Stroller:

- **Frame:** Lightweight aluminum chassis.
- **Seats:** Two independent seating units with adjustable backrests and footrests.
- **Canopies:** Two independently adjustable hoods for sun and weather protection.
- **Harness System:** Two 5-point safety harnesses.
- **Handles:** Ergonomic, height-adjustable push handles.
- **Wheels:** Four sets of double wheels (front swivel/lockable, rear with one-step brakes).
- **Storage Basket:** Under-seat storage for essentials.
- **Folding Mechanism:** Quick-fold system with integrated pull handle.



Figure 3.1: Peg Perego Pliko Mini Twin Stroller (Mod Red)



Figure 3.2: Front view of the stroller, highlighting independent seats and canopies.

4. SETUP AND ASSEMBLY

The Pliko Mini Twin Stroller comes largely pre-assembled. Follow these steps to prepare it for use:

1. **Unpacking:** Carefully remove the stroller from its packaging. Retain packaging materials for potential future transport or storage.

2. Unfolding the Stroller:

- Place the stroller on a flat surface.
- Locate the folding release mechanism (usually a latch or lever on the side of the frame).
- Release the latch and lift the handle upwards firmly until the frame clicks into its fully open position. Ensure all locking mechanisms are securely engaged.
- Verify that the stroller is stable and fully open before use.

3. **Attaching Canopies (if detached):** Slide the canopy attachments onto the designated points on the frame until they click into place.

4. **Adjusting Handles:** Press the buttons on the side of the handles to extend or retract them to your desired height. Release the buttons to lock them in position.



Figure 4.1: Side view of the stroller, illustrating the frame structure.

5. OPERATING INSTRUCTIONS

5.1 Folding the Stroller

The Pliko Mini Twin features a compact umbrella fold. To fold the stroller:

1. Ensure both seat backrests are in their most upright position and canopies are retracted.
2. Engage the rear wheel brakes.
3. Locate the folding release mechanisms (typically levers or buttons near the handles or on the frame).
4. Follow the specific instructions on the frame to initiate the fold. This usually involves lifting a lever and pushing down on the handles while simultaneously pushing the stroller forward.
5. Continue pushing until the stroller collapses into a compact, self-standing position. A locking latch will automatically engage.
6. Utilize the integrated pull handle for easy transportation when folded.





Figure 5.1: Stroller in its folded, self-standing configuration (illustrative color).

5.2 Adjusting Seat Backrests

Each seat's backrest can be adjusted independently:

1. Locate the recline lever or strap mechanism behind each seat.
2. To recline, squeeze the lever or release the strap and gently push the backrest down to the desired position.
3. To raise, push the backrest up until it locks into the desired upright position.

5.3 Adjusting Footrests

The footrests are also independently adjustable:

1. Locate the adjustment mechanism under each footrest.
2. Press the buttons or lift the levers to adjust the footrest angle or length.
3. Ensure it clicks securely into place.

5.4 Using the Harness System

Each seat is equipped with a 5-point safety harness:

1. Place the child in the seat.
2. Bring the shoulder straps over the child's shoulders and the waist straps around their hips.
3. Insert the shoulder strap buckles into the waist strap buckles, then insert both into the central buckle until they click.
4. Adjust the straps to fit snugly around the child, ensuring they are not too tight or too loose.
5. To release, press the button on the central buckle.

5.5 Wheel Operation and Brakes

The front wheels can swivel for maneuverability or be locked for straight-line travel on uneven terrain. The rear wheels feature a one-step foot brake.

- **Front Wheels:** To lock the front wheels, push down the lever located above each front wheel. To unlock for swivel mode, lift the lever up.
- **Rear Brakes:** To engage the brakes, press down firmly on the brake pedal located near the rear wheels. Ensure both sides are engaged. To release, lift the pedal upwards. Always check that the brakes are fully engaged before leaving the stroller stationary.

6. MAINTENANCE AND CARE

Regular maintenance ensures the safety and extends the life of your stroller.

- **Cleaning Fabric:** The fabric parts can be spot cleaned with a damp cloth and mild soap. Refer to the care label for specific washing instructions. Do not use harsh detergents or bleach.
- **Cleaning Frame:** Wipe the aluminum frame with a damp cloth. Dry thoroughly to prevent rust.
- **Wheels:** Keep wheels free of dirt and debris. Periodically check for wear and tear. Lubricate moving parts with a silicone-based lubricant if necessary.
- **Storage:** Store the stroller in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- **Inspections:** Regularly check all fasteners, rivets, and locking mechanisms to ensure they are secure and functioning correctly.

7. TROUBLESHOOTING

If you encounter issues with your stroller, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stroller difficult to fold/unfold	Mechanism stiff or obstructed.	Ensure all seat components are in the upright position. Check for obstructions. Apply silicone lubricant to moving parts if needed.
Brakes not engaging/disengaging	Debris in mechanism or worn parts.	Clear any debris from the brake mechanism. If worn, contact customer support for replacement parts.
Wheels squeak or stick	Dirt/debris or lack of lubrication.	Clean wheels and axles. Apply a silicone-based lubricant to the wheel bearings.
Stroller feels unstable	Not fully unfolded or overloaded.	Ensure all locking mechanisms are engaged. Do not exceed maximum weight limits or hang heavy bags on handles.

If the problem persists, please contact Peg Perego customer support.

8. SPECIFICATIONS

Key technical specifications for the Peg Perego Pliko Mini Twin Stroller:

Brand	Peg Perego
Model Number	IP0428NA35EB49RO49
Color	Mod Red

Frame Material	Aluminum
Fabric Material	Polyester
Tire Material	Rubber
Age Range (Recommended)	Less than 36 months
Maximum Weight Recommendation	45 Pounds per seat
Item Weight	24.2 Pounds
Folded Size (L x W x H)	38.25" x 30.25" x 21"
Seating Capacity	2
Harness Type	5 Point
Number of Wheels	4 (double wheels)
Brake System	Yes (One-step foot brake)



Figure 8.1: Stroller dimensions for reference.

9. WARRANTY AND CUSTOMER SUPPORT

Peg Perego products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Peg Perego website. Keep your proof of purchase for warranty claims.

For technical assistance, spare parts, or any questions not covered in this manual, please contact Peg Perego customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

Online Resources: For additional information, product registration, and FAQs, visit the official Peg Perego website: us.pegperego.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question