

[Manuals.plus](#) /

› [HCDZ](#) /

› HCDZ Replacement Remote Control for Dynex TVs (Models: DX-15E220A12, DX-L19-10A, DX-L15-10A, DX-L321-10A, DX15L150A11E15AMZKNLWBENN, DX15L150A11E15AMZKNLWBMNN, E40ASZKNLWBUXNX, DX19L150A11, DX32LD150A11B)

HCDZ HCDZ-7627

HCDZ Replacement Remote Control Instruction Manual

For Dynex LCD LED HDTV TV Models

INTRODUCTION

This manual provides instructions for the HCDZ Replacement Remote Control, designed for use with various Dynex LCD LED HDTV TV models. This remote control is an infrared (IR) replacement unit and requires no programming. Simply insert batteries to begin operation.

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.



Image: Back of the remote control with the battery cover closed.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside

the compartment.



Image: Back of the remote control with the battery cover open, showing battery slots.

4. Slide the battery cover back into place until it clicks securely.

The remote is now ready for use.

OPERATING INSTRUCTIONS

This HCDZ replacement remote control is designed for immediate use with compatible Dynex TVs without any complex setup or programming. It operates using infrared (IR) technology.

- **Point and Use:** Aim the remote control directly at the infrared receiver on your Dynex TV. Ensure there are no obstructions between the remote and the TV.
- **Range:** The effective operating range is approximately 10 meters (33 feet). Performance may vary based on environmental factors and battery strength.
- **Functionality:** All standard functions of your original Dynex TV remote, such as power, volume, channel selection, menu navigation, and input selection, should be accessible.

TROUBLESHOOTING

If your remote control is not functioning as expected, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace old or weak batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote control and the TV's IR receiver. Remove any objects that might be blocking the signal.
- **Intermittent Function:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure you are within the effective operating range (up to 10 meters).
- **Specific Buttons Not Working:**
 - Verify that the remote control model is compatible with your specific Dynex TV model. While this remote is broadly compatible, some very specific TV functions might differ.

PRODUCT SPECIFICATIONS

- **Brand:** HCDZ
- **Model Number:** HCDZ-7627
- **Special Feature:** Universal replacement
- **Compatible Devices:** Television (Dynex LCD LED HDTV TV models)
- **Connectivity Technology:** Infrared (IR)
- **Maximum Range:** 10 Meters
- **Battery Type:** AAA (Nickel-Metal Hydride recommended, not included)
- **Controller Type:** Button Control
- **Maximum Number of Supported Devices:** 1

WARRANTY AND SUPPORT

Specific warranty information for this HCDZ replacement remote control is not provided in the product details. For any support inquiries, technical assistance, or questions regarding compatibility, please contact the manufacturer, HCDZ, directly through their official channels or the retailer from whom the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B017NHHXKC>

More documents and user manuals: <https://manuals.plus/>