

[manuals.plus](#) /› [Meliconi](#) /› [Meliconi 1875 Universal Remote Control User Manual](#)

## Meliconi 1875

# Meliconi 1875 Universal Remote Control User Manual

Model: 1875

## INTRODUCTION

Welcome to the user manual for your Meliconi 1875 Universal Remote Control. This guide provides detailed instructions for setting up, operating, and maintaining your remote, ensuring seamless control over your compatible video and television devices.

## PRODUCT OVERVIEW

The Meliconi 1875 is a versatile universal remote control designed to operate a wide range of video and television models. Its ergonomic design and comprehensive functionality make it an ideal replacement or secondary remote for your entertainment system.



*Image of the Meliconi 1875 Universal Remote Control, showing its ergonomic design and button layout.*

## SETUP INSTRUCTIONS

---

### 1. Battery Installation

- Locate the battery compartment on the back of the remote.
- Insert two AAA batteries, ensuring correct polarity (+/-).
- Close the battery compartment cover securely.

### 2. Programming the Remote

The Meliconi 1875 is designed for broad compatibility. Programming typically involves a simple code entry or automatic search function. Refer to the specific programming codes for your device brand, usually found in a separate code list (not provided in this manual).

1. Turn on the device you wish to control (e.g., TV, VCR).
2. Press and hold the **SET** button on the remote until the LED indicator lights up.
3. Enter the 3-digit code for your device brand. The LED should turn off, then flash to confirm.
4. Test the remote's functions. If it doesn't work, try the next code for your brand or use the automatic search method.

#### Automatic Search Method

1. Turn on the device.
2. Press and hold the **SET** button until the LED lights up.
3. Press the **POWER** button repeatedly until the device turns off.
4. Once the device turns off, press **SET** again to save the code.
5. Test the remote.

## OPERATING YOUR REMOTE

---

The Meliconi 1875 features standard remote control buttons for common functions.

- **Power Button:** Turns the device on or off.
- **Channel Up/Down:** Changes channels.
- **Volume Up/Down:** Adjusts volume.
- **Mute:** Silences the audio.
- **Number Buttons (0-9):** For direct channel input.
- **Input/Source:** Switches between input sources (HDMI, AV, etc.).
- **Menu:** Accesses the device's menu.
- **Navigation Buttons:** For navigating menus.
- **OK/Enter:** Confirms selections.

For advanced functions, refer to your device's original manual as button mapping may vary.

## COMPATIBLE DEVICES

---

The Meliconi 1875 is compatible with a wide range of video and television models, including but not limited to:

- VIDEOCON V 2422 LEF, V 1922 LE
- ASANO 19 DF 3001, 22 DF 3001

- AUDIOLA TV 822 LED
- UNITED LED 32 X 15, LED 29 X 15, LED 22 X 15
- CHANGHONG 32 C 1600
- HISENSE LHDN 32 W12 EU, LHDN 24 V86 EU, LTDN 24 W12 EU

This list is not exhaustive. For a complete list of compatible models and programming codes, please consult the Meliconi website or the code list provided with your remote.

## CARE AND MAINTENANCE

- Keep the remote control dry. Liquids can damage the internal circuits.
- Do not expose the remote to extreme temperatures.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working	Batteries are dead or incorrectly inserted.	Replace batteries, check polarity.
Remote not working	Remote not programmed correctly.	Re-program the remote using the correct code or automatic search.
Remote only controls some functions	Incorrect code used or partial compatibility.	Try another code for your device brand.
LED indicator not lighting up	Batteries are dead or remote is faulty.	Replace batteries. If problem persists, contact support.

## TECHNICAL SPECIFICATIONS

- **Brand:** Meliconi
- **Model:** 1875
- **Connectivity Technology:** USB
- **Special Feature:** Flat
- **Audio Output Mode:** Stereo
- **Image Format:** 16:9

*Note: Some specifications like "Audio Output Mode" and "Image Format" may refer to the capabilities of the devices the remote is designed to control, rather than the remote itself. "USB" connectivity typically implies a port for programming or firmware updates.*

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official Meliconi website.

If you encounter any issues not covered in this manual, or require further assistance, please contact

Meliconi customer support.

**Manufacturer:** MELICONI

**ASIN:** B017NPO7PI

**Date First Available:** November 6, 2015