

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Conair](#) /

› [Conair GS95 Extreme Steam Fabric Steamer User Manual](#)

Conair GS95

Conair GS95 Extreme Steam Fabric Steamer User Manual

Model: GS95

1. INTRODUCTION

Thank you for purchasing the Conair GS95 Extreme Steam Fabric Steamer. This powerful 1800-watt steamer is designed to quickly and efficiently remove wrinkles from various fabrics, offering a convenient alternative to traditional ironing and dry cleaning. Its dual heat technology provides faster, higher steam for superior results. Please read this manual thoroughly before use to ensure safe and optimal operation of your new fabric steamer.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before using the appliance.
- Use the appliance only for its intended use as described in this manual.
- To protect against electric shock, do not immerse the steamer base, cord, or plug in water or other liquids.
- Always unplug the appliance from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the appliance with a damaged cord or plug, or if it has been dropped or damaged.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
- Do not allow the cord to hang over the edge of a table or counter.
- Always ensure the water tank is securely in place before operating.
- Never direct steam at people, pets, or electrical appliances. Steam is hot and can cause burns.
- Use caution when handling the hot steam nozzle and attachments.
- Only use distilled or demineralized water to prevent mineral buildup and extend the life of the steamer.
- Do not open the water tank cap or attempt to refill while the steamer is operating or hot.
- Store the steamer in a cool, dry place when not in use.

3. PRODUCT FEATURES

- **Dual Heat Technology:** Provides faster, higher steam for superior wrinkle removal.
- **Powerful Performance:** 1800 watts of steaming power.
- **Quick Heat-Up:** Ready to use in approximately 100 seconds.
- **Extended Steam Time:** Offers up to 60 minutes of continuous steam.
- **Large Water Tank:** Easy-to-fill, removable 60-ounce water tank.
- **Telescopic Pole:** Adjustable 45-inch telescopic pole for customized height.
- **Integrated Hanger:** 360° rotating foldable garment hanger with pant clips.
- **Attachments:** Includes a bristle brush and crease attachments for versatile use.
- **Energy-Saving Steam Pause:** Allows for temporary cessation of steam flow.
- **Versatile Use:** Ideal for all fabric curtains, drapes, bedding, upholstery, and clothing.
- **Sanitizing Benefits:** Helps kill dust mites and bedbugs.

4. ASSEMBLY AND SETUP

Follow these steps to assemble your Conair GS95 Fabric Steamer:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: steamer base, telescopic pole, garment hanger, steam hose with nozzle, water tank, and attachments.
2. **Attach Telescopic Pole:** Insert the bottom end of the telescopic pole into the designated opening on the steamer base. Push down firmly until it clicks into place.
3. **Attach Garment Hanger:** Slide the garment hanger onto the top of the telescopic pole. Ensure it is securely seated.
4. **Connect Steam Hose:** Screw the steam hose connector clockwise into the steam outlet on the steamer base until it is tight.
5. **Fill Water Tank:** Remove the 60-ounce water tank from the base. Unscrew the cap and fill the tank with distilled or demineralized water. Do not overfill. Replace the cap securely.
6. **Insert Water Tank:** Place the filled water tank back into the steamer base, ensuring it is properly seated.
7. **Extend Pole:** Extend the telescopic pole to your desired height by opening the clamps, pulling up the sections, and then closing the clamps to secure.
8. **Attach Accessories:** If desired, attach the bristle brush or crease attachment to the steam nozzle by aligning and snapping it into place.



Figure 1: Fully assembled Conair GS95 Extreme Steam Fabric Steamer. The image shows the white and gray steamer base with wheels, a tall silver telescopic pole, a black foldable garment hanger at the top, and a flexible hose connecting the base to the steam nozzle.

5. OPERATING INSTRUCTIONS

Once assembled, follow these steps to operate your fabric steamer:

1. **Plug In:** Plug the power cord into a standard electrical outlet.
2. **Power On:** Turn on the steamer using the power switch located on the base. The indicator light will illuminate.
3. **Heat-Up:** Allow approximately 100 seconds for the steamer to heat up and produce steam. You will hear the water heating and see steam begin to emit from the nozzle.
4. **Prepare Garment:** Hang the garment on the integrated hanger. For best results, smooth out any major wrinkles by hand.
5. **Steaming Technique:** Hold the steam nozzle a few inches away from the fabric. Move the nozzle slowly up and down the garment, allowing the steam to penetrate the fibers. For stubborn wrinkles, gently press the nozzle against the fabric.
6. **Using Attachments:** The bristle brush attachment can be used to loosen fibers and remove lint, while the crease attachment helps create crisp pleats and folds.
7. **Steam Pause:** Utilize the energy-saving steam pause feature if you need to temporarily stop steaming.
8. **After Use:** When finished, turn off the power switch and unplug the steamer from the outlet. Allow the unit to cool completely before emptying the water tank and storing.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your steamer.

6.1. Emptying and Cleaning

- After each use, allow the steamer to cool down completely.
- Remove the water tank and empty any remaining water.
- It is recommended to also empty any residual water from the internal reservoir by tilting the unit over a sink.
- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.

6.2. Descaling (Mineral Buildup Removal)

Over time, mineral deposits can build up inside the steamer, especially if tap water is used. Descaling is

recommended every few months or as needed.

1. Ensure the steamer is unplugged and completely cool.
2. Prepare a solution of 1/3 white vinegar and 2/3 distilled water.
3. Pour the solution into the water tank.
4. Place the water tank back into the steamer base.
5. Plug in the steamer and turn it on. Allow it to steam until half of the solution has been used.
6. Turn off the steamer, unplug it, and let it cool for at least 30 minutes.
7. Repeat the steaming process with the remaining solution.
8. Empty the tank and rinse thoroughly with fresh distilled water.
9. Fill the tank with fresh distilled water and run the steamer for a few minutes to flush out any remaining vinegar residue.

6.3. Storage

When not in use, store the steamer in a cool, dry place. Ensure the water tank is empty and the unit is clean before storing. The telescopic pole can be collapsed for more compact storage.

7. TROUBLESHOOTING

If you experience issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam	<ul style="list-style-type: none">• Water tank is empty.• Steamer not heated sufficiently.• Mineral buildup.• Hose or nozzle blocked.	<ul style="list-style-type: none">• Refill water tank.• Allow 100 seconds for heat-up.• Perform descaling procedure.• Check for kinks in hose; clean nozzle.
Water spitting from nozzle	<ul style="list-style-type: none">• Overfilled water tank.• Mineral buildup.• Steamer not fully heated.	<ul style="list-style-type: none">• Do not overfill tank.• Perform descaling procedure.• Allow full heat-up time.
Steamer leaking water	<ul style="list-style-type: none">• Water tank not seated correctly.• Hose not securely attached.• Overfilled water tank.	<ul style="list-style-type: none">• Ensure water tank is properly inserted.• Tighten hose connection.• Do not overfill tank.
Steamer not turning on	<ul style="list-style-type: none">• Not plugged in.• Power outlet issue.• Unit malfunction.	<ul style="list-style-type: none">• Ensure plug is firmly in outlet.• Test outlet with another appliance.• Contact customer support if issue persists.

8. SPECIFICATIONS

Feature	Specification
Model Number	GS95
Brand	Conair
Wattage	1800 watts
Water Tank Capacity	60 ounces
Heat-Up Time	Approx. 100 seconds
Continuous Steam Time	Up to 60 minutes
Telescopic Pole Height	45 inches (adjustable)
Style	Modern

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the official Conair website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Conair Official Website: www.conair.com

