

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [West Bend](#) /

› [West Bend Coffee Percolator Urn Power Cord Instruction Manual for Models 11868, 11869, 11825, 1829](#)

## West Bend Power Cord for Models 11868, 11869, 11825, 1829

# West Bend Coffee Percolator Urn Power Cord Instruction Manual

Model Compatibility: 11868, 11869, 11825, 1829

## INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your West Bend Coffee Percolator Urn Power Cord. This 2-pin, 36-inch power cord is designed as a replacement part for various West Bend Coffee Percolator Urn models, including 11868, 11869, 11825, and 1829. Please read this manual thoroughly before installation and use.

## SETUP

Proper setup ensures safe operation and longevity of your appliance.

- 1. Verify Compatibility:** Before connecting, ensure this 2-pin power cord is compatible with your specific West Bend Coffee Percolator Urn model. Refer to your urn's original manual or product specifications.
- 2. Inspect the Cord:** Carefully uncoil the new power cord and inspect it for any signs of damage, such as cuts, frayed wires, or bent pins. Do not use a damaged cord.
- 3. Connect to Urn:** Locate the power inlet on your West Bend Coffee Percolator Urn. Align the two pins of the power cord connector with the corresponding receptacles on the urn. Gently push the connector firmly into the urn's inlet until it is securely seated. Do not force the connection.
- 4. Connect to Power Outlet:** Plug the other end of the power cord into a standard, grounded electrical outlet. Ensure the outlet matches the voltage requirements of your coffee percolator urn.



**Image:** A detailed view of the 2-pin power cord connector. The connector is black, with two circular pin receptacles visible at the front. Markings "TA HSING E-74893" and "TA-9" are embossed on the top surface, indicating manufacturing details. This image illustrates the specific type of connector used for the West Bend Coffee Percolator Urn.

## OPERATING INSTRUCTIONS

---

This power cord serves to supply electrical power to your West Bend Coffee Percolator Urn. Its operation is passive, meaning it facilitates the function of the urn itself.

- **Power Supply:** Once securely connected to both the urn and a power outlet, the cord provides the necessary electrical current for the urn to operate according to its design (e.g., heating, percolating).
- **Safe Usage:** Always ensure the cord is not pinched, kinked, or placed under heavy objects. Avoid running the cord across high-traffic areas where it could be a tripping hazard or become damaged.
- **Disconnection:** To disconnect power, always grasp the plug firmly and pull it straight out from the wall outlet. Never pull the cord itself, as this can damage the wiring or the plug. Similarly, disconnect the cord from the urn by grasping the connector, not the cord.

## MAINTENANCE

---

Proper maintenance extends the life of your power cord and ensures safe operation.

- **Cleaning:** Disconnect the power cord from both the urn and the wall outlet before cleaning. Wipe the cord and connector with a dry, soft cloth. Do not use abrasive cleaners, solvents, or immerse the cord in water.
- **Storage:** When not in use, gently coil the power cord. Avoid tight coiling or bending, which can stress the internal wires. Store the cord in a dry place, away from direct sunlight and extreme temperatures.
- **Regular Inspection:** Periodically inspect the entire length of the cord, the plug, and the connector for any signs of wear, damage, or discoloration. If any damage is observed, discontinue use immediately and replace the cord.

## TROUBLESHOOTING

---

If you experience issues with your West Bend Coffee Percolator Urn, the power cord may be a factor. Here are some common troubleshooting steps related to the power cord:

- **Urn Not Receiving Power:**
  - Ensure the power cord is securely plugged into both the urn and a functioning wall outlet.
  - Check if the wall outlet is live by plugging in another small appliance.
  - Inspect the power cord for visible damage (cuts, kinks, frayed wires). If damaged, replace the cord.
- **Loose Connection:**
  - If the cord feels loose when connected to the urn, gently push it in further to ensure a snug fit.
  - If the connection remains loose or intermittent, the cord's connector or the urn's inlet may be worn. Consider replacing the cord or having the urn inspected by a qualified technician.
- **Overheating Cord:**
  - If the power cord feels unusually warm to the touch during operation, immediately unplug it from the wall and the urn.
  - This could indicate an overloaded circuit, a faulty cord, or an issue with the urn itself. Do not use the cord or urn until the cause is identified and resolved.

If troubleshooting steps do not resolve the issue, consult a qualified technician or contact West Bend customer support.

## SPECIFICATIONS

---

Feature	Detail
Product Type	Power Cord (Replacement Part)
Connector Type	2-Pin
Length	36 inches (approximately 91 cm)
Compatibility	West Bend Coffee Percolator Urn Models: 11868, 11869, 11825, 1829
ASIN	B017OL4DNC

## WARRANTY AND SUPPORT

Information regarding specific warranty terms for this replacement power cord is typically provided with the original purchase or can be obtained directly from the seller or manufacturer. For product support, please refer to the contact information provided by your retailer or the official West Bend website.

