

[Manuals.plus](#) /

> [Taylor](#) /

> Taylor 1476 Instant Read Digital Meat Thermometer User Manual

## Taylor 1476

# Taylor 1476 Instant Read Digital Meat Thermometer User Manual

Model: 1476

## INTRODUCTION

---

Thank you for choosing the Taylor 1476 Instant Read Digital Meat Thermometer. This compact and versatile thermometer is designed to provide quick and accurate temperature readings for various cooking applications, including grilling, BBQ, and general kitchen use. Its folding probe and clear digital display make it an essential tool for ensuring perfectly cooked food.

## PRODUCT FEATURES

---

- **Compact and Portable:** Folds away for convenient storage and features a built-in carrying hole.
- **Wide Temperature Range:** Measures temperatures from -40°F to 450°F (-40°C to 230°C).
- **Clear LCD Readout:** Large 0.7-inch LCD display for easy temperature reading.
- **Simple Operation:** Equipped with an ON/OFF button and a C/F switch for unit selection.
- **Quick Response:** Provides fast and accurate temperature readings.



Figure 1: Taylor 1476 Digital Meat Thermometer with its probe extended, displaying a temperature reading on the LCD screen.

## PACKAGE CONTENTS

---

- Taylor 1476 Instant Read Digital Meat Thermometer
- 1 x LR44 Battery (pre-installed)

## SETUP

---

### Battery Installation/Activation

The Taylor 1476 thermometer comes with a pre-installed LR44 battery. Before first use, you must remove the insulation tab to activate the thermometer.

1. Locate the battery compartment on the back of the unit.
2. Carefully remove the small plastic insulation tab protruding from the battery compartment.

3. Ensure the battery is seated correctly.



Figure 2: Rear view of the thermometer, highlighting the battery compartment and control buttons.

## OPERATING INSTRUCTIONS

---

### Turning On/Off

- To turn the thermometer ON, simply unfold the probe from its stored position. The display will illuminate.
- Alternatively, press the **ON/OFF** button located on the back of the unit.
- To turn the thermometer OFF, fold the probe back into its stored position. The display will turn off.
- Alternatively, press and hold the **ON/OFF** button for a few seconds. The thermometer will also automatically shut off after a period of inactivity to conserve battery life.

### Selecting Temperature Unit (°C/°F)

- To switch between Celsius (°C) and Fahrenheit (°F), press the **C/F** button located on the back of the unit.

## Taking a Temperature Reading

1. Unfold the probe to turn on the thermometer.
2. Insert the stainless steel probe into the thickest part of the food, avoiding bone or gristle.
3. Wait for the temperature reading on the LCD display to stabilize. This usually takes a few seconds.
4. Once the desired temperature is reached, remove the probe from the food.
5. Fold the probe back into the unit to turn off the thermometer and store it.

### Important Safety Note:

- Digital thermometers are **NOT** meant to be left in food during cooking in an oven or grill. The plastic and electronic components can be damaged by excessive heat.
- The thermometer probe will be hot after use. Use oven mitts or potholders when handling the hot probe.



Figure 3: Measuring the internal temperature of food with the Taylor 1476 thermometer.

---

## Cleaning Instructions

- Always clean the stainless steel probe after each use.
- Wipe the probe with a damp cloth and mild detergent.
- Do **NOT** immerse the entire thermometer in water or place it in a dishwasher. The electronic components are not waterproof.
- Dry the probe thoroughly before storing.

## Storage

- Store the thermometer with the probe folded into the unit to protect it.
- Utilize the built-in carrying hole for convenient hanging storage if desired.
- Store in a cool, dry place away from extreme temperatures.



Figure 4: The thermometer in its compact, folded state for easy storage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is dead or insulation tab not removed.	Remove insulation tab. Replace LR44 battery.
Inaccurate temperature readings.	Probe not inserted deep enough; probe tip touching bone/gristle; battery low.	Insert probe into thickest part of meat, avoiding bone. Replace battery.
Thermometer does not turn on when probe is unfolded.	Battery issue; internal connection problem.	Check/replace battery. If problem persists, contact customer support.

## SPECIFICATIONS

---

- **Model:** 1476
- **Temperature Range:** -40°F to 450°F (-40°C to 230°C)
- **Display:** 0.7" LCD Digital Readout
- **Power Source:** 1 x LR44 Battery (included)
- **Dimensions:** 4.53 x 0.79 x 0.98 inches (folded)
- **Weight:** 1.6 ounces
- **Material:** Plastic body, Stainless Steel probe
- **Special Feature:** Fast Refresh

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please visit the official Taylor website or contact their customer service department. Keep your purchase receipt for warranty claims.

[Visit the Taylor Store on Amazon](#)