

[Manuals.plus](#) /

› [Ikea](#) /

› Ikea UTRUSTA Push-Open Door Opener (2 Pieces) Instruction Manual

Ikea IKE-802.302.24

Ikea UTRUSTA Push-Open Door Opener (2 Pieces)

INSTRUCTION MANUAL

1. Product Overview

The Ikea UTRUSTA Push-Open Door Opener provides a convenient and handle-free solution for opening cabinet doors and drawers. This set includes two push-open units, allowing for easy access with a simple press. It is designed for use with various cabinet types, offering a clean and minimalist aesthetic.



This image displays the complete set of two Ikea UTRUSTA push-open door openers, each consisting of a main push mechanism and a separate mounting plate. The units are shown in their assembled state, ready for installation.

2. Safety Information

- Always ensure the product is securely mounted according to the instructions to prevent injury or damage.
- Keep small parts away from children to avoid choking hazards.
- Do not apply excessive force when operating the mechanism, as this may cause damage to the unit or the cabinet door.
- If any part is damaged, discontinue use and replace the unit.

3. Setup and Installation

Follow these steps for proper installation of your UTRUSTA Push-Open Door Opener. Tools required: screwdriver, drill, pencil, measuring tape.

1. **Prepare the Mounting Location:** Identify the desired position for the push-open unit on the inside of your cabinet frame or side panel. Ensure it aligns with the edge of the door.
2. **Attach the Mounting Plate:**







A close-up of the black plastic mounting plate for the Ikea UTRUSTA push-open door opener. It features multiple screw holes labeled A, B, and C, indicating different mounting options.

Position the mounting plate (as shown above) at the chosen location. Use a pencil to mark the screw holes. Drill pilot holes if necessary, then secure the mounting plate using appropriate screws. The plate offers multiple hole options (A, B, C) for flexible positioning.

3. **Insert the Push-Open Unit:**






A detailed view of a single Ikea UTRUSTA push-open door opener, highlighting its metallic casing and the grey plastic push mechanism in a retracted position.

Slide the push-open unit into the mounting plate until it clicks securely into place. Ensure the tip of the mechanism faces the cabinet door.

4. **Adjust for Door Gap:** Close the cabinet door gently. The push-open mechanism should make contact with the door. If the door does not open smoothly or remains slightly ajar, you may need to adjust the position of the mounting plate or the unit itself. Some units allow for minor depth adjustment by twisting the tip.
5. **Test Operation:** Press the cabinet door gently to engage the mechanism. The door should spring open slightly. Press again to close and latch the door.

4. Operating Instructions

To open a cabinet door equipped with the UTRUSTA Push-Open Door Opener, simply press the door gently inward. The internal mechanism will release, causing the door to spring open slightly, allowing you to pull it fully open. To close the door, push it back until it latches securely with the push-open mechanism.

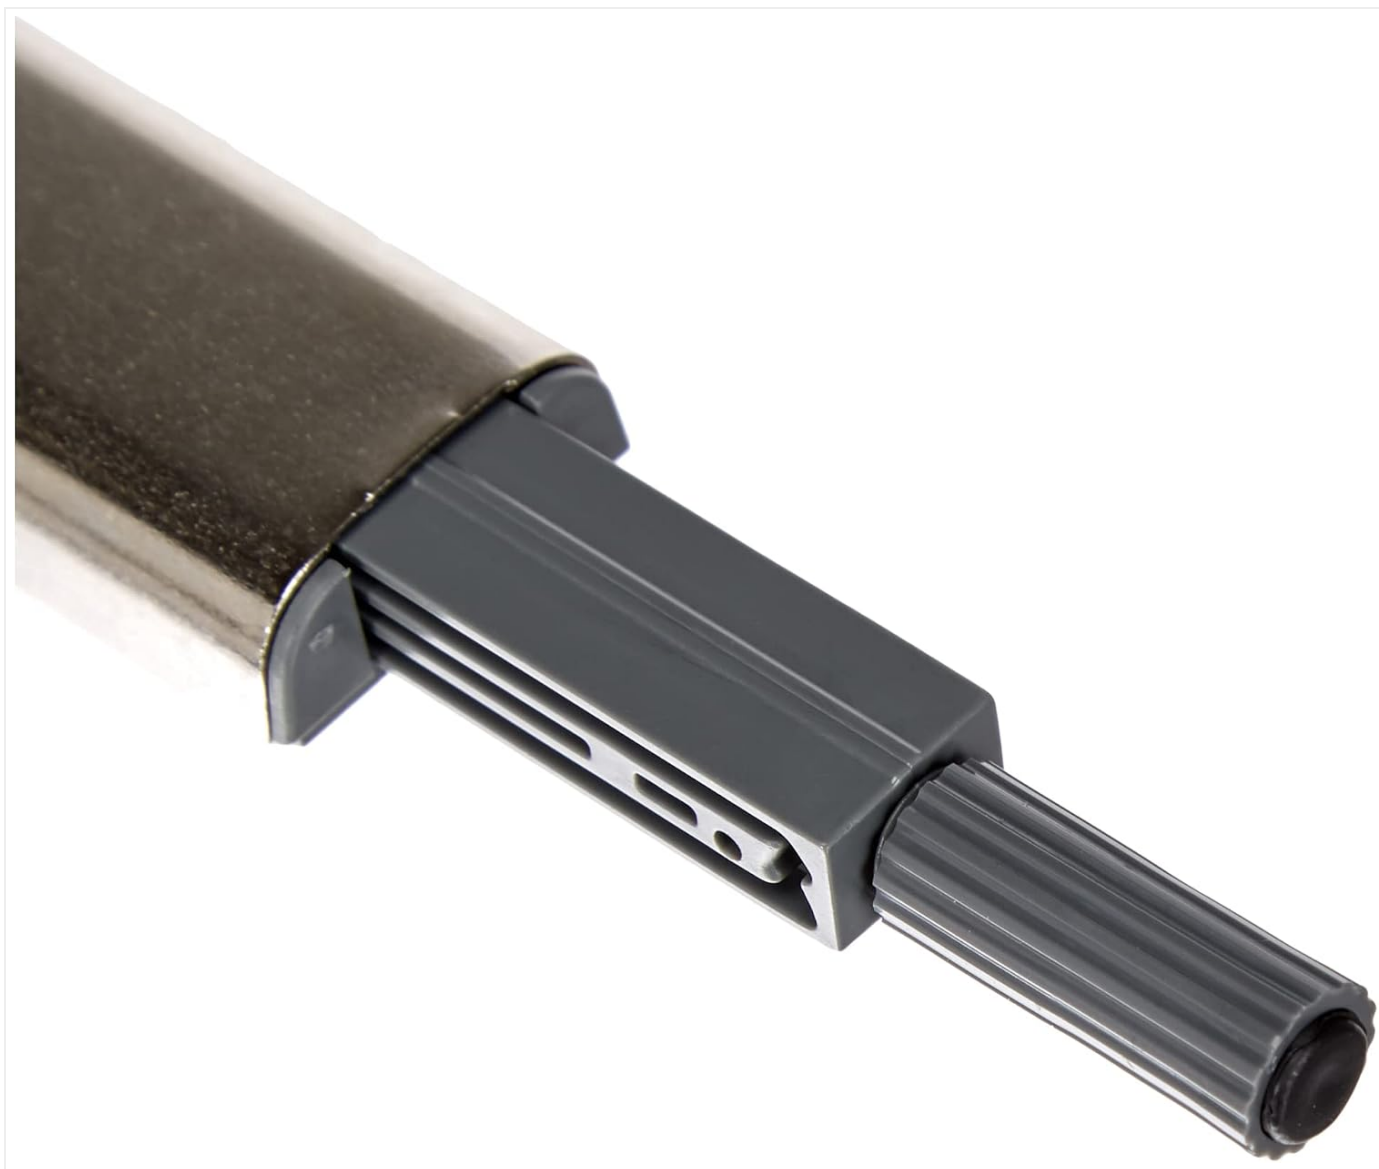

This image shows the Ikea UTRUSTA push-open door opener with its internal mechanism fully extended, demonstrating how it pushes the door open. The ribbed tip is visible.

5. Maintenance


- **Cleaning:** Wipe the exterior of the push-open unit with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Inspection:** Periodically check the mounting screws to ensure they are tight. Inspect the mechanism for any signs of wear or damage.
- **Lubrication:** The mechanism is designed to be maintenance-free. Do not apply lubricants, as this may attract dust and hinder operation.

6. Troubleshooting

- **Door does not open:** Ensure the push-open unit is correctly aligned with the door and that the door makes firm contact with the mechanism when closed. Check if the unit is securely mounted.
- **Door does not stay closed:** Verify that the push-open unit is fully extended when the door is pressed to open. If the mechanism is worn or damaged, it may not latch properly and require replacement.
- **Mechanism feels stiff:** Check for any obstructions around the mechanism or the door. Ensure the unit is clean and free from debris.

7. Specifications

Brand	Ikea
Model Number	IKE-802.302.24
Number of Pieces	2
Material	Alloy Steel
Finish	Nickel
Color	Banana <i>(Note: This refers to an internal product color code; the actual finish is Nickel.)</i>
Product Dimensions	18 x 1 x 23 cm; 70 grams
Recommended Use	General door opening, maintaining hygiene, assisting people with mobility issues

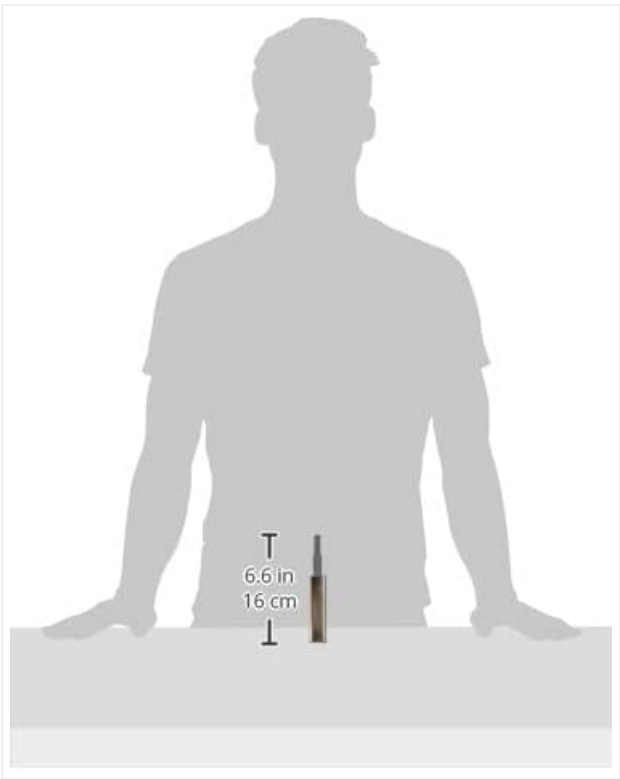

A diagram illustrating the approximate dimensions of the Ikea UTRUSTA push-open door opener, shown next to a human silhouette for scale. The height is indicated as 6.6 inches (16 cm).

8. Warranty and Support

Specific warranty details and direct support contact information are not provided within this manual. For warranty claims, technical assistance, or further product information, please refer to the official Ikea website or contact Ikea customer service directly. Keep your proof of purchase for any warranty-related inquiries.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B017S8XKDK>

More documents and user manuals: <https://manuals.plus/>