

## akku-net 4.82.GOP.2.12

# akku-net USB Adapter for Continuous Power for GoPro Hero 3 User Manual

Model: 4.82.GOP.2.12

## INTRODUCTION

This manual provides instructions for the akku-net USB Adapter for Continuous Power, designed specifically for the GoPro Hero 3 camera. This adapter allows your GoPro Hero 3 to receive continuous power via a USB connection, enabling extended operation without relying solely on the camera's internal battery.

Please read this manual carefully before using the product to ensure proper operation and longevity.

## PRODUCT OVERVIEW

The akku-net USB Adapter for Continuous Power is a compact device that connects to your GoPro Hero 3 camera, providing a USB input for external power. It is designed for seamless integration and reliable performance.



Figure 1: The akku-net USB Adapter for Continuous Power, showing the main adapter unit and its integrated USB-A cable.


## SETUP

- 1. Identify the Adapter:** Locate the akku-net USB Adapter. It consists of a small black module with a USB-A cable attached.
- 2. Locate GoPro Hero 3 Battery Compartment:** Open the battery compartment of your GoPro Hero 3 camera.
- 3. Insert the Adapter:** Carefully insert the adapter module into the GoPro Hero 3's battery slot. Ensure the pins on the adapter align correctly with the camera's contacts. The adapter is designed to fit snugly.



**Figure 2:** Close-up view of the adapter's contact pins, which connect to the GoPro Hero 3 battery terminals.

4. **Close Battery Compartment:** Close the GoPro Hero 3's battery compartment door, ensuring the USB cable exits without being pinched.
5. **Connect to Power Source:** Plug the USB-A end of the adapter's cable into a compatible USB power source (e.g., a USB wall adapter, power bank, or computer USB port).

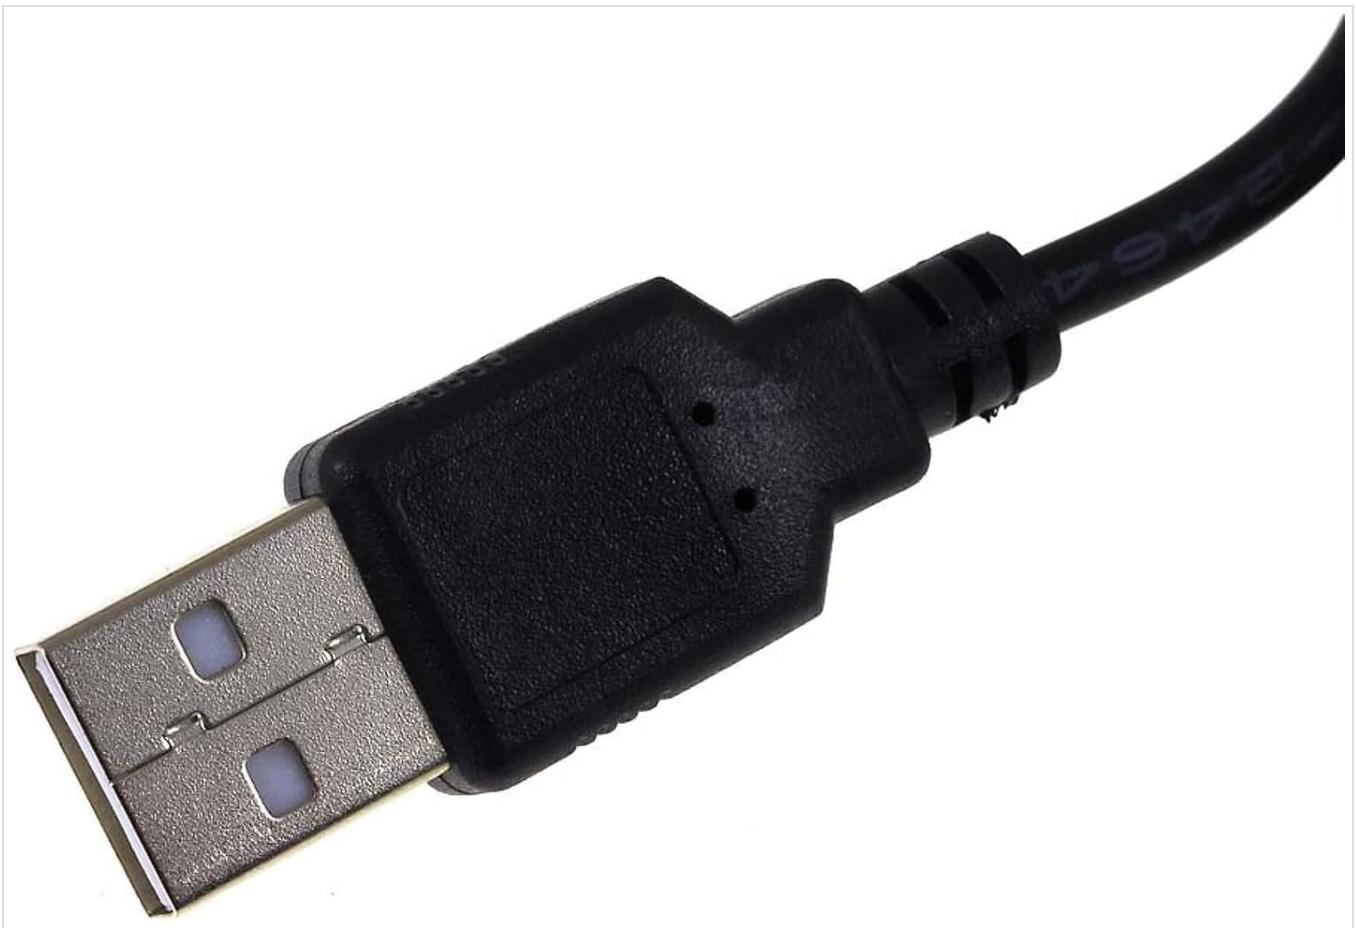

**Figure 3:** The USB-A connector of the adapter cable, used to connect to a power source.

## OPERATING INSTRUCTIONS

Once the adapter is correctly installed and connected to a power source, your GoPro Hero 3 will receive continuous power. This allows for extended recording times or use as a stationary camera without concerns about battery depletion.

- Ensure the power source provides sufficient current for the GoPro Hero 3.
- The adapter replaces the need for a battery during operation. If a battery is also present, the camera will typically draw power from the external source first.
- The adapter does not charge the GoPro Hero 3's internal battery. Its sole function is to provide continuous external power.

## CARE AND MAINTENANCE

- Keep the adapter clean and dry. Avoid exposure to moisture or extreme temperatures.
- Do not attempt to disassemble or modify the adapter. This may void any warranty and could cause damage to the device or your camera.
- Store the adapter in a safe place when not in use, away from direct sunlight and dust.
- Regularly check the cable for any signs of wear or damage. If damage is observed, discontinue use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
GoPro Hero 3 does not power on with adapter.	<ul style="list-style-type: none"> <li>Adapter not fully inserted.</li> <li>USB power source is off or faulty.</li> <li>USB cable is damaged.</li> <li>Insufficient power from USB source.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure the adapter is securely seated in the battery compartment.</li> <li>Verify the USB power source is active and functioning. Try a different USB port or adapter.</li> <li>Inspect the USB cable for damage.</li> <li>Use a USB power source that provides at least 1A output.</li> </ul>
Intermittent power supply.	<ul style="list-style-type: none"> <li>Loose connection.</li> <li>Faulty USB power source or cable.</li> </ul>	<ul style="list-style-type: none"> <li>Check all connections, ensuring they are firm.</li> <li>Test with a different USB power source.</li> </ul>

## SPECIFICATIONS

<b>Brand</b>	akku-net
<b>Model</b>	4.82.GOP.2.12
<b>Part Number</b>	4051363743291
<b>Compatibility</b>	GoPro Hero 3
<b>Connector Type</b>	USB-A (input)
<b>Item Weight</b>	50 Grams
<b>Package Dimensions</b>	6 x 5 x 4 cm
<b>Country of Origin</b>	China

## WARRANTY INFORMATION

Specific warranty details for this product are not provided in the product listing. For information regarding warranty coverage, please contact the manufacturer, akku-net, directly or refer to the purchase documentation.

## CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or general inquiries, please contact akku-net customer support. Contact information may be available on the manufacturer's official website or through your point of purchase.  
*Manufacturer: akku-net*

