

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY BN59-00865A Replacement Remote Control User Manual for Samsung TVs

VINABTY BN59-00865A

VINABTY BN59-00865A Replacement Remote Control User Manual

Model: BN59-00865A

INTRODUCTION

This manual provides detailed instructions for the VINABTY BN59-00865A replacement remote control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Samsung television.

PRODUCT OVERVIEW

The VINABTY BN59-00865A is a replacement remote control designed for specific Samsung TV models. It offers direct functionality without complex programming, replicating the features of the original remote.





This image displays the VINABTY BN59-00865A replacement remote control. It is black with grey and colored buttons. The top features the red POWER button and TV input button. Number keys 0-9 are centrally located. Navigation and function buttons are below, including MUTE, SOURCE, MENU, GUIDE, INFO, and colored function keys.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

The remote control is ready for use immediately after battery installation. No programming is required.

Compatibility

This remote control is compatible with the following Samsung TV models and remote models:

- **Remote Models:** BN59-00865A, BN59-00942A, AA59-00496A, AA59-00743A, AA59-00741A
- **TV Models:** LE32A336J1D/XCX, LE32A336J1D/XXH, LE32A336J1D/XXU, LE32A336J1N/XXC

Please verify your TV's model number, typically found on a sticker on the back of the television, to confirm compatibility.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Samsung TV. Ensure there are no obstructions between the remote and the TV.

Button Functions:

- **POWER (Red Button):** Turns the television on or off.
- **TV:** Selects the TV input source.
- **Number Buttons (0-9):** Directly selects channels.
- **PRE-CH:** Returns to the previously viewed channel.
- **MUTE:** Toggles sound muting on and off.
- **SOURCE:** Cycles through available input sources (e.g., HDMI, AV).
- **P (Channel Up/Down):** Changes the television channel up or down.
- **V (Volume Up/Down):** Adjusts the television's volume level.
- **MENU:** Accesses the television's main menu for settings and options.
- **CH LIST:** Displays the list of available channels.
- **TOOLS:** Provides quick access to common TV functions or settings.
- **INFO:** Displays information about the current program or input.
- **GUIDE:** Opens the Electronic Program Guide (EPG).
- **RETURN:** Navigates back to the previous screen or menu.
- **EXIT:** Closes the current menu or function and returns to live TV.
- **FAV.CH:** Accesses your list of favorite channels.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the TV model and the current on-screen content (e.g., teletext, interactive services).
- **TTX/MIX:** Activates or deactivates Teletext mode, or mixes Teletext with TV picture.
- **SUBT:** Toggles subtitles on or off.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range (approximately 10 meters/33 feet).
- **Some buttons not working:**
 - Verify that your TV model is listed as compatible. Some advanced functions may vary slightly depending on the specific TV model.
 - Clean the remote control, especially around the buttons, to ensure no debris is interfering with button presses.

SPECIFICATIONS

Model Number	BN59-00865A
Brand	VINABTY
Dimensions	19 x 4 x 1 cm
Weight	60 g
Connectivity Technology	Infrared
Controller Type	Push Button Control
Maximum Range	10 meters (33 feet)
Battery Type	Alkaline (AAA recommended)
Compatible Devices	Television

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For any warranty claims, technical support, or further assistance, please contact the seller directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question