

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ingenuity](#) /

› [Ingenuity Swing 'n Go 5-Speed Baby Swing - Foldable, Portable, 2 Plush Toys & Sounds, 0-9 Months 6-20 lbs \(Hugs & Hoots\)](#)

User Manual

Ingenuity 10247

Ingenuity Swing 'n Go 5-Speed Baby Swing User Manual

Model: 10247

Brand: Ingenuity

INTRODUCTION

The Ingenuity Swing 'n Go Portable Swing is designed for easy transport and provides the features of a full-sized swing in a compact frame. It offers automatic swinging motions, soothing sounds, and engaging toys to keep your baby comfortable and entertained.



Image: The Ingenuity Swing 'n Go Portable Swing in the 'Hugs and Hoots' design, featuring a grey and white patterned seat with plush owl and elephant toys hanging from the overhead bar.

SETUP AND ASSEMBLY

The compact frame of the Ingenuity Swing 'n Go is designed for easy setup and portability. Follow these steps for assembly and initial preparation:

- Unfold the swing frame by pressing the handle at the base and extending the legs until they lock into place.



Image: A woman demonstrating the unfolding process of the portable baby swing, showing how the frame extends to a stable position.

- Ensure the seat pad and headrest are securely attached. The headrest is removable for older babies.

machine washable
seat pad & headrest

removable
headrest



uses 4
D batteries

quiet motor
with timer

Image: A detailed view of the swing with labels pointing to its key features: machine washable seat pad and headrest, removable headrest, quiet motor with timer, and battery compartment for 4 D batteries.

- Install 4 D batteries (not included) into the battery compartment located at the base of the swing. Hybridrive technology helps extend battery life.
- Attach the overhead toy bar with the two plush toys (owl and elephant) by clicking it into the designated slots on the swing frame.



Image: A hand attaching the toy bar, which holds an owl and an elephant plush toy, to the top of the baby swing.

- Verify the 5-point harness is properly adjusted and secured before placing your baby in the swing.

OPERATING INSTRUCTIONS

The Ingenuity Swing 'n Go offers various settings to customize your baby's experience:

- **Power On/Off:** Use the power button on the control panel at the base of the swing to turn it on or off.
- **Swing Speeds:** Select from 5 different swing speeds using the control buttons. The swing speeds adapt to your growing baby with weight-sensing technology.



Image: A close-up of the swing's control panel, illustrating the buttons for adjusting swing speed, setting the timer, and controlling music and nature sounds.

- **Melodies and Nature Sounds:** Choose from 8 melodies and 3 nature sounds to soothe your baby. Adjust the volume as needed.
- **Timer Settings:** Set the swing to operate for 30, 45, or 60 minutes using the timer function. The swing features an auto-shutoff after 90 minutes.
- **Plush Toys:** The two plush hanging toys (owl and elephant) provide visual stimulation and encourage reaching and grasping.



Image: A baby lying comfortably in the swing, reaching up towards the hanging plush owl and elephant toys.

MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your Ingenuity Swing 'n Go:

- **Fabric Care:** Wash fabrics with cold water on a gentle cycle. Do not use bleach. The seat pad can be placed in a dryer on low heat, while the headrest should be air-dried flat.



Image: A laundry basket filled with clothes resting on a washing machine, representing the machine-washable components of the swing.

- **Toy and Frame Cleaning:** Wipe toys and the swing frame clean with a damp cloth and mild soap.
- **Removable Headrest:** The headrest is easily removable for cleaning or as your baby grows and no longer requires the extra support.



Image: A hand detaching the soft, white headrest from the swing's seat, demonstrating its removability.

TROUBLESHOOTING

If you encounter any issues with your Ingenuity Swing 'n Go, consider the following:

- **Swing Not Operating:** Ensure that 4 D batteries are correctly installed and are not depleted. Verify the power button is pressed and the desired swing speed is selected.
- **Missing Parts:** If any parts were missing upon unboxing, please refer to the official user manual PDF for a complete list of components and contact customer support.
- **Unstable Frame:** Confirm that all frame components are securely locked into place during assembly. The non-slip feet should be flat on the floor.

SPECIFICATIONS

Feature	Detail
Product Dimensions	23.5 x 22 x 23 inches (59.7 x 55.9 x 58.4 cm)
Assembled Dimensions	25.6" (H) x 21.5" (W) x 31.1" (D)
Item Model Number	10247
Batteries Required	4 D batteries (not included)
Battery Life	Up to 24 Hours (with Hybridrive technology)
Minimum Weight Recommendation	6 lbs (2.7 kg)
Maximum Weight Recommendation	20 lbs (9.1 kg)
Maximum Age Recommendation	9 months
Material Type	50% Metal, 35% Plastic, 15% Fabric
Is Portable	Yes

ingenuity™

**Weight Range:
6-20 lb / 3-9 kg**

**Max Age:
9 mos.**



Image: A visual representation of the swing's dimensions (25.6 in H, 21.5 in W, 31.1 in D) and recommended weight range (6-20 lbs / 3-9 kg) and max age (9 mos).

WARRANTY AND SUPPORT

For detailed warranty information, troubleshooting guides, and additional support, please refer to the official user manual or contact Ingenuity customer service.

- **Official User Manual (PDF):** [Download Here](#)
- **Visit the Ingenuity Store:** [Explore More Products](#)