

[manuals.plus](#) /

› [Magnavox](#) /

› [Magnavox Original Remote Control User Manual for MSB4560/F7 and MSB4550/F7 Soundbars](#)

**Magnavox WIR113001-FA01**

# Magnavox Original Remote Control User Manual

Models: WIR113001-FA01, MSB4560/F7, MSB4550/F7

## 1. OVERVIEW

This manual provides instructions for the Magnavox Original Factory Remote Control, model WIR113001-FA01. This remote is specifically designed for use with Magnavox Soundbar models MSB4560/F7 and MSB4550/F7. It requires no programming and functions immediately upon battery installation.

## 2. REMOTE CONTROL LAYOUT AND FUNCTIONS



**Figure 1:** Front view of the Magnavox Original Remote Control. This image displays the layout of all buttons, including power, input selection, volume, mute, Bluetooth pairing, and sound modes.

The remote control features dedicated buttons for various functions:

- **Power Button ( ):** Located at the top, this button turns the soundbar on or off.
- **INPUT Section:** These buttons select the audio source.
  - **AUX:** Selects the Auxiliary input.

- **LINE:** Selects the Line-in input.
- **OPTICAL:** Selects the Optical digital audio input.
- **PAIR:** Initiates Bluetooth pairing mode for connecting wireless devices.
- **Bluetooth ( ):** Selects the Bluetooth audio source.
- **Mute ( ):** Mutes or unmutes the soundbar audio.
- **VOL (+ / -):** Adjusts the soundbar's volume level. Press + to increase volume, - to decrease volume.
- **Sound Modes:** These buttons select preset audio equalization modes.
  - **MUSIC:** Optimizes audio for music playback.
  - **NEWS:** Enhances vocal clarity for news and spoken content.
  - **MOVIE:** Provides an immersive sound experience for movies.
  - **CLASSIC:** Offers a balanced audio profile.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover open.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

**Note:** This remote control is an original factory replacement and does not require programming. It will function with compatible Magnavox soundbars immediately after battery installation.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Power On/Off

Press the (Power) button to turn the soundbar on or off.

### 4.2 Selecting an Input Source

To select an audio input source, press the corresponding button in the INPUT section:

- Press **AUX** for Auxiliary input.
- Press **LINE** for Line-in input.
- Press **OPTICAL** for Optical digital audio input.
- Press the **Bluetooth** button to switch to Bluetooth mode.

### 4.3 Bluetooth Pairing

To pair a new Bluetooth device with your soundbar:

1. Ensure the soundbar is powered on and in Bluetooth mode (press the **Bluetooth** button).
2. Press and hold the **PAIR** button on the remote control until the soundbar's indicator light flashes, indicating pairing mode.
3. On your Bluetooth device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
4. Select the Magnavox soundbar from the list of devices to complete the pairing process.

## 4.4 Volume Control

Use the **VOL +** button to increase the volume and the **VOL -** button to decrease the volume.

## 4.5 Mute Function

Press the **Mute** button to temporarily silence the soundbar. Press it again to restore the audio.

## 4.6 Sound Modes

Select a sound mode to optimize audio for different content types:

- Press **MUSIC** for music playback.
- Press **NEWS** for enhanced vocal clarity.
- Press **MOVIE** for a cinematic audio experience.
- Press **CLASSIC** for a balanced sound profile.

# 5. MAINTENANCE

---

## 5.1 Battery Replacement

Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

## 5.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

## 5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

# 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and soundbar. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the soundbar.
Soundbar not turning on/off.	Soundbar power issue.	Ensure the soundbar is plugged into a working power outlet. Try manually powering on the soundbar if possible.
Bluetooth pairing issues.	Device not in pairing mode. Interference.	Ensure the soundbar is in Bluetooth pairing mode (refer to section 4.3). Move other Bluetooth devices away. Try restarting both the soundbar and the Bluetooth device.

# 7. SPECIFICATIONS

- **Model Number:** WIR113001-FA01
- **Compatible Soundbar Models:** MSB4560/F7, MSB4550/F7
- **Brand:** Magnavox
- **Manufacturer:** Funai
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 6 x 2 x 2 inches (approximately)
- **Item Weight:** 0.634 ounces (approximately)
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (dedicated to compatible soundbars)

## 8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Magnavox Original Remote Control or compatible soundbar, please refer to the documentation provided with your soundbar or visit the official Magnavox support website. Keep your purchase receipt for warranty claims.