

Borotto REAL49

Borotto REAL 49 Semi-Automatic Incubator User Manual

Model: REAL49 | Brand: Borotto

1. PRODUCT OVERVIEW

The Borotto REAL 49 Semi-Automatic Incubator is a professional, patented device designed for efficient egg incubation. It features a semi-automatic egg turning mechanism and external water refilling for optimal humidity control. This incubator is suitable for a wide variety of poultry and game bird eggs, including chicken, pheasant, quail, duck, goose, turkey, and more.



Figure 1.1: Front view of the Borotto REAL 49 Semi-Automatic Incubator, showing the digital display and egg viewing windows.

Key Features:

- **Patented Universal Egg Holders:** Accommodates 0-49 standard eggs or up to 196 small eggs (e.g., quail).
- **Semi-Automatic Egg Turning:** Features an external lever for manual egg tilting, requiring only a few seconds, 3-4 times daily. An automatic turning motor can be added later.
- **External Water Refilling:** Water trays can be refilled from outside the incubator, minimizing humidity loss.
- **Ventilated Thermal Insulation:** A silent turbine fan ensures uniform temperature and humidity distribution within the incubator, creating a warm air barrier.
- **Artificial Intelligence Control:** Sophisticated electronic temperature control maintains a constant microclimate with 0.1 °C precision, adapting to external environmental temperatures for optimal embryonic development.



Figure 1.2: Close-up view of the patented universal egg holders, demonstrating their capacity for various egg sizes, from large chicken eggs to small quail eggs.

2. SAFETY WARNINGS

Please read and understand all safety instructions before operating the Borotto REAL 49 incubator. Failure to follow these instructions may result in injury or damage to the device.

- Ensure the incubator is placed on a stable, level surface away from direct sunlight, drafts, and extreme temperature fluctuations.
- Do not operate the incubator with a damaged power cord or plug. If the cord is damaged, it must be replaced by the manufacturer or a qualified service agent.
- Keep the incubator out of reach of children and pets.
- Do not immerse the incubator in water or any other liquid. Clean only with a damp cloth as instructed in the Maintenance section.
- Always unplug the incubator from the power outlet before cleaning, performing maintenance, or when not in use.
- Use only the power source specified for this appliance.
- This appliance is intended for domestic use for incubating eggs. Do not use it for any other purpose.

3. SETUP

3.1 Unpacking and Inspection

1. Carefully remove all components from the packaging.
2. Verify that all parts are present: incubator unit, power cable, and instruction manual.
3. Inspect the incubator for any signs of damage during transit. If any damage is found, do not proceed with setup and contact customer support.

3.2 Placement

Place the incubator in a room with a stable ambient temperature, ideally between 20°C and 25°C (68°F and 77°F). Avoid locations with direct sunlight, drafts, or significant temperature fluctuations, as these can negatively impact incubation.

results.

3.3 Egg Placement

The Borotto REAL 49 features patented universal egg holders designed to accommodate various egg sizes. Place the eggs vertically in the designated slots, with the pointed end facing downwards. This vertical positioning is crucial for optimal embryonic development and higher hatching rates.



REEMPLISSAGE DE L'EAU DE L'EXTÉRIEUR



De cette façon, vous ne perdrez pas l'humidité créée à l'intérieur de la couveuse.



VENTILATION INTERNE



Système BREVETE qui assure une isolation thermique efficace dans la couveuse.

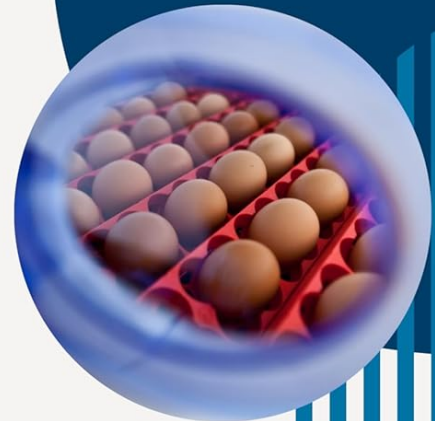


Figure 3.1: Internal view of the incubator demonstrating the correct vertical placement of eggs within the universal egg holders.

3.4 Initial Water Filling

Before starting the incubation process, fill the internal water trays. The incubator is equipped with convenient external filling spouts. Carefully pour distilled or demineralized water into these spouts until the trays are adequately filled. This external filling method helps maintain stable humidity levels by avoiding the need to open the incubator lid.



AVEC ARTIFICIAL INTELLIGENCE CONTROL

Un système **BREVETÉ** pour moduler la température en vue d'un développement embryonnaire adéquat.



Figure 3.2: Illustration of the external water filling port, allowing for convenient and humidity-preserving water replenishment.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Temperature Setting

1. Plug the power cable into a suitable electrical outlet. The digital display will illuminate, showing the current internal temperature.
2. The incubator's sophisticated electronic control system is pre-calibrated to maintain optimal incubation temperatures. Refer to the specific temperature requirements for the type of eggs you are incubating.
3. If adjustment is needed, consult the detailed temperature adjustment procedure in the full manual (not provided here, but implied by "sophisticated electronic control").

4.2 Semi-Automatic Egg Turning

The semi-automatic egg turning system requires manual operation of an external lever. This mechanism gently tilts the eggs, mimicking natural turning behavior essential for preventing the embryo from sticking to the shell and ensuring

proper development.

1. Locate the red lever on the side of the incubator.
2. To turn the eggs, gently push or pull the lever to tilt the egg trays.
3. Perform this action at least 3 to 4 times per day. Each turning cycle takes approximately 1 second.
4. Ensure the eggs are tilted in both directions over the course of the day.



Figure 4.1: The semi-automatic egg turning lever, which allows for quick and easy tilting of eggs from outside the incubator.

4.3 Humidity Management

Maintaining correct humidity is vital for successful hatching. The external water filling system allows for easy replenishment without disturbing the internal environment.

- Regularly check the water levels in the external spouts.
- Refill with distilled or demineralized water as needed, typically daily or every other day, depending on ambient humidity and egg type.
- Avoid overfilling, which can lead to excessive humidity.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning ensures optimal performance and hygiene, especially after each incubation cycle.

1. Always unplug the incubator before cleaning.
2. Remove all egg trays and internal components. Wash them with mild soap and warm water. Rinse thoroughly and allow to air dry completely.
3. Wipe the interior and exterior surfaces of the incubator with a damp cloth. For stubborn stains, a mild disinfectant suitable for plastics can be used, followed by wiping with a clean, damp cloth.
4. Ensure all parts are completely dry before reassembling and storing or reusing the incubator.

5.2 Storage

When not in use, store the incubator in a clean, dry place, away from direct sunlight and extreme temperatures. It is recommended to store it in its original packaging to protect it from dust and damage.

6. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Borotto REAL 49 incubator. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Temperature fluctuations	Unstable room temperature, incubator placed in drafty area, dirty fan.	Move incubator to a stable environment. Ensure fan is clean and unobstructed.
Low humidity	Insufficient water in trays, incubator lid not properly sealed, dry ambient air.	Refill water trays regularly. Ensure lid is securely closed. Consider increasing room humidity if ambient air is very dry.
Eggs not turning	Lever not operated, mechanical obstruction.	Ensure the turning lever is operated 3-4 times daily. Check for any debris obstructing the turning mechanism.
Incubator not powering on	Power cable not connected, power outlet issue, internal fault.	Check power cable connection. Test outlet with another appliance. If problem persists, contact customer support.

7. SPECIFICATIONS

- **Model Number:** REAL49
- **Capacity:** 49 standard eggs or 196 small eggs (e.g., quail)
- **Dimensions (L x W x H):** 58 x 52 x 25 cm (22.8 x 20.5 x 9.8 inches)
- **Weight:** 5 kg (11 lbs)
- **Power Source:** Electric cable
- **Temperature Control:** Artificial Intelligence controlled, 0.1 °C precision
- **Egg Turning:** Semi-automatic (lever operated)
- **Humidity Control:** External water refilling system
- **Ventilation:** Internal silent turbine fan with thermal insulation
- **Manufacturer:** Incubatrici Borotto di Borotto Andrea
- **Country of Origin:** Italy

8. WARRANTY AND SUPPORT


Borotto products are manufactured to high-quality standards. For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Borotto website. Keep your proof of purchase for warranty claims.

Manufacturer: Incubatrici Borotto di Borotto Andrea

For further assistance, please contact Borotto customer service.



Related Documents

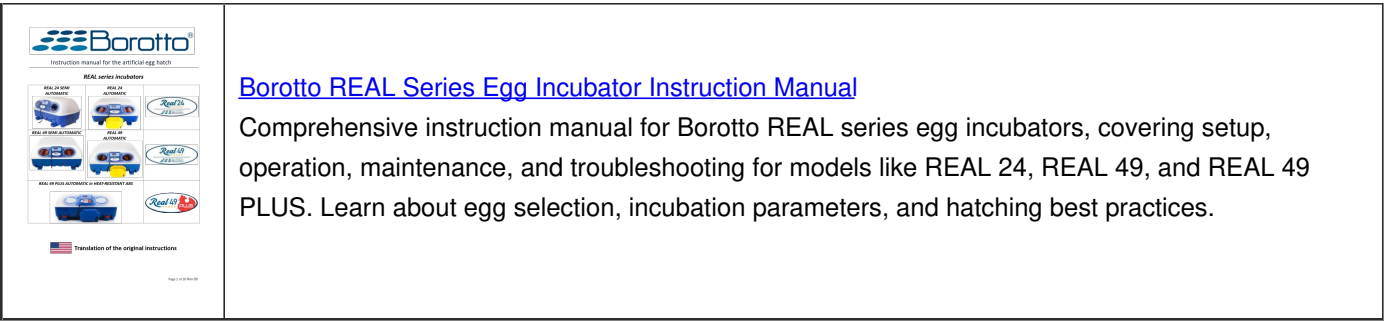


[Borotto REAL Series Egg Incubator Instruction Manual](#)

Comprehensive instruction manual for Borotto REAL series egg incubators, covering setup, operation, maintenance, and troubleshooting for models like REAL 24, REAL 49, and REAL 49 PLUS. Learn about egg selection, incubation parameters, and hatching best practices.

Documents - Borotto – REAL49


[\[pdf\]](#) User Manual

libretto istruzioni incubatrice real docId 0F7DFD67F105036F3E076C2E2C2F052F Ut01 Borotto Download Here REAL 49 Expert Incubator Precision Without Compromise instruction manual incubator real24 borotto english 2025 01 Instruction for artificial egg incubation NOTE The PLUS version is made from a specific highly resistant thermo insulating ABS technopolymer which gives the machine solid and robust srsltid AfmBOopjb9zayxlatHktbcMbhc BSJkRHe3zdWNG23XazA0zX6KEOz AfmBOooMivCSKbsgxqfdyHiJgjAiWHXP7lq9vqaBztoBc413aqlzH YQ ||| ||| Instruction manual for artificial egg incubation REAL series incubators REAL 24 SEMI-AUTOMATIC REAL 24 AUTOMATIC REAL 49 SEMI-AUTOMATIC REAL 49 AUTOMATIC REAL 49 PLUS AUTOMATIC ABS THERMOISOLATING Copyright - BOROTTO Page 1 - Rev. 11 Dear C ||| Instruction manual for artificial egg incubation REAL series incubators REAL 24 SEMI-AUTOMATIC REAL 24 AUTOMATIC REAL 49 SEMI-AUTOMATIC REAL 49 AUTOMATIC REAL 49 PLUS AUTOMATIC ABS THERMOISOLATING Copyright - BOROTTO Page 1 - Rev. 11 Dear C Instruction manual for artificial egg incubation REAL series incubators REAL 24 SEMI-AUTOMATIC REA ... at Range Moisture in the incubator Dimensions and weight of the Real24 Dimensions and weight of the **Real49** Capacity of the Real 49 Capacity of the Real 24 REAL Series Hen, pheasant, turkey, guinea f... lang:en score:41 filesize: 1.41 M page_count: 20 document date: 2024-04-16

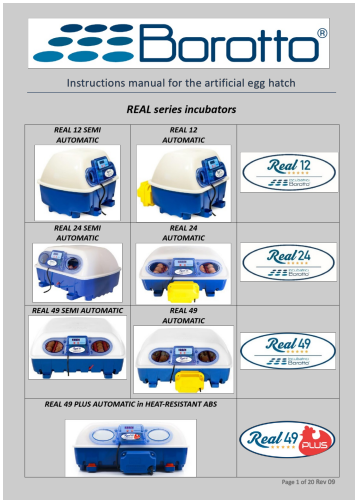

[\[pdf\]](#) User Manual Instructions Label

Ut01 REAL Instruction manual 11173528346487765049 cdn shopify s files 1 1967 1775 ||| Instructions manual for the artificial egg hatch REAL 12 SEMI AUTOMATIC REAL series incubators REA ... incubator Dimensions and weight of Real12 Dimensions and weight of Real24 Dimensions and weight of **Real49** Capacity of Real 49 45-55 with water in one tray 60-65 with water in both trays 32x36x26 c... lang:en score:41 filesize: 1.96 M page_count: 20 document date: 2017-06-09

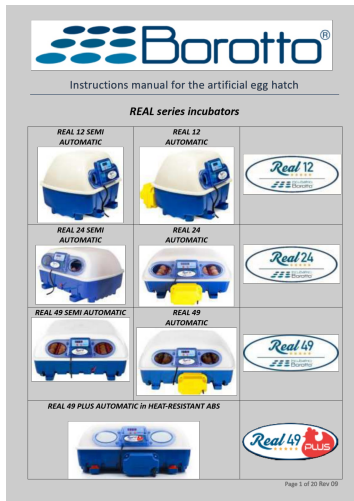


[pdf] User Manual Instructions Label

Ut01 Instructions manual for the artificial egg hatch Page 8 Rev 09 of 20 6 General information The REAL series incubator has been designed hatching chicks of hen pheasant guinea fowl quail grey partridge man BorottoREALInstructions 1 animalcare horizont Documents Instruction manuals supplier ||| Instructions manual for the artificial egg hatch REAL 12 SEMI AUTOMATIC REAL series incubators REA ... incubator Dimensions and weight of Real12 Dimensions and weight of Real24 Dimensions and weight of **Real49** Capacity of Real 49 45-55 with water in one tray 60-65 with water in both trays 32x36x26 c... lang:en score:39 filesize: 1.86 M page_count: 20 document date: 2024-03-25




[pdf] User Manual

Ut01 Download Bedienungsanleitung für das künstliche Ausbrüten von Eiern Brutmaschinen der REAL Serie Borotto Brutapparat horizont Animal Care man borto real animalcare Documents Instruction manuals supplier ||| Bedienungsanleitung fr das knstliche Ausbrten von Eiern Brutmaschinen der REAL Serie REAL 12 HALBAUT ... e Abmessungen und Gewicht der Real12 Abmessungen und Gewicht der Real24 Abmessungen und Gewicht der **Real49** Kapazitt der Real 49 Kapazitt der Real 24 Kapazitt der Real 12 REAL Serie Hhner, Fasane, Pu... lang:de score:39 filesize: 1.95 M page_count: 20 document date: 2018-01-29

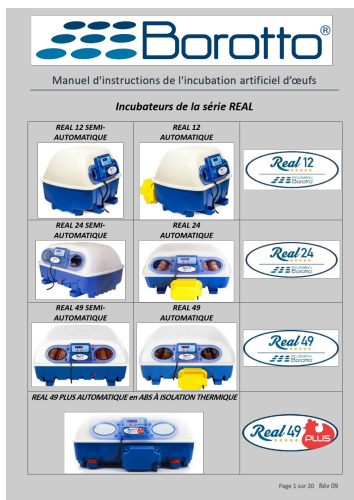

[pdf] Instructions

Ut01 Manuel d instructions de l incubation artificiel œufs Incubateurs la série REAL 444415 dinstruction file borotto ||| Manuel d instructions de l incubation artificiel d oeufs Incubateurs de la srie REAL REAL 12 SEMIA ... Poids : 2,92 Kg Dimensions et poids du Real24 50x38x26 cm Poids : 3,85 Kg Dimensions et poids du **Real49** 58x57x25 cm Poids : 5,50 Kg - 6,8 Kg pour la REAL 49 PLUS Capacit du Real 49 49 oeufs da... lang:fr score:35 filesize: 2.19 M page_count: 20 document date: 2017-06-14

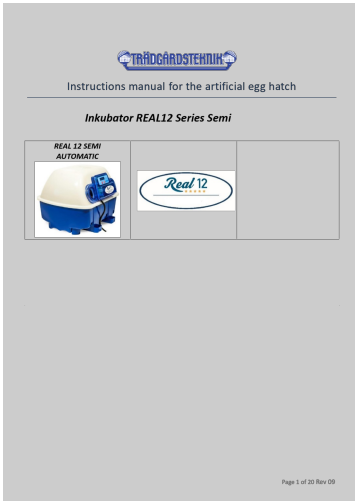


[pdf] User Manual Instructions Label

Ut01 Instructions manual for the artificial egg hatch Inkubator REAL12 Series Semi Automatic REAL 12 semi automatic tradgardsteknik se shop upload resources Inkubatorer |||

Instructions manual for the artificial egg hatch Inkubator REAL12 Series Semi Automatic REAL 12 SEMI ... incubator Dimensions and weight of Real12 Dimensions and weight of Real24 Dimensions and weight of **Real49** Capacity of Real 49 45-55 with water in one tray 60-65 with water in both trays 32x36x26 c...

lang:en score:32 filesize: 2.12 M page_count: 20 document date: 2017-11-18

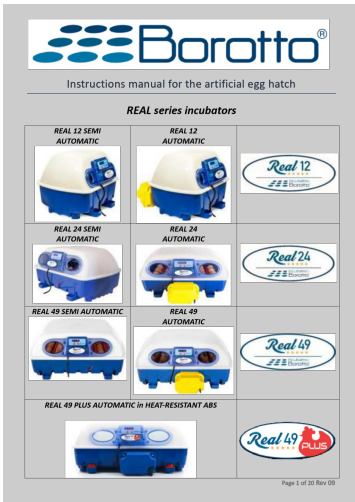


[pdf] User Manual Instructions Label

Ut01 borotto real incubator manual fahrenheit Premier1Supplies Do not touch hot surfaces there is a resistor in the appliance peacock rock partridge pigeon Virginia quail exotic birds and of prey premier1supplies img product

Instructions manual for the artificial egg hatch REAL 12 SEMI AUTOMATIC REAL series incubators REA ... incubator Dimensions and weight of Real12 Dimensions and weight of Real24 Dimensions and weight of **Real49** Capacity of Real 49 Microcomputer with PID management. With tolerance of +/-0.1F Temperature...

lang:en score:30 filesize: 2.39 M page_count: 20 document date: 2021-01-27

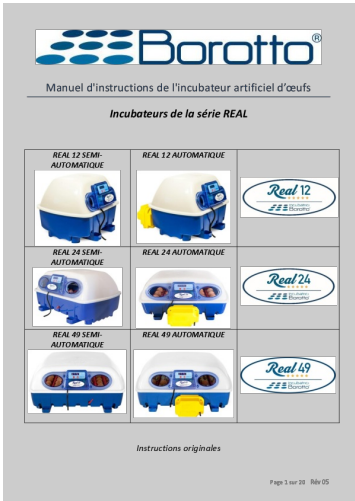


[pdf] Instructions Dimension Guide

Ut01 Manuel d instructions de l incubateur artificiel œufs ManoManoDimensions et poids du Real49 58x57x25 cm Poids 5 50 Kg Capacité Real 49 dans le dispositif à alvéoles ou 196 petits type caille10735358cdn manomano files 10735358 |||

Manuel d instructions de l incubateur artificiel d oeufs Incubateurs de la srie REAL REAL 12 SEMIAU ... Poids : 2,92 Kg Dimensions et poids du Real24 50x38x26 cm Poids : 3,85 Kg Dimensions et poids du **Real49** 58x57x25 cm Poids : 5,50 Kg Capacit du Real 49 49 oeufs dans le dispositif alvoles ou 196...

lang:fr score:30 filesize: 1.7 M page_count: 20 document date: 2016-12-15

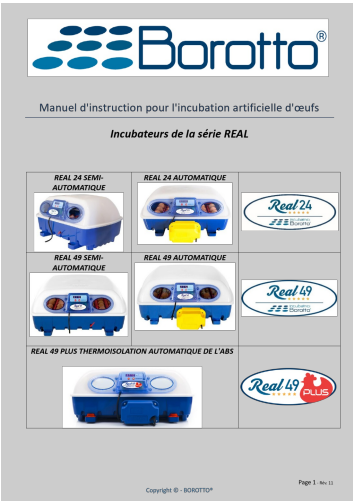

[\[pdf\]](#) User Manual

libretto istruzioni REAL FR manual real francese FRANCESE Ut01 Borotto Manuel d instruction pour l incubation artificielle œufs Donc si la couveuse n est pas désinfectée nous aurons des morts embryons pendant et de poussins éclosion ! C EST GARANTI srsltid AfmBOooUigRg DzGWvFVjTWZV sttePreDpqelyscuZC3gJignpkxMCE fermedebeaumont img cms categories borotto œufsManuel œufsDonc !NOTE La version 49 PLUS fabriquée à partir un technopolymère ABS thermo isolant spécifique très résistant qui confère machine une REAL

sttePreDpqelyscuZC3gJignpkxMCEv1fermedebeaumont

sttePreDpqelyscuZC3gJignpkxMCEfermedebeaumont AfmBOoqUsikFBKEKGs

9c6WYk9iUyY2TzWWaSqAKs4FR4o6imycL5js une Couveuse en semi automatique elle équipée système eau dans vous pouvez utiliser l REAL

9c6WYk9iUyY2TzWWaSqAKs4FR4o6imycL5jsfermedebeaumont

AfmBOoo7haSUdLIA1iC26ID587xw8hzVlvChwGF5Vq0m56oBsaMCYPir ||| ||| Manuel d instruction pour l incubation artificielle d oeufs Incubateurs de la srie REAL REAL 24 SEMIAUTOMATIQUE REAL 24 AUTOMATIQUE REAL 49 SEMIAUTOMATIQUE REAL 49 AUTOMATIQUE REAL 49 PLUS THERMOISOLATION AUTOMATIQUE DE L ABS Copyright - BO ||| Manuel d instruction pour l incubation artificielle d oeufs Incubateurs de la srie REAL REAL 24 SEMIAUTOMATIQUE REAL 24 AUTOMATIQUE REAL 49 SEMIAUTOMATIQUE REAL 49 AUTOMATIQUE REAL 49 PLUS THERMOISOLATION AUTOMATIQUE DE L ABS Copyright - BO

Manuel d instruction pour l incubation artificielle d oeufs Incubateurs de la srie REAL REAL 24 SEM ... de thermostat Gamme Humidit dans l incubateur Dimensions et poids du Real24 Dimensions et poids du **Real49** Capacit couveuse Real 49 Capacit couveuse Real 24 Srie REAL Poule, faisn, dinde, pintade, ...

lang:fr score:30 filesize: 1.43 M page_count: 20 document date: 2024-05-29



[\[pdf\]](#) User Manual

libretto istruzioni incubatrice real docId 2805D2960B5B6033BBB9ABED7141ED63 Ut01 Borotto manual instrucciones incubadora 24 49 La de la serie REAL está diseñada para incubar polluelos gallina faisán pintada codorniz perdiz pardilla palmípedos ánade pato borotto espanol srsltid AfmBOoqmS FqOYqPMTWz8ZIKizj1c4MutZz4QDxplOcJdySp8IoclpfN 2025 02 |||

Manual de instrucciones para la incubacin artificial de huevos Incubadoras de la serie REAL REAL 24 ... po de termostato Gama Humedad en la incubadora Dimensiones y peso del Real24 Dimensiones y peso del **Real49** Capacidad del Real 49 Capacidad del Real 24 Serie REAL Gallina, faisn, pavo, pintada, codorn...

lang:es score:29 filesize: 1.33 M page_count: 20 document date: 2025-02-04




[pdf] User Manual

libretto istruzioni REAL SP MANUALE DI INCUBAZIONE SPAGNOLO Ut01 Borotto Manual de instrucciones para la incubación artificial huevos eBayBOROTTO® es reconocida como una las empresas líderes en el mundo 49 colocados dispositivo panel o 196 pequeños como 03490a11 4a72 46ae 8584 c9d0dc041391docs ebay document 03490a11 c9d0dc041391 |||

Manual de instrucciones para la incubacin artificial de huevos Incubadoras de la serie REAL REAL 24 ... po de termostato Gama Humedad en la incubadora Dimensiones y peso del Real24 Dimensiones y peso del **Real49** Capacidad del Real 49 Capacidad del Real 24 Serie REAL Gallina, faisn, pavo, pintada, codor...

lang:es score:29 filesize: 1.44 M page_count: 20 document date: 2024-01-17

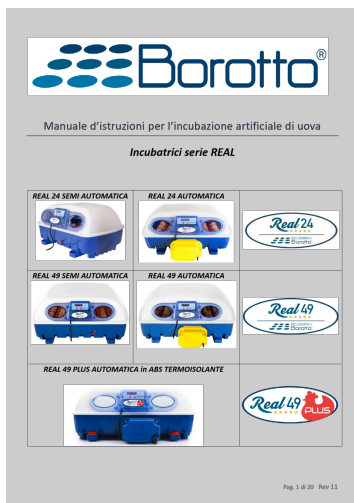

[pdf]

libretto istruzioni incubatrice real Ut01 Borotto Manuale d per l incubazione artificiale di uova 1 janv 2023 — Avvertenze un utilizzo in sicurezza All atto usare apparecchi elettrodomestici occorre sempre seguire alcune basilari precau 20 pages 094999 Libretto file borotto |||

Manuale d istruzioni per l incubazione artificiale di uova Incubatrici serie REAL REAL 24 SEMI AUTOM ... one Termostato Range Umidit nell incubatrice Dimensioni e peso della Real24 Dimensioni e peso della **Real49** Capit della Real 49 Capit della Real 24 Serie REAL Gallina, fagiano, tacchino, faraona, ...

lang:it score:28 filesize: 1.32 M page_count: 20 document date: 2023-03-09

[pdf]



libretto istruzioni incubatrice real Ut01 Borotto Istruzioni per l'uso Borotto Real 49 Plus Incubatrice Uova Automatica Professionale Brevettata o 196 Piccole con Girauova Automatico Controllo Temperatura e Sistema Biomaster® Antibatterico Made in Italy Amazon it Commercio Industria Scienza A1JtEJt2ALLm media amazon images I A1JtEJt2ALL ref dp product quick view Manuale d incubazione artificiale di uova eBay Istruzioni uso Questo sistema BREVETTATO riconosciuto sulla gestione del movimento aria all interno delle incubatrici BOROTTO è basato espressamente variabilità nel Borotto Scienza c1552728 4369 4023 90ca ea8c63c38473docs ebay document c1552728 ea8c63c38473m

ea8c63c38473a1944928 9c3f 4d50 a5a7 5c2784037948docs viewdocs a1944928 5c2784037948 ||| |||

Manuale d istruzioni per l incubazione artificiale di uova Incubatrici serie REAL REAL 24 SEMI AUTOMATICA REAL 24 AUTOMATICA REAL 49 SEMI AUTOMATICA REAL 49 AUTOMATICA REAL 49 PLUS AUTOMATICA in ABS TERMOISOLANTE Copyright - BOROTTO Pagina ||| Manuale d istruzioni per l incubazione artificiale di uova Incubatrici serie REAL REAL 24 SEMI AUTOMATICA REAL 24 AUTOMATICA REAL 49 SEMI AUTOMATICA REAL 49 AUTOMATICA REAL 49 PLUS AUTOMATICA in ABS TERMOISOLANTE Copyright - BOROTTO Pagina

Manuale d istruzioni per l incubazione artificiale di uova Incubatrici serie REAL REAL 24 SEMI AUTOM ... di Termostato Range Umidit nell incubatrice Dimensioni e peso della Real24 Dimensioni e peso della **Real49** Capacit della Real 49 Capacit della Real 24 Serie REAL Gallina, fagiano, tacchino, faraona,...

lang:it score:28 filesize: 1.32 M page_count: 20 document date: 2024-02-28

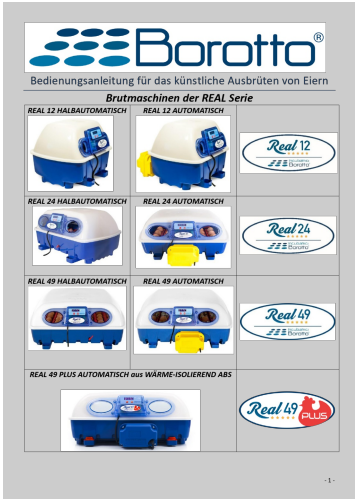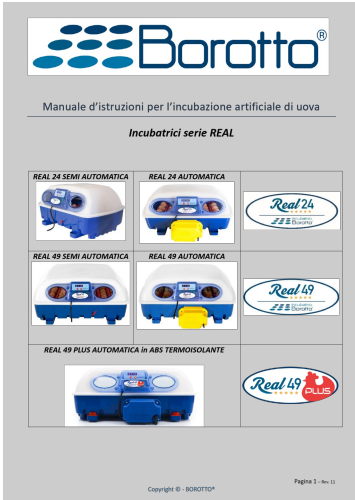

[pdf] User Manual

Ut01 10370005 Index of manuals expando |||

Bedienungsanleitung fr das knstliche Ausbrten von Eiern Brutmaschinen der REAL Serie REAL 12 HALBAUT ... e Abmessungen und Gewicht der Real12 Abmessungen und Gewicht der Real24 Abmessungen und Gewicht der **Real49** Kapazitt der Real 49 Kapazitt der Real 24 Kapazitt der Real 12 REAL Serie Hhner, Fasane, Pu...

lang:de score:27 filesize: 8.37 M page_count: 160 document date: 2022-02-16



[pdf] User Manual

libretto istruzioni REAL DE MANUALE DI INCUBAZIONE IN TEDESCO tedesco real Ut01 Borotto Inkubatoren der Serie REALBOROTTO® erklärt dass Sie in diesem Handbuch alle Informationen und Ratschläge finden die benötigen um den Inkubator sicher effizient zu nutzen A1zgJAfmluLm media amazon images I A1zgJAfmluL ref dp product quick view |||

Gebrauchsanweisung fr die knstliche Bebrtung von Eiern Inkubatoren der Serie REAL REAL 24 HALBAUTOMA ... max. 40C Feuchtigkeit im Inkubator Abmessungen und Gewicht des Real24 Abmessungen und Gewicht des **Real49** Kapazitt des Real 49 Kapazitt des Real 24 45-50 mit Wasser in einer Schale 60-65 mit Wasse...


lang:de score:26 filesize: 1.52 M page_count: 20 document date: 2024-04-03



[pdf] User Manual

Ut01 10370002 Index of manuals expando |||

Bedienungsanleitung fr das knstliche Ausbrten von Eiern Brutmaschinen der REAL Serie REAL 12 HALBAUT ... e Abmessungen und Gewicht der Real12 Abmessungen und Gewicht der Real24 Abmessungen und Gewicht der **Real49** Kapazitt der Real 49 Kapazitt der Real 24 Kapazitt der Real 12 REAL Serie Hhner, Fasane, Pu...
lang:de score:26 filesize: 12.85 M page_count: 256 document date: 2022-02-16

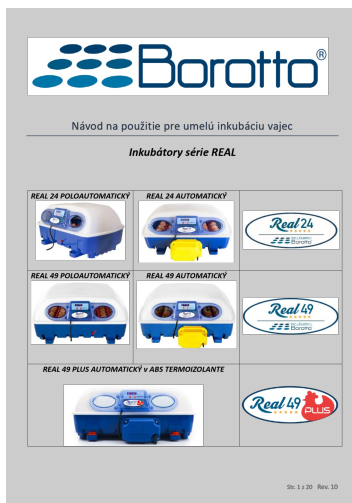

[pdf]

Ut01 Liaheň na vajcia BOROTTO REAL 24 OD SUSEDA liahneme sk user documents upload NÁVODY LIAHNE |||

Nvod na použitie pre umel inkubciu vajec Inkubtory srie REAL REAL 24 POLOAUTOMATICK REAL 24 AUTOMATI ... tranie Termostat Rozsah Vlhkos v inkubtore Rozmery a hmotnos verzie Real24 Rozmery a hmotnos verzie **Real49** Kapacita verzie Real 49 Kapacita verzie Real 24 Sria REAL spiečka, bazant, perlicka, prepel...
lang:sk score:23 filesize: 1.31 M page_count: 20 document date: 2019-12-02



[pdf] User Manual

Ut01 Brutapparat Borotto digital für 24 Eier 601965 4D833C09 4024 462D A663 A954723105A9 westfalia versand at media 2a aa 23 1695230967 |||


Bedienungsanleitung fr das knstliche Ausbrten von Eiern Brutmaschinen der REAL Serie REAL 12 HALBAUT ... e Abmessungen und Gewicht der Real12 Abmessungen und Gewicht der Real24 Abmessungen und Gewicht der **Real49** Kapazitt der Real 49 Kapazitt der Real 24 Kapazitt der Real 12 REAL Serie Hhner, Fasane, Pu...
lang:de score:21 filesize: 1.95 M page_count: 20 document date: 2018-01-29



[pdf]

Ut01 Istruzioni per l'uso Borotto REAL 24 Automatica Incubatrice uova automatica Professionale
Brevettata con Girauova Automatico Uova o 96 Piccole Amazon.it Commercio Industria e Scienza
A1iATBikyoL m media amazon images I |||


Manuale d'istruzioni per l'incubazione artificiale di uova Incubatrici serie REAL REAL
24 SEMI AUTOM ... one Termostato Range Umidit nell incubatrice Dimensioni e peso
della Real24 Dimensioni e peso della **Real49** Capacit della Real 49 Capacit della
Real 24 Serie REAL gallina, fagiano, tacchino, faraona, ...
lang:it score:20 filesize: 1.31 M page_count: 20 document date: 2020-09-14

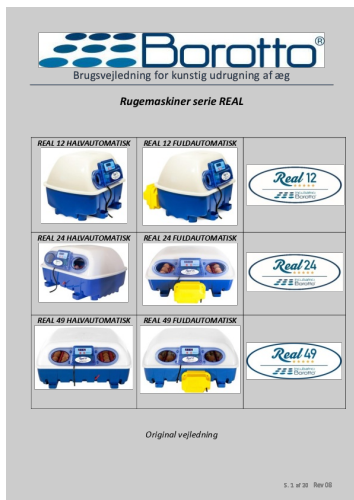

[pdf]

Ut01 anske brugervejledning her Real 24 rugemaskine Fuldautomatisk til høns Rosenbud dansk
brugsanvisning v 1740498679 cdn shopify s files 1 0515 1490 0653 |||

Brugsvejledning for kunstig udrugning af g Rugemaskiner serie REAL REAL 12
HALVAUTOMATISK REAL 12 FU ... begge kar 32x36x26 cm Vgt: 2,92 Kg MI og vgt
for Real24 50x38x26 cm Vgt: 3,85 Kg MI og vgt for **Real49** 58x57x25 cm Vgt: 5,50 Kg
Kapacitet for **Real49** Kapacitet for Real24 49 g placeret i holder...
lang:da score:18 filesize: 1.32 M page_count: 20 document date: 2017-04-24

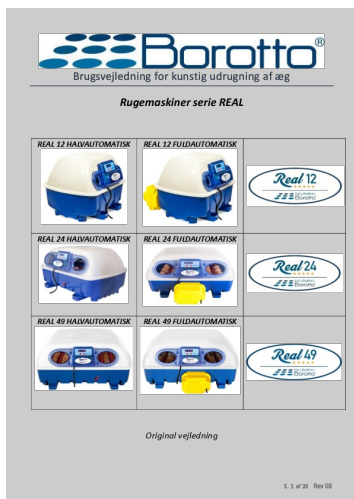

[pdf]

Ut01 Rugemaskiner serie REAL AmericaEt praktisk system som betyder at rugemaskinen ikke længere
skal åbnes BEMÆRK Rugemaskinen kan også udstyres med den automatiske luftfugter SIRIO der fås
på Real Ruger Dansk Ny 2017 1america thisted dk upload dir shop Real 1 |||

Brugsvejledning for kunstig udrugning af g Rugemaskiner serie REAL REAL 12
HALVAUTOMATISK REAL 12 FU ... begge kar 32x36x26 cm Vgt: 2,92 Kg MI og vgt
for Real24 50x38x26 cm Vgt: 3,85 Kg MI og vgt for **Real49** 58x57x25 cm Vgt: 5,50 Kg
Kapacitet for **Real49** Kapacitet for Real24 49 g placeret i holder...
lang:da score:18 filesize: 1.32 M page_count: 20 document date: 2017-04-24



[\[pdf\]](#) User Manual

Bedienungsanleitung für das künstliche Ausbrüten von Eiern Brutmaschinen der REAL Serie REAL 12 HALBAUT ... e Abmessungen und Gewicht der Real12 Abmessungen und Gewicht der Real24 Abmessungen und Gewicht der **Real49** Kapazität der Real 49 Kapazität der Real 24 Kapazität der Real 12 REAL Serie Hühner, Fasane, Pu...
 lang:de score:15 filesize: 8.37 M page_count: 0 document date: 0000-00-00



[\[pdf\]](#) User Manual

Bedienungsanleitung für das künstliche Ausbrüten von Eiern Brutmaschinen der REAL Serie REAL 12 HALBAUT ... e Abmessungen und Gewicht der Real12 Abmessungen und Gewicht der Real24 Abmessungen und Gewicht der **Real49** Kapazität der Real 49 Kapazität der Real 24 Kapazität der Real 12 REAL Serie Hühner, Fasane, Pu...
 lang:de score:15 filesize: 12.85 M page_count: 0 document date: 0000-00-00




[\[pdf\]](#) User Manual Instructions Label

Ut01 REAL 24 automatic tradgardsteknik se shop upload resources Inkubatorer REAL12 |||

Instructions manual for the artificial egg hatch Incubators Real 24 Series Automatic
REAL 24 AUTOMAT ... incubator Dimensions and weight of Real12 Dimensions and
weight of Real24 Dimensions and weight of **Real49** Capacity of Real 49 45-55 with
water in one tray 60-65 with water in both trays 32x36x26 c...

lang:en **score:13** filesize: 2.15 M page_count: 20 document date: 2017-11-18

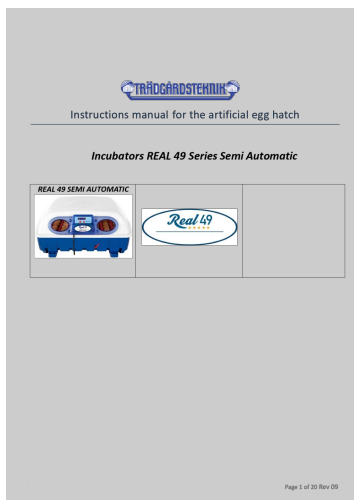

[\[pdf\]](#) User Manual Instructions Label

Ut01 REAL 49 semi automatic tradgardsteknik se shop upload resources Inkubatorer REAL12 |||

Instructions manual for the artificial egg hatch Incubators REAL 49 Series Semi
Automatic REAL 49 SE ... incubator Dimensions and weight of Real12 Dimensions
and weight of Real24 Dimensions and weight of **Real49** Capacity of Real 49 45-55
with water in one tray 60-65 with water in both trays 32x36x26 c...

lang:en **score:13** filesize: 2.13 M page_count: 20 document date: 2017-11-18